



## ***User Guide***

***i365 by Motorola®***

***[www.nextel.com](http://www.nextel.com)***

© 2008 Sprint. Sprint and the NEXTEL name and logo are trademarks of Sprint. Other marks are the property of their respective owners.

6/27/08



Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196

[www.hellomoto.com](http://www.hellomoto.com)

**Note:** Do not ship your phone to the above address. If you need to return your phone for repairs, replacement or warranty service, please contact the Motorola Customer Support Center at:

1-800-453-0920 (United States)

1-877-483-2840 (TTY/TDD United States for hearing impaired)

Product Support:

[www.motorola.com/support](http://www.motorola.com/support)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Manual number: NNTN7496A

Software Versions: A8E.00.00

USR Versions: U8EB.01.02

CSD Versions: C01.06.13

CP Version: 6D.05.05



## *FCC Notice to Users*

**The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.**

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



# Table of Contents

---

<i>Introduction</i> .....	<i>i</i>
<i>Your Phone's Menu</i> .....	<i>ii</i>
<i>Use and Care</i> .....	<i>vi</i>
<b>Section 1: Getting Started</b> .....	<b>1</b>
<b>1A. Setting Up Service</b> .....	<b>2</b>
Setting Up Your Phone .....	2
Activating Your Phone .....	3
Setting Up Your Voicemail .....	3
Enabling Security .....	4
Account Passwords .....	4
Getting Help .....	5
<b>1B. Phone Basics</b> .....	<b>6</b>
Your Phone .....	6
Getting Started With Your Phone .....	8
Features of Your Phone .....	15
Navigating Through Phone Menus and Options .....	17
Displaying Your Phone Number and Direct Connect Number .....	19

Entering Text .....	20
Accessories .....	24
<b>Section 2: Using Your Phone</b> .....	<b>27</b>
<b>2A. Making and Answering Calls</b> .....	<b>28</b>
Types of Calls .....	28
Making and Answering Phone Calls .....	29
Making and Answering Direct Connect Calls ..	36
Making and Answering Group Connect Calls ..	39
Nextel Direct Send .....	44
Making and Answering Talkgroup Calls .....	51
Making and Answering Direct Talk Calls .....	53
Call Alerts .....	57
<b>2B. Settings</b> .....	<b>60</b>
Using the Settings Menu .....	60
Sound Settings .....	65
Display Settings .....	70
Messaging Settings .....	72
Temporarily Turning Off Transmissions (Airplane Mode) .....	74
Setting One Touch Direct Connect .....	74
Headset Options .....	76
Profiles .....	76



Phone Setup Options .....	81
<b>2C. Security .....</b>	<b>85</b>
SIM Card Security .....	85
Your Phone's Lock Feature .....	87
Your Phone's Keypad Lock .....	87
Resetting Your Phone .....	88
GPS Privacy Options .....	89
Java Applications & GPS Security .....	90
<b>2D. Recent Calls .....</b>	<b>93</b>
About Recent Calls .....	93
Viewing Recent Calls .....	96
Recent Call Options .....	96
Making a Call From Recent Calls .....	97
Saving Items From Recent Calls .....	97
Deleting Items From Recent Calls .....	98
Prepending a Phone Number From Recent Calls .....	98
<b>2E. Contacts .....</b>	<b>99</b>
About Contacts .....	99
Creating Contact Entries .....	100
Viewing Contacts .....	103
Adding a Number or Address to an Entry ...	104

Editing Entries .....	105
Deleting Entries .....	105
Assigning Speed Dial Numbers .....	106
Selecting a Ringer Type for an Entry .....	107
Checking Capacity .....	107
Dialing Nextel Customer Service .....	107
<b>2F. Tools .....</b>	<b>108</b>
Datebook .....	108
Java Applications .....	116
Digital Rights Management (DRM) .....	120
GPS Enabled .....	122
Memo Feature .....	129
Voice Records .....	131
My Pictures .....	133
Call Timers .....	135
<b>2G. Bluetooth .....</b>	<b>136</b>
Turning Bluetooth On and Off .....	136
Using the Bluetooth Menu .....	137
Pairing Bluetooth Devices .....	138
Transferring Items Via Bluetooth .....	144



**Section 3: Service Features . . . . . 147**

**3A. Service Features: The Basics . . . . . 148**

Message Center . . . . . 148

Receiving Messages . . . . . 149

Voicemail . . . . . 150

Multimedia Messages . . . . . 158

Text Messaging (SMS) . . . . . 182

Caller ID Blocking . . . . . 183

Responding to Call Waiting . . . . . 183

Putting a Call on Hold and Making a  
Second Call . . . . . 184

Making a Three-Way Call . . . . . 185

Call Forwarding . . . . . 185

Making International Calls . . . . . 188

Special Dialing Codes . . . . . 188

Nextel Phone Services . . . . . 189

**3B. Data Services . . . . . 191**

Wireless Data Services . . . . . 191

Downloading Content . . . . . 194

Using Your Phone as a Modem . . . . . 194

**Section 4: Safety and Warranty**

**Information . . . . . 199**

**4A. Important Safety Information . . . . . 200**

General Precautions . . . . . 200

Maintaining Safe Use of and Access to  
Your Phone . . . . . 201

Using Your Phone With a Hearing  
Aid Device . . . . . 203

Caring for the Environment by Recycling . . . . 205

Caring for the Battery . . . . . 205

Export Law Assurances . . . . . 207

Radio Frequency (RF) Energy . . . . . 208

Owner's Record . . . . . 210

Patent and Trademark Information . . . . . 211

Software Copyright Notice . . . . . 211

Privacy and Data Security . . . . . 212

Smart Practices While Driving . . . . . 212

**4B. Manufacturer's Warranty . . . . . 214**

Motorola Limited Warranty  
for the United States and Canada . . . . . 214

Service and Repairs . . . . . 219

**Index . . . . . 220**



# Introduction

---

This *User Guide* introduces you to your wireless service and all the features of your new phone. It's divided into four sections:

- ◆ *Section 1: Getting Started*
- ◆ *Section 2: Using Your Phone*
- ◆ *Section 3: Service Features*
- ◆ *Section 4: Safety and Warranty Information*

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

## *User Guide Note*

*Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit [www.nextel.com](http://www.nextel.com) and sign in to access the most recent version of the user guide.*

## **WARNING**

*Please refer to the **Important Safety Information** section on page 200 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.*



## Your Phone's Menu

The following table outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus and Options" on page 17.

<b>Net</b>
<b>Java Apps</b>
<b>Settings</b>
<b>1: Display/Info</b>
<b>1: Wallpaper</b>
1: Buy Wallpapers      2: Placement 3: Wallpaper          4: Autocycle
<b>2: Text Size</b>
1: Zoom                  2: Standard 3: Compressed
<b>3: Theme</b>
1: Alkali                  2: Elevate 3: High Contrast

4: Home Icons
5: Backlight
6: Clock
7: Menu View
1: Icon View          2: List View
8: Large Dialing
9: Status Light
10: Language
<b>2: Phone Calls</b>
1: Set Line
2: Any Key Ans
3: Auto Redial
4: Call Waiting
5: Auto Ans
6: Minute Beep
7: Call Duration
8: TTY
9: Notifications



10: DTMF Dialing
11: Prepend
<b>3: DC/GC Options</b>
1: Tkgrp Silent
2: Tkgrp Area
3: One Touch DC
4: Alert Type
5: On/Off Settings
6: Store Rcvd Info
<b>4: Personalize</b>
1: Menu Options
1: Reorder Menu      2: Add/Remove Apps
2: Up Key
3: Down Key
4: Left Key
5: Right Key
6: Center Key
7: Left Sftkey

8: Right Sftkey
9: Power Up
<b>5: Volume</b>
<b>6: Security</b>
1: Phone Lock
2: Keypad Lock
3: SIM PIN
4: GPS PIN
5: Change Passwds
<b>7: Advanced</b>
1: Alert Timeout
2: Headset/Spkr
3: Connectivity
4: Reset Defaults
5: Return to Home
6: Transmitters
7: Baud Rate



<b>Ring Tones</b>
1: Buy Ring Tones
2: Vibrate All
3: < List of Ringtones on Your Phone >
4: Vibrate
5: Silent
<b>Contacts</b>
<b>Messages</b>
1: [Create Mesg]
2: Voice Mail
3: Inbox
4: Drafts
5: Sent Items
6: Net Alert
7: SMS
<b>Call Forward</b>
<b>Downloads</b>

<b>Bluetooth</b>
1: Hands Free
2: Link to Devices
3: Device History
4: Setup
5: Find Me
<b>My Info</b>
<b>Direct Talk</b>
1: Go To Direct Talk
2: Setup
1: Direct Launch
2: State Tone
3: Help
<b>VoiceRecord</b>
<b>GPS</b>
1: Position



2: Privacy
3: Interface
<b>Datebook</b>
<b>Memo</b>
<b>Call Timers</b>
1: Last Call
2: Phone Reset
3: Phone Lifetime
4: DC/GC Reset
5: DC/GC Lifetime
6: Circuit Reset
7: Circuit Lifetime
8: Kbytes Reset
<b>Recent Calls</b>
<b>Shortcuts</b>
<b>Profiles</b>
1: [New Profile]

2: Surveillance
3: Standard
4: Car
5: Meeting
6: Office
7: Outdoors
8: Headset
9: PRVT Only
10: CONTCS Only
<b>Call Alert</b>
<b>My Pictures</b>
<b>Direct Connect</b>

Please keep in mind that the menu options and order shown here may change as updates become available and as you set your own preferences through the *Settings > Personalize > Menu Options* feature.



## Use and Care

---

To care for your Motorola phone, keep it away from:



### *liquids of any kind*

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



### *dust and dirt*

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



### *extreme heat or cold*

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



### *cleaning solutions*

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



### *microwaves*

Don't try to dry your phone in a microwave oven.



### *the ground*

Don't drop your phone.



*Section 1*

## ***Getting Started***





## Setting Up Service


---

- ♦ *Setting Up Your Phone (page 2)*
- ♦ *Activating Your Phone (page 3)*
- ♦ *Setting Up Your Voicemail (page 3)*
- ♦ *Enabling Security (page 4)*
- ♦ *Account Passwords (page 4)*
- ♦ *Getting Help (page 5)*


**Setting up service on your new phone is quick and easy.** This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Nextel for assistance with your wireless service.


## Setting Up Your Phone

---

1. Make Sure your SIM card is in Place.
2. Install the battery.
  - See “Installing the Battery” on page 10.
3. Press  to turn the phone on.
  - If your phone is activated, it will turn on, search for service, and enter standby mode.
  - If your phone is not yet activated, see “Activating Your Phone” on page 3 for more information.

### Note

You may see a prompt to update your browser information. Press  (left softkey), the top left key below the display screen, to select **Ok** and complete the task.

4. Make your first call.
  - Use your keypad to enter a phone number.
  - Press .



**Note**

*Your phone's battery should have enough charge for your phone to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 12 for details.*

## Activating Your Phone

- If you purchased your phone at a Nextel Store, it is probably activated and ready to use.
- If your phone is not activated, please call Nextel Customer Service at 1-800-639-6111 from any other phone.

**Tip**

*You must be in an area covered by the Nextel National Network when you first power up your phone.*

- When you power up your phone the first time, it performs a series of security checks. For example, it verifies the phone is Nextel-approved and the correct SIM card is installed. If you don't pass the security checks, your phone displays messages and screen prompts showing what to do next. If you still

encounter security messages, call Nextel Customer Service at 1-800-639-6111 from any other phone.

## Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, it is recommended that you set up your voicemail and personal greeting as soon as your phone is activated.

1. Using your i365 phone, call your wireless phone number.
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.

For more information about using your voicemail, see "Voicemail" on page 150.







## Enabling Security

---

You must enable security the first time you power on your phone or within ten days of first activation of your phone.

*To enable security:*

1. Press  to power on your phone.
2. Press **Ok**  (right softkey).
3. You are prompted to enable security. Press **Yes**  (right softkey). A series of screens followed by the default homepage displays.
4. Press  to return to standby mode.

## Account Passwords

---

With Nextel service, you enjoy unlimited access to your personal account information and voicemail account. To ensure that no one else has access to your information, you need to create passwords to protect your privacy.

### Account Username and Password

If you are the account owner, you will create an account username and password when you sign on to [www.nextel.com](http://www.nextel.com). (Click ***Need to register for access?*** to get started.) If you are not the account owner (if someone else receives the bill for your service), you can get a sub-account password at [www.nextel.com](http://www.nextel.com).

#### Note

When you go to [www.nextel.com](http://www.nextel.com), you will be redirected to [www.sprint.com](http://www.sprint.com) by default. Follow the sign in instructions above to access your Nextel account.



## Vicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 3 for more information on your voicemail password.

## Getting Help

---

### Managing Your Account

Online: [www.nextel.com](http://www.nextel.com)

- Access your account information.
- Check your minutes used (depending on your service plan).
- View and pay your bill.
- Enroll for online billing and automatic payment.
- Purchase accessories.
- Shop for the latest phones.
- View available service plans and options.

## From Your i365 Phone

- Press **[\*][4][📞]** to check minute usage and account balance.
- Press **[\*][3][📞]** to make a payment.

## From Any Other Phone

- Nextel Customer Service: **1-800-639-6111**.
- Business Customer Service: **1-800-390-9545**

## Operator Services

Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- ▶ Press **[0][📞]**.

For more information or to see the latest in products and services, visit us online at [www.nextel.com](http://www.nextel.com).




## Phone Basics

- ◆ *Your Phone (page 6)*
- ◆ *Getting Started With Your Phone (page 8)*
- ◆ *Features of Your Phone (page 15)*
- ◆ *Navigating Through Phone Menus and Options (page 17)*
- ◆ *Displaying Your Phone Number and Direct Connect Number (page 19)*
- ◆ *Entering Text (page 20)*
- ◆ *Accessories (page 24)*

*Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.*

## Your Phone

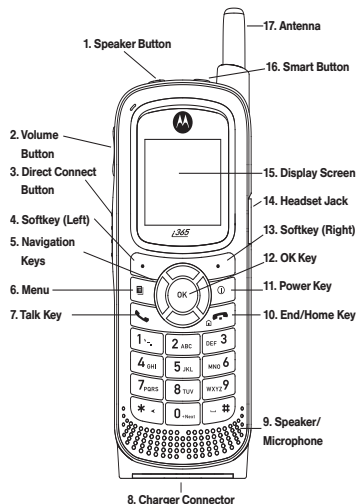



## Key Functions

1. **Speaker Button** lets you place or receive calls in speakerphone mode.
2. **Volume Button** allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
3. **Direct Connect Button** allows you to use Nextel Direct Connect on your Nextel phone. (See “Making and Answering Direct Connect Calls” on page 36.)
4. **Softkey (left)** lets you select softkey actions or menu items corresponding to the bottom left line on the display screen.
5. **Navigation Key** scrolls through the phone’s menu options and acts as a shortcut key from standby mode.
  - Press **Up** to access Ringtones.
  - Press **Down** to access Recent Calls.
  - Press **Right** to launch Java Applications
  - Press **Left** to access Net.
6. **Menu** lets you access the phone’s menu from standby mode and allows you to access context-sensitive menus from other screens.
7. **Talk Key** allows you to place or receive calls, answer Call Waiting, or use Three-Way Calling.
8. **Charger Connector** allows you to connect your battery charger or other accessories to your phone.
9. **Speaker/Microphone** lets you hear the caller and automated phone prompts when using speaker mode and allows other callers to hear you clearly when you are speaking to them.
10. **End/Home Key** allows you to end a calls or return to standby mode.
11. **Power Key** lets you turn the phone on or off.
12. **OK Key** lets you access the phone’s menus and selects the highlighted choice when navigating through a menu.
13. **Softkey (right)** lets you select softkey actions corresponding to the bottom right line on the display screen.



14. **Headset Jack** allows you to plug in either a stereo headset (included) or an optional headset for convenient, hands-free conversations.

**WARNING**

*Inserting an accessory into the incorrect jack may damage the phone.*

15. **Display Screen** provides information about your phone's status and options.
16. **Smart Button** allows you to access special functions.
17. **Antenna** delivers the best reception when fully extended.

## Getting Started With Your Phone

---

To start using your i365 phone:

- Make sure your SIM card is in place.
- Charge the battery.
- Turn on your phone.

After you've completed these items, you are ready to begin using your new phone.

## Your SIM Card

### Locating the SIM Card

Your SIM (Subscriber Identity Module) card is a small card inserted into the SIM card holder within your phone behind the battery area.

If no SIM card came with your phone, contact Nextel Customer Service at 1-800-639-6111.

Most users will never need to remove or insert the SIM card. However, if you wish to, follow the instructions in "Removing and Inserting the SIM Card" on page 9.

**Important**

*The SIM card is designed for optimal Contacts storage and feature use. For Nextel SIM card compatibility information, visit [www.nextel.com/sim](http://www.nextel.com/sim).*

*In some cases, Contacts and Groups may not be accessible if you move your SIM card to another phone. Contacts and Groups created with your i365 phone may not be readable by an older iDEN SIM-based phone.*




## Removing and Inserting the SIM Card

**Important**

*To avoid losing information stored in your SIM card, do not remove it from your phone unless absolutely necessary.*

### *To remove your SIM card:*

1. With your phone powered off, remove the battery door and battery. See “Removing the Battery” on page 11.
2. With your fingernail, Press down on the tab directly above the SIM card and carefully slide it out from under the edge.

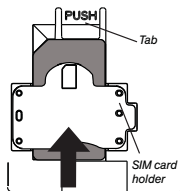**Note**


*Protect your SIM card as you would any delicate object. Store it carefully.*

### *To insert your SIM card:*

1. With your phone powered off, remove the battery door and battery. See “Removing the Battery” on page 11.
2. With your fingers, carefully slide the SIM card into your phone until it lies flat in the SIM card holder.

**Important**

*Do not touch the gold-colored areas of your SIM card.*

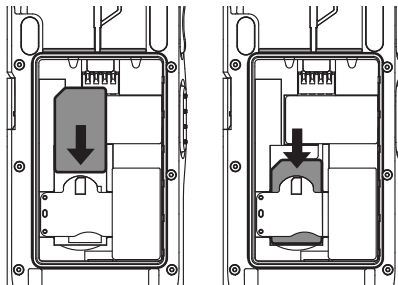



## Using Your Phone's Battery and Charger

### **WARNING**

*Use only Nextel-approved or Motorola-approved batteries and chargers with your phone. The failure to use a Nextel-approved or Motorola-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.*

Nextel-approved and Motorola -approved batteries and accessories can be found at Sprint Stores or through Motorola. You may order online at [www.nextel.com](http://www.nextel.com) or by calling 1-866-866-7509.

### **Battery Capacity**

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained.

When the battery reaches 5% of its capacity, your phone makes a sound and displays a message. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then turns off.

### **Note**


*Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.*

### **Tip**

*Watch your phone's battery level indicator and charge the battery before it runs out of power.*

 
## Installing the Battery

1. Turn the release tab counter-clockwise to release the battery cover.

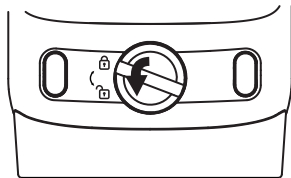




 
2. Remove the battery cover from the back of the phone



3. Insert the battery into the opening, making sure the connectors align. Gently press down to secure the battery.

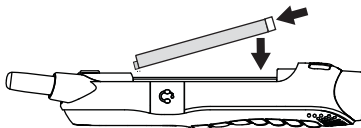

4. Replace the battery cover and press down until you hear a click.



5. Turn the release tab clockwise to lock.

## Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Remove the battery cover and remove the battery from the phone.

### **WARNING**

*Do not handle a damaged or leaking Li-Ion battery as you can be burned.*



## Charging the Battery


Charge your battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located on your display screen.

Always use a Nextel-approved or Motorola-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

## Using the Phone Charger

- ▶ Plug the flat end of the charger into the phone's charger jack and the other end into an electrical outlet.

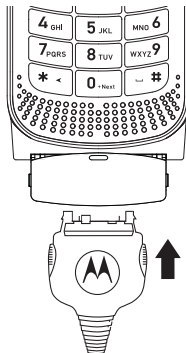

- Your display screen lets you know the battery is charging.
- Both the battery icon and a text message show the charging status.



With the approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

## Battery Use and Battery Safety

- *Motorola recommends you always use Motorola-branded batteries and chargers.* The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

### WARNING

*Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.*

- Battery usage by children should be supervised.

### Important

*Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:*

- *Remove the battery and inspect it to confirm that it bears a Motorola "Original Equipment" hologram;*
- *If there is no hologram, the battery is not a qualified battery;*
- *If there is a hologram, replace the battery and retry charging it;*
- *If the message remains, contact a Motorola Authorized Service Center.*

- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile device with you when you leave your vehicle.
- When storing your battery, keep it in a cool, dry place.



- It is normal for battery life to decrease over time, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- **Avoid damage to battery and mobile device.** Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Center before using. **Do not** attempt to dry it with an appliance or heat source, such as a hair dryer or microwave oven.
- **Use care when handling a charged battery** — particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (e.g., jewelry, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center for proper battery disposal.



#### **WARNING**

*Never dispose of batteries in a fire because they may explode.*

## ***Turning Your Phone On and Off***

### **Turning Your Phone On**

- ▶ Press .

As your phone connects to the network, you see a connecting message. Your phone may require you to enter identifying information to use it or to access specific features.

### **Turning Your Phone Off**

- ▶ Press and hold for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).



## Features of Your Phone

---

The i365 is durable, easy to use, and reliable, and it offers many features and service options. This list previews some of those features and provides page numbers where you can find out more:


- **Nextel Direct Connect** provides instant, coast-to-coast 2-way “walkie-talkie-style” communication at the click of a button (page 36).
- **Nextel Direct Talk** allows for two-way radio communication “off the network” between two or more phones equipped with this capability (page 53).
- **Text Messaging** (also known as Multimedia Messaging) (page 158), provides quick and convenient messaging capabilities.
- Built-in **Speakerphone** allows you to enjoy easy hands-free communication.
- **Games, ringers, screen savers, and other applications** can be downloaded to make your phone as unique as you are. Additional charges may apply.

- Your **Contacts** list allows you to store up to 600 entries, with several numbers or addresses per entry (page 99).
- The built-in **Datebook** offers several personal information management features to help you manage your busy lifestyle (page 108).
- The **GPS Enabled** feature works in connection with available location-based services (page 122).
- **Word English Text Input** lets you quickly type messages with one keypress per letter (page 21).
- **Bluetooth**\* capability that allows you to wirelessly connect to other Bluetooth enabled devices (page 136).
- **Speed dial** lets you dial phone numbers quickly (page 35).

 
### Viewing the Status Information


Your phone’s display screen provides information about your phone’s status and options. This list identifies the symbols you’ll see on your phone’s display screen:




 **Battery Strength** — A fuller battery indicates a greater charge.




 
 **Signal Strength** — More bars next to the antenna indicate a stronger signal.


 **No Service** — Your phone is without service. You cannot make or receive any type of call.

 **Phone In Use** — Your phone is active on a phone call.

 **Direct Connect In Use** — Your phone is active on a Direct Connect call.

 **Group In Use** — Your phone is active on a Group Connect call.

 **Direct Talk** — Your phone is off network and set to Direct Talk mode.

 **Talkgroup In Use** — Your phone is active on a Talkgroup call.



**Bluetooth In Use** — Your phone is using Bluetooth. If this icon is blinking, then your phone is in discoverable mode. If this icon is static, your phone is active in a Bluetooth connection.



**Active Phone Line** — 1 indicates phone line 1 is ready to make calls; 2 indicates phone line 2 is ready to make calls.



**Call Forward** — Your phone is set to forward calls. See “Call Forwarding” on page 185.



**Ringer Off** — Your phone is set to not ring. See “Vibrate All” on page 66.



**Speaker Off** — Direct Connect sound is set to come through the earpiece rather than through the speaker.



**Messages** — You have one or more messages. See “Message Center” on page 148.







**Text Input** — You are using one of the phone's text entry methods. See "Selecting a Text Input Mode" on page 20.



**Internet** — You are ready to browse the Internet or are browsing the Internet using a secure connection. See "Data Services" on page 191.



**Transmitters** — Your phone is set not to receive calls and other transmissions. See "Temporarily Turning Off Transmissions (Airplane Mode)" on page 74.



**Packet Data** — You are ready to transfer packet data or are transferring packet data. See "Using Your Phone as a Modem" on page 194.



**TTY** — You are ready to use your phone to make calls using a teletypewriter device. See "Telecommunications Relay Service" on page 188.





**Voice Record** — You have one or more voice records stored. See "Voice Records" on page 131.

## Navigating Through Phone Menus and Options

The navigation keys on your phone let you to scroll through menus quickly and easily.



To navigate through a list-type menu, simply press your navigation keys up or down. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page ii.


Many features provide context-sensitive menus that let you access related features and actions. This icon  appears any time a context-sensitive menu is available. Press  to access the menu






### Tip

When scrolling through the main menu, it may be necessary to select **More** to view additional main menu options. Depending on which menu view you're using, either highlight **More** and press  or press **More**  (right softkey).


## Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select an item by highlighting it and pressing .

*For example, to view your text messages:*

1. Press  to access the main menu.
2. Select **Messages** by highlighting **Messages** and pressing .
3. Select **Inbox** by highlighting it and pressing .  
(If you have any text messages, they are displayed.)

### Note

For the purposes of this guide, the above steps condense into "Press  > **Messages** > **Inbox**."

## Backing Up Within a Menu

*To go to the previous menu:*



- ▶ Press **Back**  (right softkey).

*To return to standby mode:*

- ▶ Press .

## Shortcuts and Personalized Keys

In standby mode, your phone gives you ways to quickly access features you use frequently:

- Use the **Shortcuts** feature page 81 to quickly access most menu options by pressing a number on your keypad or saying the voice name of the shortcut.
- Use the **Personalize** feature page 62 to assign main menu items to the navigation keys, softkeys, , and , as well as setting a main menu item to appear when your turn on your phone.

## Help

Your phone contains an in-device help program to help you understand complicated or seldom used features. When you access a feature, **Help** sometimes appears as a menu item or softkey. Select **Help** and



read the text for a quick overview of the feature. For more information, refer to this guide.

## Displaying Your Phone Number and Direct Connect Number

**My Info** lets you view your phone number, Direct Connect number, and other phone information.

To view information about your phone:

1. Press  > **My Info**.

**Note** You may need to select **More** to display **My Info**.

2. Press .


3. Scroll to see your information:

- **My Name** — You can enter your name here.
- **Line 1** and **Line 2** — your phone numbers for phone lines 1 and 2. Each number appears when you receive your alert notification after enabling security on your phone.
- **Direct Connect** — the number that others use to contact you using Nextel Direct Connect. This

number appears when you receive your alert notification after enabling security on your phone.

- **Group ID** — the number of the Talkgroup you have joined.
- **Carrier IP** — the IP address assigned to Nextel. This number appears when you register for packet data services.
- **IP1 Address** and **IP2 Address** — the IP addresses you use to access the Internet with your phone.
- **Circuit Data** — the number you use if you want to use your phone to transfer circuit data. See “Using Your Phone as a Modem” on page 194. You receive this number from Nextel.




### Note

If you request equipment-related transactions on your account, Nextel Customer Service may require you to provide specific information about your phone. By pressing  anytime while in **My Info**, a submenu will appear that includes your phone's service status, unit information, and phone identification numbers including IMEI, SIM ID, and Serial Number (SN). Please be prepared to supply the representative with this information when requesting these types of transactions.



## Editing My Info

You can edit My Info to enter or change the text that appears in *MyName*.

1. Press  > *My Info*.
2. Press *Edit*  (left softkey).
3. Select *Name*.
4. Enter the name you want to appear. See “Entering Text” on page 20. When you are finished, press .

You can also edit the information in *Line 1*, *Line 2*, and *Ckt*, but your changes are only temporary. The next time your phone registers on the network, your actual phone numbers and circuit data number appear again in My Info.


## Entering Text

---

### Selecting a Text Input Mode

Your phone provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text (for example, when adding a Contacts entry or when composing text and multimedia messages).

*To choose a text input mode:*

1. From a screen where you can enter text, press  to change the text input mode.
2. Select one of the following options:
  - **Alpha** to cycle through the alpha characters associated with the letters on the keypad. (See page 22.)
  - **Word** to enter text using a predictive text system that reduces the number of key presses required while entering a word. (See page 21.)
  - **Numeric** to enter numbers by pressing the numbers on the keypad. (See page 23.)
  - **Symbols** to enter punctuation and other symbols. (See page 23.)



- **Insert QuickNotes** to enter preset messages. [You can also access Quick Notes by pressing **QNotes** [left softkey] when beginning a message. (See page 23).]

**Tip**

When entering text, press the [Shift] key to change letter capitalization (ABC > Abc > abc).

## Entering Text Using Word Text Input

Word Text Input (T9) lets you enter text by pressing keys just once per letter. (To select the Word mode when entering text, see “Selecting a Text Input Mode” on page 20.)

Word Text Input uses an intuitive word database to analyze the letters you enter and create a suitable word. (The word may change as you type.)

1. Select the **Word** text input mode. (See page 20.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press [2][4][5][5].) (If you make a mistake, press **Delete** [left softkey] to erase a single character. Press and hold **Delete** [left softkey] to erase an entire word.)

## Adding a Word to the Database

If a word you want to enter is not displayed as an option when you are using Word Text Input, add it to the database.

1. Select the **Alpha** text input mode. (See “Selecting a Text Input Mode” on page 20.)
2. Enter the word. (See “Entering Text Using Alpha Mode” on page 22.)
3. Select the **Word** text input mode.
4. Press [#].



The word will appear as an option the next time you scroll through options during Word Text Input.

For more information about Word Text Input, visit [www.nuance.com/T9/textinput/](http://www.nuance.com/T9/textinput/).




## Entering Text Using Alpha Mode

1. Select the **Alpha** mode. (See “Selecting a Text Input Mode” on page 20.)
2. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word “Bill,” press **2** twice, **4** three times, **5** three times, and **3** three times again.)

(If you make a mistake, press **Delete**  [left softkey] to erase a single character. Press and hold **Delete**  [left softkey] to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lower cased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence
 <b>1</b>	<b>Space . 1 ? ! , @ &amp; : ; “ - ( ) ‘ ’ ¨ ¡ % £ \$ ¥</b>
<b>ABC 2</b>	<b>A B C 2 Á Â Ã Ä Å Ç</b>
<b>DEF 3</b>	<b>D E F 3 É Ê Ë</b>
<b>GHI 4</b>	<b>G H I 4 Í Î</b>
<b>JKL 5</b>	<b>J K L 5</b>
<b>MNO 6</b>	<b>M N O 6 ñ Ó Ô Õ Ö Ø</b>
<b>PQRS 7</b>	<b>P Q R S 7 Þ</b>
<b>TUV 8</b>	<b>T U V 8 Ú Û Ü Ý</b>
<b>WXYZ 9</b>	<b>W X Y Z 9</b>
<b>+ 0</b>	<b>+ - 0 * / \ [ ] = &gt; &lt; # \$</b>
<b>↵ #</b>	<b>Space</b>
<b>&lt; ✕</b>	<b>Back</b>



## Entering Numbers, Symbols, and Quick Notes



To enter numbers:

- ▶ Select the **Numeric** mode and press the appropriate key. (See “Selecting a Text Input Mode” on page 20.)

To enter symbols:


- ▶ Select the **Symbols** mode. (See “Selecting a Text Input Mode” on page 20.) To enter a symbol, press the appropriate key indicated on the display.

To enter Quick Notes:

1. From a text entry screen, press **QNotes**  (left softkey). (See “Selecting a Text Input Mode” on page 26.)
2. Select a message and press .

**Note** Quick Notes preset messages make composing text messages easier by allowing you to enter quick messages, such as “Meet me at,” “Let’s get lunch,” or a customized message of your own.


To change the language of the database:

1. At a screen that requires you to enter text, press .
2. Select **Languages**.
3. Select the language you want for your database.



## Special Function Keys

Some of the phone’s keys assume different functions while in Alpha or Word mode.

### Spaces



Press  for a space.

### Capitalization

When you press and hold the  key, it acts as a three-way toggle. Press and hold  to make the next letter typed uppercase (shift), to make all subsequent letters typed uppercase (caps lock), or to go back to lowercase letters.



These icons appear:

 or  Shift is on.

 

 or  Caps lock is on.

When none of these icons appear, letters typed are lowercase. Scrolling up after typing a letter makes that letter uppercase.

**Note** When creating a text message, you may not be able to make a letter uppercase by scrolling up, depending on the type of text message and the text entry mode.

Your phone automatically makes the first letter of a sentence uppercase.

## Punctuation

Press  or  to insert punctuation. Continue to press the key to view the list of symbols available through that key. Pause to select the symbol you want.

**Note** Additional punctuation symbols are available in Symbols mode.

## Accessories

---

Your phone comes with the following accessories:

- A Li-Ion battery and charger.
- A 128K SIM card.

Various accessories are available for use with your i365 phone, including cases, vehicle power chargers, data cables, hands-free accessories, and more.

To order additional accessories, go to [www.nextel.com](http://www.nextel.com) or call 1-866-866-7509. You can also contact your Nextel Authorized Representative or stop by any Sprint Store. For information on Sprint Store locations, go to [www.sprintstorelocator.com](http://www.sprintstorelocator.com).



## *Using a Remote Direct Connect Button*

If you are using a headset or other optional accessory with a remote Direct Connect button, you can use the remote Direct Connect button for phone calls, Direct Connect calls, and Group Connect calls.

For phone calls, use the remote Direct Connect button to answer calls, switch between calls, and end calls. Hold the remote Direct Connect button for less than two seconds to answer calls and switch between calls. Hold the remote Direct Connect button for more than two seconds to end calls.

For Direct Connect calls and Group Connect calls, use the remote Direct Connect button as you would the Direct Connect button on your phone.

When using a headset, the Direct Connect button on your phone works the same way as when you are not using a headset. Direct Connect and Group Connect sounds will be heard through the headset.







*Section 2*

## ***Using Your Phone***





## Making and Answering Calls

---

- ◆ *Types of Calls (page 28)*
- ◆ *Making and Answering Phone Calls (page 29)*
- ◆ *Making and Answering Direct Connect Calls (page 36)*
- ◆ *Making and Answering Group Connect Calls (page 39)*
- ◆ *Nextel Direct Send (page 44)*
- ◆ *Making and Answering Talkgroup Calls (page 51)*
- ◆ *Making and Answering Direct Talk Calls (page 53)*
- ◆ *Call Alerts (page 57)*

*Your i365 phone offers many different ways to connect to your family, friends, and associates.* In addition to traditional wireless phone calls, you can make Nextel Direct Connect calls to both individuals and groups, participate in Talkgroups, use Nextel Direct Talk, and send Call Alerts.

## Types of Calls

---

With the Nextel National Network, Nextel Direct Connect, and your i365 phone, you have the following traditional wireless phone and Nextel Direct Connect services available to you:

- *Digital Wireless Phone Calls* offer clear calls and many extra services, including missed call notification, Three-Way Calling, speakerphone, and speed dialing (page 29).
- *Direct Connect Calls* allow two-way radio communication with other Nextel Direct Connect users within the Nextel National Network (page 36).
- *Group Connect Calls* allow coast-to-coast two-way radio calling to up to 20 Nextel Direct Connect customers simultaneously (page 39).
- *Nextel Direct Send* allows you to send contact information about yourself and others in Nextel Direct Connect calls and Nextel Group Connect calls and send pictures in Nextel Direct Connect calls (page 44).



- **Talkgroup Calls** allow two-way radio calling to up to 100 Nextel Talkgroup customers simultaneously (page 51).

### Note


To learn more about the differences between Nextel Group Connect calls and Talkgroup calls, please see “Difference Between Group Connect and Talkgroup Calls” on page 51.

- **Nextel Direct Talk** allows for two-way radio communication “off the network” between two or more phones equipped with this capability (page 53).

## Making and Answering Phone Calls

### Making Calls

Placing a traditional wireless phone call from your i365 is as easy as making a call from any landline phone.

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **Delete**  [right softkey] to erase the numbers.)

3. Press .


4. Press  when you are finished.

### Tip

To redial your last outgoing call, press and hold .

You can also place calls from your phone by using Voice Names (page 35), speed dialing numbers from your Contacts (page 35), and using your Recent Call list (page 34).

### Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your settings, you may also answer incoming calls by pressing any number key. See “Call Answer Mode” on page 84 for more information.)

Your phone notifies you of incoming calls in the following ways:


- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.



If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

**Note** When your phone is off, calls go directly to voicemail.


## Ending a Call

- ▶ To end a call press .



## Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

*To display the Missed Call entry from the notification screen:*

- ▶ Press **View**  (left softkey). (To dial the phone number, press  after displaying the call entry.)

*To display a Missed Call entry from standby mode:*

1. Press  > **Recent Calls**. (You may also be able to press the navigation key down to display Recent Calls.)
2. Select the entry you wish to view and press .

## Calling Emergency Numbers

Your phone supports emergency calling. Emergency phone calls can be made even when your SIM card is blocked or not in your phone.

- ▶ Dial **911** and press  to be connected to an emergency response center. If you are on an active call, you must end it before calling 911.

When you make an emergency call, your phone's GPS Enabled feature can help emergency service personnel find you, if you are in a location where your phone's GPS antenna has established a clear view of the open sky and your local emergency response center has the equipment to process location information. See "GPS Enabled" on page 122, and particularly "IMPORTANT: Things to Keep in Mind" on page 122 and "Making an Emergency Call" on page 123, for more information on the limitations of this feature. Because of the limitations of this feature, always provide your best knowledge of your location to the



emergency response center when you make an emergency call.

### **Important**

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.



*Emergency calls cannot be placed while the keypad is locked.*

*If you have not registered on the network, emergency calls cannot be placed while your SIM card is in your phone.*

### **Important**

*If you are bringing your phone number to Nextel from your previous carrier, you may receive a temporary telephone number while your Nextel phone is being programmed with your permanent phone number. If you make a call to 911 and the call fails, the 911 emergency response center will not be able to call you back on your Nextel phone if in the meantime, your Nextel phone has been programmed with your permanent telephone number. If the call is disconnected before location and details have been provided, call 911 again and advise that you were disconnected.*


## **In-Call Options**

Pressing  during a call displays a list of available in-call features. To select an option, press the corresponding keypad number or highlight the option and press . The following options may be available through the Options menu:

- **Hold** to place the call on hold.
- **3 Way** to initiate a three-way call.
- **Bluetooth** to switch from the phone's microphone to a Bluetooth device.
- **2nd Call** to place a second.





- **Contacts** to display your Contacts list.
- **Recent Calls** to display Recent Calls list.
- **MyInfo** to display your phone's Information.
- **Memo** to display the phone's electronic notepad.
- **Datebook** to enter a datebook event.
- **Messages** to create a message.
- **Record** to record the phone call.
- **GPS** to enter the GPS application.
- **In Call Setup** to modify the in-call features.

Press **Spkr**  during a call to route the phone's audio through the speaker or the earpiece.

#### **WARNING**


*Because of higher volume levels, do not place the phone near your ear during speakerphone use.*

Press **Mute**  during a call to mute the microphone. Press **Unmute**  (left softkey) to unmute the microphone.

 
 
## **End-of-Call Options**


After you receive or make a call, the phone number and the call duration are briefly displayed. You are then automatically taken to the Recent Calls list.

*To save a number that is not in your contacts:*

- Highlight the entry you want to add to your Contacts and press **Save**  (left softkey). (See "Saving a Phone Number" on page 33.)

*To view Call Details and Call Info:*

1. Select a recent call.
2. Press **OK**  to view the **Call Details**.
3. Press **OK**  to view the **Call Info**.

After you receive a call from or make a call to a phone number that is already in your Contacts, you are automatically taken to the Recent Calls list. Highlight the Recent Calls entry and press **OK**  to view the name of the contact, the time the call was received or made, and the call duration.






#### **Note**

*The End-of-Call options are not displayed for calls identified as No ID or Restricted.*








## Saving a Phone Number

Your phone can store up to 12 phone numbers in each of 600 Contacts entries. Each entry's name can contain 20 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see "Contacts" on page 99.)

1. Enter a phone number and press .
2. Select **Store Number** and press .
3. To store the number as a new entry, select **[New Contact]** and press  to add the new entry.  
– or –  
Search for an existing contact name and press  to save the new number.
4. Enter or edit information as necessary. When you are finished press **Done**  (left softkey) to save the Contact.

## Finding a Phone Number

To find Contacts entries you can either scroll through the list using your navigation key or you can search Contacts entries by name.

1. Press **Contcs**  (left softkey).
2. Press **Search**  (left softkey).
3. Enter the first few letters of a Contact's name and press . (The first contact entry that matches the entered text will be highlighted.)
4. To display the Contacts entry, press . To dial the entry's default phone number, press .

## Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:



- **Wait** sends the next set of numbers when prompted.
- **Pause** automatically sends the next set of numbers after three seconds.

### Note


You can have multiple pauses in a phone number and combine waits and pauses.




*To dial or save phone numbers with pauses:*


1. Enter the phone number.
2. Press and hold  until the letter **P** appears. The **P** represents a three-second pause. If you want a pause longer than three seconds, press and hold  more than once. Each **P** represents a three-second pause.


– or –

Press and hold  until the letter **W** appears. The **W** means your phone waits before dialing further. A message appears asking if you want to send the rest of the digits.

3. Enter additional numbers.
4. Press  to dial the number.

– or –


Press  > **Store Number** to save the number in your Contacts.


**Note** When dialing a number with a wait, press **Yes**  (left softkey) to send the next set of numbers.

## Dialing From the Contacts List


1. Press  > **Contacts**.

### Shortcut

From standby mode, press **Contacts**  (left softkey) to list entries.


2. Select the entry you want to call and press  to dial the entry's default phone number.

– or –

To dial another number from the entry, highlight the name, press the navigation key right or left until the correct number type appears, and then press .

## Making a Call From Recent Calls

If you have numbers stored in the Recent Calls list, you can use these numbers to make calls. For information on the Recent Calls list, see “Recent Calls” on page 93.

1. Press  > **Recent Calls**.
2. Scroll to the item containing the number you want to call.
  - If you scroll to a call, you can make a call to the number that made the call. If the number is stored




in Contacts, you can make a call to any of the numbers stored with it.

- If you scroll to contact information from another phone, you can make a call to any of the numbers in the contact information.

3. To place the call now, press .

– or –

Scroll left or right to display the number type you want to call. When the correct number is displayed, press  to place the call.

*To make calls while viewing the details of an item on the Recent Calls list:*

1. From the Recent Calls list, select the item containing the number you want to call. If you select a call or contact information from another phone, you can make a call to the number shown first on the details screen.


2. Press .

#### Tip



*To make a Direct Connect call from the Recent Calls list, find the Direct Connect number you want to call and press and hold the Direct Connect button to place the call.*

## Making a Phone Call Using a Voice Name

If you have created a voice name in Contacts for the number you want to call (see page 102), say the voice name into your phone to enter the number.

1. Press and hold the **Speaker Button** () until a prompt appears telling you to say the voice name.
2. Speaking into the microphone, say the voice name assigned to the number you want to call. Your phone plays the name back to you.
3. The call is placed automatically.

#### Tip

*To stop a phone call from being completed, press  or .*

## Using Speed Dialing



You can store up to 600 numbers in your phone's speed dial memory.

*To use Turbo Dial® for speed dial locations 1–9:*

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Calling...”.



To use speed dial for locations 10–600:

1. Enter a speed dial number and then press .
2. Press  to dial the number.

## Making and Answering Direct Connect Calls

---

Nextel offers the following Direct Connect services:

- **Nationwide Direct Connect** allows coast-to-coast Direct Connect calling to Nextel subscribers to and from anywhere on the Nextel National Network (U.S.).
- **International Direct Connect** allows Direct Connect calling to and from select countries.
- **Group Connect** allows nationwide Direct Connect calling to up to 20 Nextel subscribers simultaneously. (See “Making and Answering Group Connect Calls” on page 39).
- **Talkgroups** allows Direct Connect calling to up to 100 Nextel subscribers in the same Direct Connect network. (See “Making and Answering Talkgroup Calls” on page 51).

See [www.nextel.com](http://www.nextel.com) for more details on these Direct Connect services. Pricing for each of these services is based on your service contract.

### Making Direct Connect Calls

1. Enter the Direct Connect number you want to call. (See “Dialing Nextel Direct Connect Numbers” below.)
2. Press and hold the Direct Connect button on the side of your phone. Begin talking after your phone emits a chirping sound.
3. Release the Direct Connect button to listen.

A Direct Connect call ends automatically after there is no activity on the call for several seconds.

### Dialing Nextel Direct Connect Numbers

Every Direct Connect number has three parts:

- An area ID.
- A network ID.
- A member ID.



An asterisk separates each part (for example: 999\*999\*9999). When you enter a number containing all three parts, you must separate them with asterisks.

**Note**

*The number of digits in each part of a Direct Connect number may vary. For example, your Direct Connect number may be formatted as 999\*999\*9999, while another valid number may appear as 555\*555555\*55.*

*If you are calling or saving a Direct Connect number for a Sprint phone with Direct Connect capabilities, the Direct Connect number may be the same as the wireless phone number. When saving the Direct Connect number, insert asterisks in place of hyphens (913\*555\*1234).*


**Tip**

*When you store a Direct Connect number in Contacts, be sure to include the entire number, including the asterisks.*

2. Press and hold the Direct Connect button on the side of your phone. Continue as you would on any Direct Connect call.

## Making Direct Connect Calls From Contacts

If you have numbers stored in Contacts, you can use these numbers to make calls. For information on entering numbers into Contacts, see “About Contacts” on page 99.

1. Press  > **Contacts**.
2. Scroll to the name or number you want to call.
3. Press and hold the Direct Connect button on the side of your phone.

Your phone places the call to the Direct Connect number stored in the Contacts entry, even if the Direct Connect icon is not displayed.

## Using Just the Member ID


If you are contacting someone sharing your network and area IDs, you only need to enter the member ID (the last part of the number).

1. Enter the member ID of a Direct Connect number.



## Making Direct Connect Calls From Recent Calls

If you have numbers stored in the Recent Calls list, you can use these numbers to make calls. For information on the Recent Calls list, see “Recent Calls” on page 93.


1. Press  > **Recent Calls**.
2. Scroll to the item containing the Direct Connect number you want to call.
3. Press and hold the Direct Connect button.

*To make calls while viewing the details of an item on the Recent Calls list:*

1. From the Recent Calls list, select the item containing the number you want to call. If you scroll to **MyInfo** from another phone, you can make a call to the Direct Connect number of the phone that sent the information.
2. Press and hold the Direct Connect button.


## Making a Direct Connect Call Using a Voice Name

If you have created a voice name in Contacts for the number you want to call, say the voice name into your phone to enter the number.

1. Press and hold the **SpeakerButton** () until a prompt appears telling you to say the voice name.
2. Speaking into the microphone, say the voice name assigned to the number you want to call. Your phone plays the name back to you.
3. Press and hold the Direct Connect button.

## Answering Direct Connect Calls

When you receive a Direct Connect call, your phone emits a tone or vibrates. You then hear the voice of your caller.

1. Wait for the caller to finish speaking.
2. Press and hold the Direct Connect button on the side of your phone. Continue as you would on any Direct Connect call.
3. Press  to end the call.



A Direct Connect call ends automatically after there is no activity on the call for several seconds.

## Making and Answering Group Connect Calls

A Group Connect call is similar to a Direct Connect call to one user, but is made to multiple Direct Connect subscribers at once. You can create Groups from your phone and call up to 20 other Group Connect-compatible phones\* anywhere on the Nextel National Network. You can create a Group for one-time use or store it to Contacts so you can call it at any time.

*\*Not all phones are Group Connect-compatible. See [www.nextel.com](http://www.nextel.com) for more details on Group Connect.*


### Note

*In order to store Groups to your i365 phone, you must use the 128K SIM card that came with your phone. The 128K SIM card is labeled "Nextel 600 Contcs & 25 Grps". With this SIM card, a maximum of 25 groups can be added to your i365 phone. Group entries created with your i365 phone may not be readable by older iDEN SIM-based phones.*

## Making Group Connect Calls

1. From Contacts or the Recent Calls list, scroll to or select the Group you want.

– or –

Press and hold  until a prompt appears telling you to say the voice name. Say the voice name assigned to the Group you want.

– or –

From standby mode, press the number on your keypad assigned to the Group you want. See "Using a Shortcut" on page 82.

– or –

Enter or select a Direct Connect number and add more Direct Connect numbers. See "Starting a Group Connect Call With a Direct Connect Number" on page 41.

2. Press the Direct Connect button.



## Answering Group Connect Calls

- ▶ Proceed as if answering a Direct Connect call from one user. Only one person at a time may speak on a Group Connect call.

## Creating Groups in Contacts

1. Press **[M]** > **Contacts**.
2. Select **[New Group]**.
3. If you want to assign a name to the Group, enter the name.

### Note

If you do not assign a name, the Group is named "Group" followed by the number of members in the Group. For example, "Group (8)" for a group with eight members.

4. Add Group members. See "Adding Group Members" on page 40.
5. If you want to create a voice name for the Group, select **[Options]** > **Voice Name**. As directed by the screen prompts, say and repeat the voice name you want to assign to the Group. Speak clearly into the microphone.

6. Press **Save** **[S]** (left softkey).

## Adding Group Members

You can add Group members that have a Direct Connect number and Group Connect-compatible phone to your Group by selecting them from Contacts, the Recent Calls list, Memo, or by manually entering the Direct Connect number from your keypad. You can also add all members in an existing Group to another Group by selecting the Group name from Contacts.

*To add Group members from Contacts, the Recent Calls list, or Memo:*

1. While creating a Group, select **[Add Member]**.  
– or –  
Select **[Add Number]** and press **Browse** **[B]** (left softkey).

### Note

To move between Contacts, the Recent Calls list, and Memo, scroll left or right, or press **[\*]** or **[#]**.

2. Scroll to the members you want from Contacts and press **[OK]**. To chose a number from the Recent



Calls list, or Memo, press . A checkmark appears next to each selected member.

**Note** To deselect a member, scroll to a selected member and press .

3. Press **Done** (left softkey) and then press **Save** (left softkey) to save the group.

*To add Group members manually from the keypad:*

1. While creating a Group, select **[Add Number]**.
2. Enter the Direct Connect number using the keypad.
3. Press and then press **Save** (left softkey) to save the group.

## ***Starting a Group Connect Call With a Direct Connect Number***

1. Press > **Direct Connect**, choose the Contacts entries containing the Direct Connect numbers you want in the Group Connect call, and go to step 6.  
– or –

From standby mode, enter the Direct Connect number.

– or –

From the Contacts list, scroll to an entry containing the Direct Connect number.

– or –




From the Recent Calls list, scroll to an entry containing the Direct Connect number.

2. Press .
3. Select **Call New Group**.
4. Add more Group members. See “Adding Group Members” on page 40.
5. If you want to save the Group you have created: Press and select **Store Group**.  
– or –  
If you do not want to save the Group, press **Done** (left softkey).
6. To make the call, press the Direct Connect button.






## Removing Members or Groups

*To remove a member from a Group:*

1. From Contacts, scroll to the Group you want to delete the member from.
2. Press **Edit** .
3. Scroll to the member you want to remove.
4. Press .
5. Select **Remove Member**.
6. Press **Save** .

*To remove all members from a Group:*



1. From Contacts, select a Group.
2. Press **Edit** .
3. Press .
4. Select **Remove All**.
5. Press **Yes** .

*To delete a Group from Contacts:*


1. From Contacts, highlight a Group.
2. Press .
3. Select **Delete Group**.
4. Press **Yes** .

## Storing Groups

*To store a group to Contacts from the Recent Calls list:*

1. From the Recent Calls list, select a Group.
2. Press **Save** .
3. If you want, add more information to the entry.
4. Press **Save** .


*To store a group to Contacts from an active Group Connect call:*

1. During an active Group Connect call, press .
2. Select **Store Group**.
3. If you want, add more information to the entry.





**Note**

You cannot record a voice name during an active call.




4. Press **Save**  (left softkey).

## Storing Members of Groups

*To store a member from the Recent Calls list or within Contacts:*

1. Display the Group containing the number or member you want to store.
2. Press .
3. Select **Store Number**.
4. Select the number or member you want to store.
5. If you want, add more information to the entry.
6. Press **Done**  (left softkey).

*To store a member from an active Group Connect call:*

1. During an active Group Connect call, press .
2. Press .
3. Select **Store Number**.
4. Select the number or member you want to store.
5. If you want, add more information to the entry.
6. Press **Done**  (left softkey).

## Group Connect Call Information

While you are in a Group Connect call, the following appears on the screen:

- The name of the Group.
- The name or the Direct Connect number of the person speaking.
- The number of members who are participating in the Group Connect call.








## Group Connect Call Details

During a Group Connect call, you can view details about the other group members, such as their name or Direct Connect number, and their status on the call.

*To view Group Connect call details:*

- ▶ Press **Details**  (left softkey).

In the Details view, these icons appear next to member names or Direct Connect numbers:

-  The member of the Group who is speaking.
-  A member of the Group who is active on the Group Connect call, but not speaking.
-  A member of the Group who has exited the call.
-  A member of the Group who could not be reached on the Group Connect call.
-  A member of the Group whose status is unknown.

## Nextel Direct Send

---

Nextel Direct Send lets you exchange pictures, My Info, contact information, and Groups with other phones that have this capability. You do this through Direct Connect calls.

Nextel Direct Send cannot be used during Talkgroup calls. Pictures cannot be sent in Group Connect calls.

### *Sending a Picture*

When you send a picture using Nextel Direct Send, the picture you send appears on the display of the phone you are engaged in the Direct Connect call with, is saved by that phone, and then is accessible through that phone's My Pictures.

### *Sending a Picture During a Call*


You can send a picture at any time during a Direct Connect call, whether you made or received the call\*.

- \* *Additional charges may apply.*





You cannot talk or listen on a Direct Connect call while a picture is being transmitted. Other activities, such as searching for a picture, do not prevent you from talking or listening.

*To send a picture during a call:*

1. While in a Direct Connect call, press **Browse**  (left softkey). A list of pictures that can be included in a Direct Connect call appears.
2. Select the picture you want to send.
3. Press the Direct Connect button to send the picture.
4. Wait while the picture is transmitted. The Direct Connect call is temporarily interrupted while a picture is transmitted.
5. When prompted, press the Direct Connect button to resume the Direct Connect call.

**Note**

*The first time you send a stored picture after turning the phone on, the message **Messaging Fees May Apply** appears and you are prompted to respond. Press **Accept**  (left softkey) to send the picture. Press **Reject**  (right softkey) to not send the picture.*

## Starting a Call by Sending a Picture



You can start a call by choosing a stored picture from My Pictures.

To do this, you must have the Direct Connect number and IP address of the person you want to send to stored in your Contacts.

**Tip**

*When a person sends you My Info from his or her phone, including his or her Direct Connect number and IP address, you can then easily store this information to Contacts from the Recent Calls list*

*To start a call by sending a picture:*

1. Press  > **My Pictures** and then scroll to or select the picture you want to send in a Direct Connect call.
2. Press .
3. Select **Direct Send Picture**. A list of names from Contacts appears. These names have Direct Connect numbers and IP addresses stored.
4. Select the name of the person you want to send the picture to.



5. Press the Direct Connect button to send the picture.
6. Wait while the picture is transmitted. The Direct Connect call is temporarily interrupted while a picture is transmitted.
7. When prompted, press the Direct Connect button to resume the Direct Connect call.


## Receiving a Picture

When someone sends you a picture using Nextel Direct Send, your phone emits a tone or vibrates and a message appears on the display asking you if you want to accept the picture.


 
Pictures you receive are saved to your phone's memory and are accessible through My Pictures.

When you receive a picture, it appears every time you are in a Direct Connect call with the person who sent it unless you delete the picture from the My Pictures. This occurs for the last 20 people who sent you pictures.


## Accepting a Picture

1. When you see the message asking you if you want to accept the picture, press **Yes**  (left softkey).
2. Wait while the picture is transmitted. The Direct Connect call is temporarily interrupted while a picture is transmitted.
3. When prompted, press the Direct Connect button to resume the Direct Connect call.


### Note

*The first time you accept a stored picture after turning the phone on, the message **Messaging Fees May Apply** appears and you are prompted to respond. Press **Accept**  (left softkey) to accept the picture. Press **Reject**  (right softkey) to not accept the picture.*

### Tip

*If you want to stop the transmission before it is finished, press **Cancel**  (right softkey).*

## Declining a Picture

- ▶ When you see the message asking you if you want to accept the picture, press **No**  (right softkey).

The picture is not transmitted.



## Setting Picture Capability

To turn your phone's ability to send and receive pictures in Direct Connect calls on or off:

1. Press **[Menu]** > **Settings** > **DC/GC Options** > **On/Off Settings**.
2. Select **Pictures** and press **[OK]** to check or uncheck the box.
3. Press **Done** **[Done]** (left softkey) to save the setting.

This setting does not affect your phone's ability to send and receive My Info or contact information.

## Sending My Info and Contact Information

When you send My Info or contact information using Nextel Direct Send, the information you send appears on the display of the phone you are engaged in the Direct Connect call with. After the call, the information appears on the Recent Call list of that phone.

## Sending My Info

You can control what portion of the information in My Info is sent and whether it is sent automatically in every Direct Connect call or only when you choose to send it.

### Tip

When you send My Info, certain information, such as your email address or fax number, cannot be included. To send complete contact information, create an entry for yourself in Contacts and send it.

The information your phone sends always includes My Name and Direct Connect.

It may include **Line 1**, **Line 2**, **Carrier IP**, and **Circuit Data**, depending on the options provided by your service provider and how you set your sending options.

The default setting is **Line 1** only.

To change which fields are sent:

1. Press **[Menu]** > **My Info**.
2. Press **[Menu]**.
3. Select **Direct Send Setup** > **Info To Send**.



4. A checkmark appears next to the fields that will be sent. To add or remove the checkmark, select the field.
5. When you are finished, press **Done** [OK] (left softkey).

*To control whether your information is sent automatically:*

1. Press [OK] > **My Info**.
2. Press [OK].
3. Select **Direct Send Setup > Auto Send**.
4. To set your information to be sent automatically, set this option to **On**.  
– or –  
To set your information to be sent only when you choose to send it, set this option to **Off**.

<b>Note</b>	<i>When you receive your phone, it is set to send your information automatically.</i>
-------------	---

*To send My Info during a call:*

1. While in a Direct Connect call, press [OK].
2. With **Direct Send My Info** highlighted, press [OK].

3. When **Ready to Send** appears on the display, press the Direct Connect button to send the information.

*To start a call by sending My Info:*

1. Press [OK] > **My Info**.
2. Press [OK].
3. With **Direct Send My Info** highlighted, press [OK].
4. Use the keypad to enter the Direct Connect number you want to send the information to.  
– or –  
Press **Browse** [OK] (left softkey). Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.
5. When **Ready to Send** appears on the display, press the Direct Connect button to send the information.





## Sending Contact Information

You can send contact information by selecting a Contacts entry.


Contacts entries that contain only addresses cannot be sent. When Contacts entries are received, they do not include ring tones or pictures.






### To send contact information during a call:

1. While in a Direct Connect call, press .
2. Select **Contacts**.
3. Scroll to the Contacts entry you want to send and do the following:
  - If the Contacts entry you scrolled to is a Group, press  and select **Send Group**. If prompted, press **Yes**  (left softkey) to allow yourself to be part of the group being sent.
  - To send a Contacts entry that is not a Group, press  and select **Send Via... > Send Via PTT**.
4. When **Ready to Send** appears on the display, press the Direct Connect button to send the contact information.

### To start a call by sending contact information:

1. From Contacts, scroll to or select the entry you want to send.
2. Scroll to the Contacts entry you want to send and do the following:
  - If the Contacts entry you scrolled to is a Group, press  and select **Send Via....** If prompted, press

**Yes**  (left softkey) to allow yourself to be part of the group being sent.

- To send a Contacts entry that is not a Group, press  and select **Send Via... > Send via PTT**.
3. Use the keypad to enter the Direct Connect number you want to send the contact to.  
– or –  
Press **Browse**  (left softkey). Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.
  4. When **Ready to Send** appears on the display, press the Direct Connect button to send the contact information.

## Receiving My Info or Contact Information

When you receive My Info or contact information from another phone, an icon appears on the display.



My Info



Contact Information



*To view the information while still in the Direct Connect call:*




1. Press .
2. Select **View Contact**.

You can also view My Info from other phones on the Recent Calls list. See “Sending My Info and Contact Information” on page 47.

## ***Sending Groups Using Direct Send***


You can send a Group using Nextel Direct Send so that the person who receives the Group can use the list.

*To send a Group from the Recent Calls list:*




1. From Recent Calls, scroll to the Group you want to send and press .
2. Select **Send Group**.
3. To include yourself in the Group, press **Yes**  (left softkey).  
– or –  
To exclude yourself from the Group, press **No**  (right softkey).

### **Note**

*If you choose to include yourself and the Group already contains 20 members, you will be prompted that the list is full. You will be excluded from the list.*

4. Use the keypad to enter the Direct Connect number you want to send the contact to.  
– or –  
Press **Browse**  (left softkey). Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.
5. When **Ready to Send** appears on the display, press the Direct Connect button to send the contact information.


*To send a Group from Contacts:*

1. From Contacts, scroll to the Group you want to send and press .
2. Select **Send Via....**
3. To include yourself in the Group, press **Yes**  (left softkey).  
– or –  
To exclude yourself from the Group, press **No**  (right softkey).



**Note**

*If you choose to include yourself and the Group already contains 20 members, you will be prompted that the list is full. You will be excluded from the list.*

4. Select **Send via PTT**.
5. Use the keypad to enter the Direct Connect number you want to send the contact to.
  - or –
 Press **Browse**  (left softkey). Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.
6. When **Ready to Send** appears on the display, press the Direct Connect button to send the contact information.

The Group will display in the Recent Calls list on the phone that you send the Group to.



## Making and Answering Talkgroup Calls

A Talkgroup is a predetermined group of Direct Connect users, created by an account administrator. Talkgroups can contain up to 100 members.

### *Difference Between Group Connect and Talkgroup Calls*



In a Group Connect call, you or another caller determines who can participate in the call. By contrast, participation in a Talkgroup is determined by an administrator. Here are the ways Group Connect and Talkgroup calls differ.



	Group	Talkgroup
<b>Group Icons</b>		
<b>Geography</b>	Nationwide	Limited to local market and network (fleet)
<b>Maximum Group Size</b>	21 (including originator)	100
<b>Set-up</b>	Dynamically, via your phone	Predefined, via Nextel administrator using Talkgroup Management
<b>Voice Activated Dialing</b>	Yes	No

## Joining a Talkgroup

To participate in a Talkgroup, the account administrator must first add you to the membership and then you must “join” the Talkgroup.

1. Press **Contacts**  (right softkey).
2. Scroll to the Talkgroup you want to join.
3. Press **Join**  (left softkey).

You can now receive communications from other members of this Talkgroup.

You will hear all active Talkgroup conversations on your phone. To silence them, press  >**Settings**>**DC/GC Options**>**Talkgroup Silent** and then select **On**.

## Adding More Talkgroups

You can be included in additional Talkgroups by doing one of the following:

- Using Talkgroup Management at [www.nextel.com](http://www.nextel.com). You must be an account administrator to use Talkgroup Management.
- Contacting your Nextel Sales Representative at the time of activation.



## Making Talkgroup Calls

1. Press **#** and then enter the Talkgroup number using the keypad.  
– or –  
Select the Talkgroup from Contacts or the Recent Calls list.
2. Press the Direct Connect button and continue as if making a Direct Connect call.

## Receiving Talkgroup Calls

- ▶ Answer it as you would a regular Direct Connect call.

Only one person at a time may speak on a Talkgroup call. The Direct Connect number or name of the person who is speaking appears on the display screen below the Talkgroup number.

During and immediately after a Talkgroup call ends, press **Options** **□** (right softkey). Your phone displays actions you can take at this time.

## Making and Answering Direct Talk Calls

Nextel Direct Talk allows for two-way radio communication “off the network” between two or more phones equipped with this capability. This feature is very useful in areas without network coverage.

You can make:

- **Code calls** – two-way radio calls conducted off the network and using open channels and codes. In these calls, anyone using your same channel and code can hear your conversation.
- **Private calls** – two-way radio calls conducted off the network and using the wireless phone numbers of the participants. In these calls, others using the same channel cannot listen in.

When using Direct Talk mode, the two phones should be a minimum of six feet apart to maximize performance and improve transmission range. You can only make Direct Talk calls to users located within your range. This varies according to terrain, man-made structures, and atmospheric conditions.



The following features are not available while in Direct Talk mode:

- On-network phone calls.
- On-network Direct Connect, Group Connect, Talkgroup calls, and Call Alerts.
- Data services.
- Sending and receiving messages.
- Call timer.
- Sending Call Alerts.
- Call forwarding.

## ***Setting Your Phone to Direct Talk***

Before you and another caller can use Direct Talk, both of your phones must be set to Direct Talk mode.

1. Press  > **Direct Talk**.
2. Select **Go To Direct Talk**.

After a few seconds, your channel and code appear on the display screen. Your phone displays the last channel and code used for Direct Talk.

*To return to network mode from Direct Talk:*

1. Press  > **DT Options**.
2. Select **Exit Direct Talk**.


After a few seconds, your phone returns to network service.

## ***Code Direct Talk Calls***


Your phone has 10 channels and 15 codes within each channel. Channels represent the radio frequencies on which you make and receive Nextel Direct Talk calls. Codes allow you to minimize interference from others using the same channel as you.

To make Direct Talk Code calls, both parties must be on the same channel and code and have their phones set to Direct Talk. Be aware that others using both your same code and channel can hear your conversation. And, you can hear their conversations as well.

*To set a channel and code:*

1. In Direct Talk mode, press **Edit**  (left softkey).
2. Select **Channel**.
3. Select a channel.



4. Select **Code**.
5. Select a code.
6. Press **Back**  (right softkey) to return to the Direct Talk standby screen.

## Making and Receiving Code Calls in Direct Talk Mode

*To make a Code call using Direct Talk:*

- ▶ In Direct Talk mode, press and hold the Direct Connect button. Your phone displays **Transmitting**, along with the channel and code selected.

The tone emitted from your phone when making a Direct Talk call is four beeps and sounds different from the tone heard on Direct Connect calls conducted on the network.

If you receive an error message, this means:

- There may be no parties on your channel or code.
- You are out of range.



When you receive a Code call using Direct Talk, your phone displays **Receiving**, along with the channel and

code selected. Answer a Direct Talk Code call just like you would any other Direct Connect call.

## *Private Direct Talk Calls*

Private Direct Talk allows you to silence all the calls on a channel that are not directed specifically at you. To do this, you must first set your phone to Private Only.

*To set your phone to Private Only:*

1. In Direct Talk mode, press **Edit**  (left softkey).
2. Select **Code**.
3. Select **Pvt Only**.
4. Press **Back**  (right softkey) to return to the Direct Talk standby screen.

To reach you, other Direct Talk callers must be on your same channel and dial your ten-digit wireless phone number to reach you.



## Receiving a Private Direct Talk Call

The number or name of the person who initiated the call appears on your display screen. Answer the call in the same way you answer a regular Direct Connect call.

A Private Direct Talk call ends a short time after the last party releases the Direct Connect button. The display screen returns to Direct Talk standby mode.

### Note

*You do not need to set your phone to Private Only to receive Private calls. As long as you are on the same channel as your caller, you can receive Private Direct Talk calls.*

## Making a Private Direct Talk Call

You can make Private Direct Talk calls to any person on your same channel. You do not need to set your phone to Private Only.

*To make a private Direct Talk Call:*

1. In Direct Talk mode, enter the ten-digit wireless phone number of the person you want to call on your channel. (You can also scroll to the number in Contacts or Recent Calls list.)

2. Make the call in the same way you make a regular Direct Connect call. The number or name of the person you are calling appears on your display screen.

If you receive an error message, it means:

- You may not be using a valid wireless phone number.
- The person that you are trying to reach may not be in Direct Talk mode.
- The person that you are trying to reach is set to a different channel, or is out of range.

## Receiving All Calls on a Channel

You can set your phone to receive all Direct Talk transmissions that are within range and set to the same channel. Do this by selecting **Receive All**, instead of a code.

However, you cannot initiate a call when the code is set to Receive All. If you press the Direct Connect button to initiate a Direct Connect call and your code is set to Receive All, you receive an error message.



*To set the code to Receive All:*

1. In Direct Talk mode, press **Edit** [ ] (left softkey).
2. Select **Code**.
3. Select **Receive All**.
4. Press **Back** [ ] (right softkey) to return to the Direct Talk standby screen.

## ***Making Emergency Calls While in Direct Talk Mode***

If you attempt to make an emergency 911 call while in Direct Talk mode, your phone automatically exits Direct Talk mode and attempts to find a network signal.

If you are out of network coverage, your phone cannot make an emergency 911 call until you return to a network coverage area. You must wait until the phone reconnects to a network before attempting to make an emergency 911 call.

## ***Call Alerts***

Sending a Call Alert lets the recipient know you want to talk to him or her on a Nextel Direct Connect call. When you send a Call Alert, the recipient's phone alerts them and displays your name or Direct Connect number.

### ***Sending Call Alerts***

1. Enter the Direct Connect number you want to send the alert to.
2. Press **Alert** [ ] (left softkey).
3. When "Ready to Alert" appears, press the Direct Connect button to send the Call Alert.

#### ***Note***

*You can send a Call Alert from Recent Calls or Contacts. Find the Direct Connect number you want to send a Call Alert to and continue as explained above.*



## Responding to a Call Alert

**Note** You can set a distinctive ringer for Call Alerts. See “Ring Tones” on page 65.

*To answer a Call Alert:*

- ▶ Press the Direct Connect button to make a Direct Connect call to the sender.

*To clear a Call Alert:*

- ▶ Press **Clear**  (right softkey).

*To store a Call Alert in the Call Alert queue:*

- ▶ Press **Queue**  (left softkey).

**Note** The Recent Calls list also stores Call Alerts you have received. They appear as Direct Connect calls. Call Alerts remain in your Recent Calls list until you delete them or until they reach the end of the list.

## Using the Call Alert Queue


 
When you queue a Call Alert, it remains in the Call Alert queue until you make a Direct Connect call to the sender or delete it.

### Viewing Call Alerts

1. Press  > **Call Alert**.
2. Scroll through the list.

### Viewing Date and Time

*To view the date and time a Call Alert was received:*


1. Press  > **Call Alert**.
2. Select the Call Alert you want information on and press .



## Responding to Call Alerts in the Queue



After you queue a Call Alert, you can respond to it by making a Direct Connect call to the sender or sending a Call Alert to the sender.

*To make a Direct Connect call to the sender:*

1. Press  > **Call Alert**.
2. Scroll to the Call Alert you want to respond to.
3. Press the Direct Connect button to begin the call.




This removes the Call Alert from the queue.

*To send a Call Alert to the sender:*




1. Press  > **Call Alert**
2. Scroll to the Call Alert you want to respond to.
3. Press **Alert**  (left softkey). **Ready to Alert** appears on the display.
4. Press the Direct Connect button until **Alert Successful** appears on the display.

## Deleting Call Alerts

*To delete a Call Alert from the queue:*

1. From the Call Alert queue, scroll to the Call Alert you want to delete.
2. Press .
3. Select **Delete**.
4. Press  or press **Yes**  (left softkey) to confirm.

*To delete all Call Alerts from the queue:*

1. From the Call Alert queue, press .
2. From the Call Alert menu, select **Delete All**.
3. Press  or press **Yes**  (left softkey) to confirm.



# Settings

---

- ◆ *Using the Settings Menu (page 60)*
- ◆ *Sound Settings (page 65)*
- ◆ *Display Settings (page 70)*
- ◆ *Messaging Settings (page 72)*
- ◆ *Temporarily Turning Off Transmissions (Airplane Mode) (page 74)*
- ◆ *Setting One Touch Direct Connect (page 74)*
- ◆ *Headset Options (page 76)*
- ◆ *Profiles (page 76)*
- ◆ *Phone Setup Options (page 81)*


*You can customize your phone to sound, look, and operate just the way you want it to.* This section describes how to change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

## Using the Settings Menu

---

Settings contains many submenus that let you customize your phone.

*To access the Settings menu and submenus:*

1. Press  > **Settings**.
2. Select the submenu you want.

For information on applying groups of settings to your phone together, see “Profiles” on page 76.

## Display/Info Features

The *Display/Info* menu controls how the keypad and display appear:

- **Wallpaper** — changes the wallpaper that appears on the display screens.
- **Text Size** — sets the size of text on the display.
- **Theme** — changes the look of the display.
- **Home Icons** — controls whether main menu icons appear in standby mode.
- **Backlight** — controls backlight illumination.



- **Clock** — controls whether the time and date appear in standby mode; sets time and date format; sets year.
- **Menu View** — controls whether the items on your main menu and Java applications menu appear as large icons or a list.
- **Large Dialing** — sets large digits to appear in standby mode when you enter a number.
- **Status Light** — allows you to turn the status light on and off.
- **Language** — sets the language that your phone displays.

## Phone Calls Features

The **Phone Calls** menu controls how your phone handles phone calls:

- **Set Line** — sets phone line 1 or phone line 2 as the active line for outgoing calls. If you are not provisioned for a second line and you set your line to line 2, you will not be able to make or receive calls.
- **Any Key Ans** — lets you answer calls by pressing any key on the keypad.
- **Auto Redial** — sets your phone to automatically redial calls you make when the system is busy.

- **Call Waiting** — See “Responding to Call Waiting” on page 183.
- **Auto Ans** — sets your phone to automatically answer an incoming call after a specified number of rings. When this feature is on, the phone answers by connecting you to the caller; it does not send the call to voicemail, unless you are out of coverage or on the line.
- **Minute Beep** — causes a beep to sound every minute of an active call.
- **Call Duration** — causes the duration of a call to appear on the display when the call ends.
- **TTY** — See “Telecommunications Relay Service” on page 188.
- **Notifications** — See “Message Notifications” on page 149.
- **DTMF Dialing** — sets whether you can hear DTMF (dual tone multi-frequency) tones with your keypad presses. Set to **Always** to always hear keypad presses; set to **Never** to never hear keypad presses; set to **In Call Only** to hear keypad presses only while in a call.



- **Prepend** — lets you specify a prefix, such as a country code for international calls, to be automatically added to phone numbers you dial.

## DC/GC Options Features


The **DC/GC Options** menu controls how your phone handles Direct Connect calls, Group Direct calls, and Talkgroup calls:

- **Tkgrp Silent** — controls whether you hear your Talkgroup calls.
- **Tkgrp Area** — lets you define your Talkgroup area.
- **One Touch DC** — sets One Touch Direct Connect.
- **Alert Type** — controls how your phone notifies you when you receive Direct Connect calls, Group Connect calls, and Talkgroup calls.
- **On/Off Settings** — sets your phone's ability to send and receive pictures in Direct Connect calls. See "Starting a Call by Sending a Picture" on page 45.
- **Store Rcvd Info** — lets you specify a prefix, such as a country code for international calls, to be automatically added to phone numbers you receive in My Info from other phones, when you store the My Info to Contacts. Select **Prefix** to enter the prefix to be

added. Set **Add Prefix** to **Ask Me** to set your phone to display a prompt asking you whether you want the prefix added as you save My Info from other phones to Contacts.

## Personalize Features

The **Personalize** menu makes main menu items easier to access from standby mode.

- **Menu Options — Reorder Menu** lets you change the order of the items on the main menu by grabbing and moving them; **Add/Remove Apps** lets you create a shortcut to a Java application on the main menu.
- **Up Key** — sets the main menu item you access when you scroll up in standby mode.
- **Down Key** — sets the main menu item you access when you scroll down in standby mode.
- **Left Key** — sets the main menu item you access when you scroll left in standby mode.
- **Right Key** — sets the main menu item you access when you scroll right in standby mode.
- **Center Key** — sets the main menu item you access when you press  in standby mode.



- **Left Sftkey** — sets the main menu item you access when you press the left softkey in standby mode.
- **Right Sftkey** — sets the main menu item you access when you press the right softkey in standby mode.
- **Power Up** — sets the main menu item you see when you power on your phone. To set standby mode to be the first thing you see when you power on your phone, select *Default Ready*.

## Volume Features

The **Volume** menu sets the volume of sounds your phone makes:

- **Line 1** — sets ringer volume for phone line 1.
- **Line 2** — sets ringer volume for phone line 2.
- **Messages** — sets the volume of message notifications and Datebook reminders.
- **Earpiece** — sets the volume of sound coming out of the earpiece.
- **Speaker** — sets the volume of sound coming out of the speaker.
- **Keypad** — sets the volume of sound associated with pressing keys and buttons.

- **Java Earpiece** — sets the volume of sound associated with Java applications coming out of the earpiece.
- **Java Spkr** — sets the volume of sound associated with Java applications coming out of the speaker.
- **Data** — sets the volume of sounds that notify you that you are receiving a circuit data call.

## Security Features

The **Security** menu lets you turn security features on and off and change passwords:

- **Phone Lock** — turns on a feature that locks your phone: **Lock Now** takes effect immediately; **Auto Lock** takes effect when your phone is powered off and then on. An unlock code is required to enable this feature, to unlock the phone, and to set a new unlock code. Contact Nextel Customer Service for your default unlock code.
- **Keypad Lock** — locks the phone's keypad, either immediately or automatically after a set period of inactivity.
- **SIM PIN** — enables and disables your phone's SIM PIN security feature. See "Turning SIM PIN On and Off" on page 85.



- **GPS PIN** — enables and disables your phone's GPS PIN security feature. See “Setting the GPS PIN Security Feature” on page 90.
- **Change Passwds** — changes your phone unlock code, security code, SIM PIN, and GPS PIN.

## Advanced Features

The **Advanced** menu contains advanced Settings features.

- **Alert Timeout** — sets the amount of time a tone continues to sound and the logo backlight continues to flash when you receive a message notification, Call Alert, or Datebook reminder.
- **Headset/Spkr** — sets headset options. See “Headset Options” on page 76.
- **Connectivity** — **Network ID** sets the phone's network IDs and their roaming options under the direction of Nextel Customer Service; **Master Reset** lets Nextel Customer Service reset your service in the event of a security or provisioning problem.
- **Reset Defaults** — **Reset Settings** returns all settings to their original defaults; **Reset All** returns all settings to

their original defaults and erases all stored lists. Use only under the direction of Nextel Customer Service.

- **Return to Home** — **After Phone** controls how long the Recent Calls list displays after phone calls; **After DC** controls how long the Recent Calls list displays after Direct Connect calls.
- **Transmitters** — controls your phone's radio transmitters. Selecting **Off** prevents your phone from making or receiving phone calls, Direct Connect calls, Group Connect calls, or Talkgroup calls, or transferring data.
- **Baud Rate** — sets the baud rate at which your phone communicates with a laptop computer or similar device.








## Sound Settings

### Ring Tones

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

#### Selecting Ringer Types





Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

1. Press  > *Ring Tones*.
2. Scroll through the list of ring tones. A sample ringer will sound as you highlight each option.
3. Press  or press **Assign**  (left softkey).
4. Select the function(s) to which you want to assign the current ringer by highlighting the option and pressing . (A check mark will appear next to selected options).
  - Phone Line 1
  - Phone Line 2
  - Call Alert
  - Voice Mail
  - Messages
  - Net Alert
  - Direct Send Alert
  - Reminders
5. When you are finished, press **Done**  (left softkey) to assign the ringer to the selected function(s).



## Assigning a Ring Tone to a Contact

You can also assign a ringer to a specific contact entry so you know who's calling without looking at the phone.


 

1. Press  > *Ring Tones*.
2. Scroll through the list of ring tones and select the one you want to assign. A sample ringer will sound as you highlight each option
3. Press  or press **Assign**  (left softkey).
4. Select **A Contact...**
5. Highlight the Contacts entry to which you want to assign the ring tone.
6. Press  to assign the ringer.

## Vibrate Settings

### Vibrate All

The Vibrate All option allows you to mute all sounds without turning your phone off.

*To activate Vibrate All:*


1. Press  > *Ring Tones* > *Vibrate All*.
2. Press .
3. Set this option to **On** or **Locked**, and then press .

#### *Tip*




To set **Vibrate All** to **On** or **Locked** using the volume controls: Press the volume controls to turn down the volume as far as possible to set **Vibrate All** to **On**. Continue to hold the volume control down to set **Vibrate All** to **Locked**. Setting this option to **Locked** requires you to press and hold the volume control up to turn **Vibrate All** off. The **Locked** option helps prevent you from accidentally turning **Vibrate All** off.



### To deactivate Vibrate All:




1. Press and hold the volume key up to unlock vibrate all.
2. Press the volume key up repeatedly to select a volume level.  
– or –  
Press  > **Ring Tones** > **Vibrate All**. Set this option to **Off**.

These icons indicate how the ringer is set:

-  The phone always vibrates instead of making a sound.
-  The phone vibrates instead of making a sound for phone calls.
-  Direct Connect calls, Group Connect calls, and Talkgroup calls are heard through the earpiece, not the speaker.

## Ring and Vibrate

To set your phone to ring and vibrate when you receive phone calls or Call Alerts:


1. Press  > **Ring Tones**.
2. Make sure **Vibrate All** is set to **Off**.
3. Scroll through the list of ring tones and highlight the one you want to assign.
4. Press  > **Assign w/Vibe**.
5. Select **Phone Line 1** and/or **Phone Line 2** and press **Done** .

This icon  appears on the display.

## Silence All

The Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:



- ▶ With the phone in standby mode press and hold the volume key down until the ringer level is set at 0. (The screen will display .)



### *To deactivate Silence All:*

- ▶ Press the volume key up repeatedly to select a volume level.



### *To set your phone to vibrate instead of making a sound for some features but not others:*

1. Press  > **Ring Tones**.
2. Make sure **Vibrate All** is set to **Off**.
3. Select **Vibrate** from the list of ring tones.
4. Select the features you want to set to make no sound.
5. When you are finished, press **Done**  (left softkey).

#### **Note**

To set ring options for Direct Connect calls, Group Connect calls, and Talkgroup calls, see “Vibrate Settings” on page 66.

## **Viewing Ring Tone Assignments**

1. Press  > **Ring Tones**.
2. Make sure **Vibrate All** is set to **Off**.
3. Highlight any ring tone and then press  > **Overview**.

4. Scroll to view ring tones assigned to features and Contact entries.

## **Downloading More Ring Tones**

If you want to use other ring tones, you can download them into your phone for a fee.

Check the **Downloads** menu option on your phone for a catalog of additional items available for purchase and download directly from your phone. You can also access downloadable ring tones from the **Ring Tones** menu.

### *To purchase and download new ringtones:*

- ▶ Press  > **Ring Tones** > **Buy Ring Tones**.



#### **Note**

Ring tones may be downloaded only once. If you delete a ring tone from your phone and wish to reassign it, you must purchase it again.



## Managing Memory

To view the amount of memory available for custom ring tones:

1. Press  > **Ring Tones**.
2. Make sure **Vibrate All** is set to **Off**.
3. Highlight any ring tone and press  > **Memory Usage**.

Deleting custom ring tones frees memory.

### Note




Ring tones are stored in your phone using the same memory space used to store messages, voice records, pictures, and Java application data that are stored in your phone's memory. Deleting or moving some of these other items frees memory for ring tones.

## Deleting Custom Ring Tones

Deleting a ring tone from the list of ring tones deletes it from your phone.

Except for DRM ring tones, if you delete a ring tone that you purchased from your phone, you will have to purchase it again. Under certain conditions, some DRM vendors will not charge you if you download an item multiple times within a given time frame. Please contact the DRM vendor to learn more about their download regulations.

To delete a custom ring tone:

1. Press  > **Ring Tones**.
2. Make sure **Vibrate All** is set to **Off**.
3. Scroll to the ring tone you want to delete and press  > **Delete**.
4. Press **Yes**  (left softkey) to confirm.



## Adjusting the Phone's Volume Settings

Adjust your phone's volume settings to suit your needs and your environment.

1. Press **[Menu]** > **Settings** > **Volume**.
2. Select **Line 1, Line 2, Messages, Earpiece, Speaker, Keypad, Java Earpiece, Java Spkr** or **Data**.
3. Using the navigation key, choose a volume level and press **[OK]**.

**Tip** You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

## Minute Beep

Set your phone to alert you with an audible tone once a minute during a voice call.

1. Press **[Menu]** > **Settings** > **Phone Calls** > **Minute Beep**.
2. Select **On** or **Off** and press **[OK]**.

## Display Settings

---

### Changing the Backlight Time Length

Select how long the display screen and keypad remain backlit after any keypress is made.

1. Press **[Menu]** > **Settings** > **Display/Info** > **Backlight**.
2. Select **Backlight** or **Java Timer**, and then press **[OK]**.
3. Highlight a time and press **[OK]**.



**Note** Long backlight settings reduce the battery's talk and standby times.

### Changing the Display Screen

Choose what you see on the display screen while powering on or off and when in standby mode.


1. Press **[Menu]** > **Settings** > **Display/Info** > **Wallpaper**.
2. Select **Wallpaper** and press **[OK]**. (A list of available images will be displayed.)



3. Select an image and press **View**  (left softkey) to view it. Press **Back**  (right softkey) to return to the available images.
4. Press  to assign an image.



## Setting Wallpaper to Change Automatically

When you set your wallpaper to change automatically, your phone uses each of the pictures in **My Pictures** as wallpaper, cycling through them at a pace you choose.

1. Press  > **Settings** > **Display/Info** > **Wallpaper** > **Auto Cycle**.
2. Select how often you want the wallpaper to change.

## Changing the Phone's Menu Style



Choose how your phone's menu is displayed on the screen.

1. Press  > **Settings** > **Display/Info** > **Menu View**.
2. Select an option and press .
  - **Icon View** to view the main menu as a grid of icons. Icons animate when they are highlighted.

- **List** to display the menu as a list.




## Changing the Theme

Customize your phone's display appearance by selecting a color scheme to reflect your personality.

1. Press  > **Settings** > **Display/Info** > **Theme**.
2. Select an option and press .

## Changing the Clock Display

Select a format for the time and date display and choose whether the time and date appear in standby mode.

1. Press  > **Settings** > **Display/Info** > **Clock**.
2. Select **Display**, **Time Format**, or **Date Format** and then press .
3. Make your display selection and press .



### Note

The year is set by the network, and even though it is an option, it cannot be changed.



## Changing the Text Size

Adjust the font when entering text (for example, when using the notepad or when adding a Contacts entry).

1. Press  > **Settings** > **Display/Info** > **Text Size**.
2. Select **Zoom**, **Standard**, or **Compressed** and press .

## Messaging Settings

---


Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call.

Messaging settings make text messaging easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages.

### Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can


also choose to be notified with a sound while making a phone call.

1. Press  > **Settings** > **Phone Calls** > **Notifications**.
2. Select the option you want:
  - **Receive All** sounds a tone during calls for all types of messages except MMS messages.
  - **Msg Mail Only** sounds a tone during calls for text messages; tones for all other types of messages are held until your call ends.
  - **Delay All** holds tone sounding for all types of messages until your call ends.

#### Note

*Delay All is the default setting.*



#### Tip

*To set notification options during a call press  > In Call Setup > Notifications.*

## Deleting Old Messages

Delete messages you have read whenever you like, or have your phone delete them automatically for you.

*To automatically delete read messages:*

1. Press  > **Messages** >  > **Setup** > **Cleanup**.



2. Select *Inbox* or *Sent Items* and press **OK**.
3. Choose a clean-up option.
4. To automatically delete messages now, press **OK** or press **Yes** **OK** (left softkey).
  - or –
  - To delete messages later, press **No** **OK** (right softkey).

## Adding a Customized Signature

Add a customized signature to each message you send.

1. Press **OK** > *Messages* > **OK** > *Setup* > *Signature*. If you do not wish to attach a signature to your outgoing messages, press *Delete* **OK** (left softkey).
2. Enter a signature and press **OK**. (See “Entering Text” on page 20.)

## Managing Preset Messages

Your phone is loaded with two types of preset messages, Quick Notes and Replies, to help make sending text messages easier. You can also create custom Quick Notes and Replies to suit your needs.

*To add a new preset message:*

1. Press **OK** > *Messages* > **OK** > *Setup* > *Quick Notes* or *Replies*. (The list of preset messages will be displayed.)
2. To add a new message, press *New* **OK** (left softkey) or select *[New Quicknote]*.
3. Enter your message (see “Entering Text” on page 20), and press **OK**. (Your new message will be added to the end of the list.)

*To delete a Custom Quick Note or Reply:*

1. Press **OK** > *Messages* > **OK** > *Setup* > *Quick Notes* or *Replies*. (The list of preset messages will be displayed.)
2. To delete a custom message, select it and press *Delete* **OK** (left softkey).
  - or –
  - To delete all custom messages, select a custom message and press **OK** > *Delete All*.

*To edit a custom Quick Note or Reply:*

- ▶ Select the message, make your changes (see “Entering Text” on page 20), and press **OK** to save.



## Temporarily Turning Off Transmissions (Airplane Mode)

Sometimes you may want to have your phone on, but turn off its ability to make and receive calls and other transmissions.

*To set your phone so that it cannot make or receive phone calls, Direct Connect calls, Group Connect calls, Talkgroup calls, or transfer data:*

1. Press **[M]** > **Settings** > **Advanced** > **Transmitters**.
2. Set this option to **Off**.
3. Press **Yes** **[Y]** (left softkey).

**Note** While powering on your phone, you can turn transmitters off by pressing **[M]** for more than five seconds.

*To restore your phone's ability to do all these things:*

- ▶ Set this option to **On** and then press **Yes** **[Y]** (left softkey).

### Note

When Transmitters is set to Off, your phone's Bluetooth capability is disabled, and all active Bluetooth connections are dropped.

## Setting One Touch Direct Connect

One Touch Direct Connect sets your phone to call the most recent Direct Connect number or Group on the Recent Calls list, or a Direct Connect number you choose, every time you press the Direct Connect button.

*To set your phone to quickly make a Direct Connect call, create an Group Connect list, or make a Group Connect call:*

1. Press **[M]** > **Settings** > **DC/GC Options** > **One Touch DC**.
2. Set this option to **Quick PTT** and press **[OK]**.

*To set your phone to call the most recent Direct Connect number or Group on the Recent Calls list:*

1. Press **[M]** > **Settings** > **DC/GC Options** > **One Touch DC**.



2. Set this option to **Last Call** and press **OK**.

*To set your phone to call a Direct Connect number you choose:*

1. Press **Menu** > **Settings** > **DC/GC Options** > **One Touch DC** > **Assigned No.**
2. Enter the Direct Connect number you want your phone to call every time you press the Direct Connect button.
  - Enter the number using your keypad.
  - or –
  - Press **Search** **Left Softkey**. Select **Contacts**, **Recent Calls**, or **Memo**. Select the number you want to enter.

**Tip**

*If you are entering a Talkgroup number, enter # before the number.*

3. Press **OK**.

*To set your phone to send a picture:*

1. Press **Menu** > **Settings** > **DC/GC Options** > **One Touch DC**.
2. Set this option to **Send Picture**.

*To set your phone to send your phone's information:*

1. Press **Menu** > **Settings** > **DC/GC Options** > **One Touch DC**.
2. Set this option to **Send My Info**.

*To set your phone to send a contact:*

1. Press **Menu** > **Settings** > **DC/GC Options** > **One Touch DC**.
2. Set this option to **Send Contact**.

*To turn off One Touch Direct Connect:*


1. Press **Menu** > **Settings** > **DC/GC Options** > **One Touch DC**.
2. Set this option to **Off**.



## Headset Options

---

To set your phone to send incoming sound to a headset only, or to a headset and a speaker at the same time:

1. Press  > **Settings** > **Advanced** > **Headset/Spkr.**
2. Select **HdsetOnly** to send incoming sound to the headset only.  
– or –

Select **Hdset&Spkr** to send incoming sound to the headset and ring tones to the speaker.

## Profiles

---

A profile is a group of settings saved together so that you can apply them to your phone easily.

A profile contains these settings:



- **Ring Tones** — sets all options described in “Ring Tones” on page 65, except assigning ring tones to Contacts.
- **Display/Info** — sets **Wallpaper**, **Theme**, **Text Size**, and **Backlight** options. See “Display/Info Features” on page 60.
- **Phone Calls** — sets **Set Line** and **Auto Answer** options. See “Phone Calls Features” on page 61.
- **Volume** — sets all options described in “Volume Features” on page 63.
- **Call Filter** — controls which calls, Call Alerts, and message notifications your phone responds to. See “Setting Call Filtering” on page 80.
- **Advanced** — sets headset options. See “Headset Options” on page 76.

Your phone arrives with preset profiles. You can also create your own profiles.



## Viewing Profiles

*To view the profiles stored in your phone:*

1. Press  > **Profiles**.
2. Scroll to the profile you want to view.
3. Press **View**  (left softkey).



### Tip

*The profile that is currently in effect on your phone has a checkmark next to it.*

4. Scroll to view settings.

## Switching Profiles

*To apply a profile to your phone:*

1. Press  > **Profiles**.
2. Scroll to the profile you want to apply.
3. Press .

The profile you selected is now in effect.



## How Changing Settings Affects Profiles

Many of the settings contained in profiles can be set without switching or editing profiles — for example, by selecting **Settings** or **Ring Tones** to set options, or by setting the volume of the phone's ring using the volume controls.

When you do this, your phone either:

- Updates the profile in effect to reflect these changes, without notifying you.  
– or –
- Creates a temporary profile that contains these changes.

*To set your phone to create a temporary profile that contains changes you make to settings:*

1. Press  > **Profiles**.
2. Press .
3. Select **Setup > Temp Profile**.
4. Set this option to **On**.



*To set your phone to update the profile in effect to reflect any changes you make to settings:*

- ▶ Set **Temp Profile** to **Off** in step 4 above.

## Temporary Profiles

If your phone is set to create temporary profiles, a temporary profile is created when you make changes to settings without switching or editing profiles.

A temporary profile is based on the profile in effect when you made the changes, but reflects the changed settings.

A temporary profile stays in effect until you switch profiles, power off your phone, or delete it (or the profile it is based on) from the list of profiles.




If you do not store a temporary profile, it is deleted when you switch profiles or power off your phone.

A temporary profile is automatically given the same name as the profile it is based on, but with an asterisk (\*) in front of it.



When you view a temporary profile's settings, the options that differ from the profile it is based on have an asterisk in front of them.

## Storing a Temporary Profile

*To store a temporary profile as a new profile:*

1. Press  > **Profiles**.
2. Scroll to the temporary profile.
3. Press .
4. Select **Store As New**.
5. Enter the name you want to give the profile. When you are finished, press .

*To overwrite the profile the temporary profile is based on:*

1. Press  > **Profiles**.
2. Scroll to the temporary profile.
3. Press .
4. Select **Store Changes**.

### Note

*The temporary profile is stored with the name of the profile it is based on. The profile it is based on, as it existed before you made changes to settings, is gone.*



## Creating Profiles

1. Press **[U]** > *Profiles*.
2. Select *[New Profile]*.  
– or –  
Scroll to any profile, press **[U]**, and then select *New*.
3. Enter the name you want to give the profile.  
When you are finished, press **[OK]**.
4. If you want to base this profile on an existing profile, select *Copy From* and then select the profile you want to base this profile on. If you do not choose a profile to copy from, the new profile is based on a default profile.
5. Press *Create* **[◻]** (left softkey).
6. Scroll through the list of options and set their values.
7. When you are finished, press *Done* **[◻]** (right softkey).

## Editing Profiles

1. Press **[U]** > *Profiles*.
2. Scroll to the profile you want to edit.
3. Press **[U]**.
4. Select *Edit*.
5. Scroll through the list of options and set their values.
6. When you are finished, press *Done* **[◻]** (right softkey).





## Deleting Profiles

To delete a profile:

1. Press **[U]** > *Profiles*.
2. Scroll to the profile you want to delete.
3. Press **[U]**.
4. Select *Delete*.
5. Press **[OK]** or press *Yes* **[◻]** (left softkey).




To delete all profiles:

1. Press  > **Profiles**.
2. Press .
3. Select **Delete All**.
4. Press  or press **Yes**  (left softkey) to confirm.

## Setting Call Filtering

The call filtering setting in each profile lets you control which calls, Call Alerts, and message notifications your phone notifies you of, and which it ignores.

1. While setting options for a profile, select **Call Filter**.
2. Select a filtering option
  - **Phone** – sets filtering options for phone calls.
    - **Off** – sets your phone to notify you of all phone calls.
    - **All** – sets your phone to ignore all phone calls.
    - **All Contacts** – sets your phone to notify you only of phone calls from numbers stored in Contacts.

- **Some Cntcs** – sets your phone to notify you only of phone calls from specific Contacts entries. Select up to five Contacts entries that you want to be notified of calls from. When you are finished, press **Done**  (right softkey).
- **DC/GC** – sets filtering options for Direct Connect calls and Talkgroup calls.
  - **Off** – sets your phone to notify you of all Direct Connect calls and Talkgroup calls.
  - **On** – sets your phone to ignore all Direct Connect calls and Talkgroup calls.
- **Group** – sets filtering options for Group Connect calls.
  - **Off** – sets your phone to notify you of all Group Connect calls.
  - **On** – sets your phone to ignore all Group Connect calls.
- **Alerts** – sets filtering options for Call Alerts.
  - **Off** – sets your phone to notify you of all Call Alerts.
  - **On** – sets your phone to ignore all Call Alerts.




- **Notifications** – sets filtering options for message notifications.
  - **Off** – sets your phone to notify you of all messages.
  - **Voice Messages** – sets your phone not to sound a tone or vibrate when you receive voice messages.
  - **Text Messages** – sets your phone not to sound a tone or vibrate when you receive text messages.
  - **All** – sets your phone not to sound a tone or vibrate when you receive any message.

**Note** When you receive a message you have set not to sound a tone or vibrate, the message notification screen still appears.

3. Press **Done**  (right softkey).

## Phone Setup Options


### Shortcuts


Your phone offers you the option of assigning shortcuts to favorite or often-used functions. Pressing the  key in standby mode followed by the assigned shortcut key will launch your personally designated shortcuts.

### Creating a Shortcut

**Note** When you receive your phone, all number keys may already be assigned to shortcuts. If this is the case, you can create new shortcuts by deleting or replacing existing shortcuts

1. Go to the menu item you want to create a shortcut for.

For example, if you want to create a shortcut to the screen for creating a new Contacts entry: Press  > **Contacts**, and then highlight **[New Contact]**.

2. Press and hold  until a confirmation screen appears.



3. Press **OK** or press **Yes** (left softkey).
4. Select **Key**.
5. Press the number key you want to assign to the shortcut and press **OK**.
6. If you want to record a voice name for the shortcut, select **Voice**. As directed by the screen prompts, say and repeat the name you want to assign to the number. Speak clearly into the microphone.
7. Press **Done** (left softkey).
8. If the number key you chose is already assigned to a shortcut, a prompt appears asking if you want to replace the existing shortcut.
  - Press **Yes** (left softkey) to replace the existing shortcut.
  - Press **No** (right softkey) if you want to keep the existing shortcut and assign another number key to the shortcut.

## Using a Shortcut

*To use a shortcut if you know the shortcut number:*

1. From standby mode, press **[number]**.
2. On your keypad, press the number assigned to the shortcut.

*To use a shortcut if you do not know the shortcut number:*

1. Press **[Menu] > Shortcuts**.
2. Scroll to the shortcut you want to use.
  - or –

If you assigned a voice name to the shortcut: Press and hold **[Voice]**. Say the voice name into your phone. The shortcut with that voice name is then highlighted.

3. Press **OK**.

## Editing a Shortcut

*To change the number assigned to a shortcut:*

1. Press **[Menu] > Shortcuts**.
2. With any shortcut highlighted, press **[Menu]**.



3. Select **Reorder**.
4. Scroll to the shortcut you want to move.
5. Press **Grab** [icon] (left softkey).
6. Scroll to the place where you want the shortcut to appear.
7. Press **Insert** [icon] (left softkey).
8. Repeat step 4 through step 7 for all the items you want to move.
9. Press **Done** [icon] (right softkey).

*To change the number or voice name assigned to a shortcut:*

1. Press [icon] > **Shortcuts**.
2. Highlight any shortcut.
3. Press **Edit** [icon] (left softkey).
4. With **Key** or **Voice** highlighted, press [OK] to change assignments.
5. Press **Done** [icon] (right softkey) when you have finished.

## Deleting Shortcuts

*To delete a shortcut:*


1. Press [icon] > **Shortcuts**.
2. Scroll to the shortcut you want to delete.
3. Press [icon].
4. Select **Delete**.
5. Press [OK] or press **Yes** [icon] (left softkey) to confirm.





*To delete all shortcuts:*

1. Select [icon] > **Shortcuts**.
2. With any shortcut highlighted, press [icon].
3. Select **Delete All**.
4. Press [OK] or press **Yes** [icon] (left softkey) to confirm.





## Call Answer Mode

Select how to answer incoming calls on your phone: whether you want to be required to press  or to press any number key.

1. Press  > **Settings** > **Phone Calls**.
2. Select an option and press .
  - **AnyKey Answer:** Press  and select **On** to allow an incoming call to be answered by pressing any key.
    - or –
  - Select **Off** to require  to be pressed to answer all incoming calls.
  - **Auto Ans** to set your phone to automatically answer an incoming call after a specified number of rings.
    - **Off** to disable Auto-Answer.
    - **1 Ring, 2 Rings, 3 Rings** or **4 Rings** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.


 
## Display Language

You can choose to display your phone's on screen menus in English, French, or Spanish.

1. Press  > **Settings** > **Display/Info** > **Language**.
2. Select **English**, **Español**, **Français**, or **Automatic** and press .

## Setting Prepend Dialing

The Prepend feature lets you set a prefix to be added to the beginning of all dialed numbers, such as a country code for international calls.

1. Press  > **Settings** > **Phone Calls** > **Prepend**.
2. Select **Prepend** > **On**.
3. Enter the desired prefix in the **Number** field (such as +1 for international calls) and then press .
  - To deactivate this feature, select **Off** during step 2 above.

### Note

*This setting does not apply to 911 or Sprint 411.*



## Security

- ♦ *SIM Card Security (page 85)*
- ♦ *Your Phone's Lock Feature (page 87)*
- ♦ *Your Phone's Keypad Lock (page 87)*
- ♦ *Resetting Your Phone (page 88)*
- ♦ *GPS Privacy Options (page 89)*
- ♦ *Java Applications & GPS Security (page 90)*

*By using the security settings on your phone, you receive peace of mind without sacrificing flexibility.* This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

## SIM Card Security


**Important**

*Except for making emergency calls, your phone does not function without the SIM card.*

### SIM Card's PIN

You can protect access to your phone by using the SIM card's PIN (Personal Identification Number). When you enable SIM PIN, you must enter the PIN each time you power up the phone. You can change or disable the SIM PIN.

### Turning SIM PIN On and Off

1. Press  > **Settings** > **Security** > **SIM PIN**.
2. Select **On** or **Off**.
3. Enter the current SIM PIN.


**Important**

*The default SIM PIN is 0000. Change your PIN to prevent fraudulent use of the SIM Card.*

4. Press **Ok**  (left softkey).







## Entering the PIN

1. Turn on your phone.
2. When the **SIM PIN** screen appears, enter your SIM PIN and press **Ok**  (left softkey).

### **Important**

*If you enter your PIN incorrectly three times, your SIM card is blocked. See "Unlocking the PIN" on page 86*

## Changing the PIN

1. Press  > **Settings** > **Security** > **Change Passwds** > **SIM PIN**.
2. Enter the current SIM PIN and press **Ok**  (left softkey).
3. Enter the new SIM PIN and press **Ok**  (left softkey).
4. Reenter the new SIM PIN to confirm.
5. Press **Ok**  (left softkey).

## Unlocking the PIN

If you enter your PIN incorrectly three times, your SIM card is blocked. To unblock your SIM card, you must contact Nextel Customer Service to get a PIN Unblock Code (PUK). Follow their instructions for unblocking your SIM PIN.

### **Important**

*If you unsuccessfully enter the PUK code ten times, your SIM card is permanently blocked and must be replaced. If this happens, you get a message to contact Nextel Customer Service. Except for making emergency calls, your phone does not function with a blocked SIM card.*



## Your Phone's Lock Feature

### Locking Your Phone

When your phone is locked, you can only make calls to 911. To lock and unlock your phone, you must enter your phone's four-digit lock code. If you do not know your phone's lock code, try 0000; if this does not work contact Nextel Customer Service for assistance.

1. Press **[Menu]** > **Settings** > **Security**.
2. Select **Phone Lock** > **Lock Now**, enter the unlock code, and press **Ok** **[Left Softkey]**. (To set your phone to lock the next time it is turned on, select **Auto Lock**.)

### Unlocking Your Phone

- ▶ At the "Enter Unlock Code" prompt, enter your unlock code and press **Ok** **[Left Softkey]**.

### Changing the Lock Code

1. Press **[Menu]** > **Settings** > **Security** > **Change Passwds.**

2. Select **Unlock Code**, and then enter your current unlock code and Press **Ok** **[Left Softkey]**.
3. Enter and reenter your new lock code, pressing **Ok** **[Left Softkey]** after each.

### Calling in Lock Mode

You can place calls to 911 when in lock mode.

- ▶ To call an emergency number, dial **911** and press **[Call]**.

### Your Phone's Keypad Lock

Locking the phone's keypad prevents its buttons from being pressed. When the keypad is locked, you can only:



- Power the phone on and off.
- Unlock the keypad.
- Respond to incoming calls, messages, and alerts.

#### Important

*Emergency calls cannot be placed while the keypad is locked.*





### *To lock the keypad:*




1. From standby mode, press .
2. Press .

If you press a key while the keypad is locked, instructions for unlocking the keypad display briefly.

### *To unlock the keypad:*

1. From standby mode, press .
2. Press .

*To automatically lock the keypad if there has been no activity for a specified time.*

1. Press  > **Settings** > **Security** > **Keypad Lock**.
2. To lock the keypad immediately, select **Lock Now**. You will be given the option to press  and  to lock and unlock the keypad.
3. To set a specific time for the keypad to lock if there has been no activity, select **Auto Lock** and then select a time.



The keypad can be set to lock in 30 seconds or in 1, 5, 10, 15, or 20 minutes if the keypad is not touched during the specified time. To turn the auto lock off, repeat step 3 and select **Off**.

## **Resetting Your Phone**

---

### **Resetting Phone Settings**

Resetting phone settings restores all the factory defaults, including the ringer types and display settings. The Contacts, History, Scheduler, and Messaging are not affected.

1. Press  > **Settings** > **Advanced** > **Reset Defaults**.
2. Enter your phone's six-digit security code and press **Ok**  (left softkey). (A disclaimer is displayed.)

#### **Note**

*Your security code is a six-digit number used for resetting your phone. Please contact Nextel Customer Service if you do not know your security code.*



3. Read the prompt and press **Yes** ☐ (left softkey) to complete the reset. (Press **No** ☐ [right softkey] to cancel.)

## Resetting All

Selecting **Reset All** resets phone settings and clears all phone data, including Contacts History, Scheduler, and Messaging.

1. Press ☐ > **Settings** > **Advanced** > **Reset Defaults** > **Reset All**.
2. Enter your security code and press **Ok** ☐ (left softkey).
3. Read the prompt and press **Yes** ☐ (left softkey) to complete the reset. (Press **No** ☐ [right softkey] to cancel.)

## GPS Privacy Options

Your phone's GPS privacy options control whether Java applications or other software applications on your phone may view the location of your phone. You may set your phone to one of these GPS privacy options.

### Note

*Privacy options do not apply to the transmission of location information during emergency 911 calls.*

*To set your GPS privacy options:*

1. Press ☐ > **GPS** > **Privacy**.
2. If your GPS PIN security feature is enabled, enter your GPS PIN. (See "Setting the GPS PIN Security Feature" on page 90 for more information.)
3. Select the privacy option you want:
  - **Restricted** — No Java or similar software applications may view the location of your phone. However, location information may still be available to the phone's owner, fleet manager, or account administrator.
  - **Unrestricted** — All applications may view the location of your phone, without notifying you.




- **Ask Access**— When an application attempts to view the location of your phone, you will be prompted to give permission. However, location information may still be available to the phone's owner, fleet manager, or account administrator.

## Setting the GPS PIN Security Feature

To prevent your GPS privacy settings from being altered without your knowledge, your GPS privacy option can be protected by a PIN.

When you receive your phone, the GPS security feature is turned off, so you do not have to enter a GPS PIN to access your GPS privacy options. If you turn this feature on, you will be required to enter a GPS PIN to access your GPS privacy options.





*To turn the GPS Enabled security feature on or off:*

1. Press  > **Settings** > **Security** > **GPS PIN**.
2. Select **On** or **Off**.
3. Enter the current GPS PIN.

**Tip** The default GPS PIN is 0000.

4. Press **Ok**  (left softkey).

*To change your GPS PIN:*

1. Press  > **Settings** > **Security** > **Change Passwds** > **GPS PIN**.
2. Enter the current GPS PIN and press **Ok**  (left softkey).
3. Enter the new GPS PIN and press **Ok**  (left softkey).
4. Reenter the new GPS PIN to confirm.
5. Press **Ok**  (left softkey).

## Java Applications & GPS Security

Some Java applications can make use of your phone's GPS feature to determine the approximate geographical location of your phone. (See "GPS Enabled" on page 122 for more information on the GPS feature.) However, for privacy reasons, you may not always want Java applications to access the location of your phone. Your phone protects your privacy by giving you the option to block all or some Java applications from accessing the location of your phone.



## Setting Privacy for All Java Applications

These options control the privacy of all Java applications on your phone:

- **Restricted** — No Java or similar software applications may access the location of your phone. However, location information may still be available to the phone's owner, fleet manager, or account administrator.
- **Unrestricted** — All Java applications may access the location of your phone, without notifying you.
- **By Permission** — When a Java application attempts to access the location of your phone, you are prompted to give permission. However, location information may still be available to the phone's owner, fleet manager, or account administrator.


### Granting or Denying Permission

If you choose **By Permission**, you must grant or deny each Java application access to the location of your phone when the application requests access for the first time. You may be required to grant or deny subsequent requests from the same application, depending on the privacy setting you choose for the

individual Java application (see “Setting Privacy for Each Java Application” on page 92).


When a Java application requests access to the location of your phone, a screen appears informing you.

*To deny this request:*

1. Press **Deny**  (right softkey). The application does not access the location of your phone.
2. Select the denying option you want:
  - **Always** — If the application requests access to the location of your phone again, the request is denied without notifying you.
  - **For this session** — If the application requests access to the location of your phone again before you power off your phone, the request is denied without notifying you.
  - **Only Once** — If the application requests access to the location of your phone again, you are prompted to grant or deny permission.



To grant this request:

1. Press **Grant**  (left softkey). The application accesses your phone's location.
2. Select the granting option you want:
  - **Always** — If the application requests access to the location of your phone again, the request is granted without notifying you.
  - **For this session** — If the application requests access to the location of your phone again before you power off your phone, the request is granted without notifying you.
  - **Only Once** — If the application requests access to the location of your phone again, you are prompted to grant or deny permission.


## Setting Privacy for Each Java Application


After a given Java application requests access to the location of your phone for the first time, you have the opportunity to set the GPS privacy option for that Java application.

1. Press  > **Java Apps**.

2. Scroll to the application or suite of applications you want to set the privacy option for.

### Tip

*If the application has requested access to the location of your phone, this icon  appears when you highlight the application.*

3. Press .
4. Select **Permissions**.
5. Select the privacy options you want for this application (you may set them for each of the menus available under **Permissions**):
  - **Always** — The application always has permission to access the location of your phone, without notifying you.
  - **Ask** — When the application requests access to the location of your phone, you are prompted to grant or deny permission (see “Granting or Denying Permission” on page 91).
  - **Never** — When the application requests access to the location of your phone, the request is denied without notifying you.




# Recent Calls

- ◆ *About Recent Calls (page 93)*
- ◆ *Viewing Recent Calls (page 96)*
- ◆ *Recent Call Options (page 96)*
- ◆ *Making a Call From Recent Calls (page 97)*
- ◆ *Saving Items From Recent Calls (page 97)*
- ◆ *Deleting Items From Recent Calls (page 98)*
- ◆ *Prepending a Phone Number From Recent Calls (page 98)*

*The Recent Calls list keeps track of incoming calls, outgoing calls, and missed calls.* This section guides you through accessing and making the most of your Recent Calls list.

## About Recent Calls

The Recent Calls list displays the last 20 numbers (or Contacts entries) for calls you placed, accepted, or missed, and for Call Alerts you have received. It also displays My Info and contact information sent to you from other phones. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the name assigned to the number (if the phone number is in your Contacts) and the Contacts type icon associated with the number. If the Contacts entry containing the number has more than one number or address stored,  surrounds the Contacts type icon. Duplicate calls (same number and type of call) may only appear once on the list.

The Direct Connect number Contacts type icon appears when you receive a Direct Connect call or Call Alert, even if the number is not stored in Contacts.

Call Alerts you have received appear as Direct Connect calls. Like all items in the Recent Calls list, they remain listed until you delete them or until they reach the end of the list.



When you select a call to view its details, you see information such as the name associated with the call, the number, date, time, and duration of the call.

**Note**

 
*The Recent Calls list records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's Recent Calls list.*

*If you return a call from the voicemail menu, it will not be included in your phone's Recent Calls list.*

## ***Calls and Call Alerts***

The Recent Calls list contains the numbers of up to 20 of the most recent calls you have made and received.


If the number of a recent call is stored in Contacts, the following information appears:

 
- The name assigned to the number.
- The Contacts type icon associated with the number. If the Contacts entry containing the number has more than one number or address stored,  surrounds the Contacts type icon. For information on Contacts types, see “Contacts” on page 99.


The Direct Connect number Contacts type icon appears when you receive a Direct Connect call or Call Alert, even if the number is not stored in Contacts.

Call Alerts you have received appear as Direct Connect calls. Like all items in the Recent Calls list, they remain listed until you delete them or until they reach the end of the list.

For phone calls, an additional icon appears giving information about the call.

 A call you made.

 A call you received.


 A missed call. Missed calls appear on the Recent Calls list only if you have Caller ID.

When you select a call to view its details, you see information such as the name associated with the call, the number, date, time, and duration of the call.

## ***My Info From Other Phones***

The Recent Calls list displays My Info sent from other phones. See “Sending My Info and Contact Information” on page 47.




This icon  appears with My Info sent from other phones on the Recent Calls list, along with the Direct Connect number of the person who sent the information.

When you select My Info from other phones to view its details, you see all the information sent.

If you receive My Info from the same phone more than once, only the most recently sent version appears in the Recent Calls list.


## ***Contact Information From Other Phones***

The Recent Calls list displays contact information sent from other phones. This information comes from the other phone's Contacts list or Recent Calls list. See "Sending My Info and Contact Information" on page 47.

This icon  appears with contact information on the Recent Calls list.

Contact information in the Recent Calls list displays:

- The name contained in the contact information.
- The Contacts type icon associated with the number or address contained in the contact information. If the

item contains more than one number or address stored,  surrounds the Contacts type icon.

The name or Direct Connect number of the person who sent the contact information appears as a separate item on the Recent Calls list, above the information sent. If one person sends you more than one item of contact information, all the items appear below the person's name or Direct Connect number.

When you select contact information to view its details, you see the name or Direct Connect number of the person who sent the information and all the information in the item.

If you receive contact information with the same name from the same phone more than once, only the most recently sent version appears in the Recent Calls list.



## Viewing Recent Calls

### Note


The Recent Calls list records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's Recent Calls list.

If you return a call from the voicemail menu, it will not be included in your phone's Recent Calls list.


To view the Recent Calls list:


1. Press  > **Recent Calls**.
2. Scroll through the list.

To view the details of an item on the list:

- ▶ From Recent Calls list, highlight an entry and press .

## Recent Call Options

Select a Recent Calls entry and press  to display the date and time of the call, the phone number (if available), and the caller's name (if the number is

already in your Contacts). Press  to display the following options:

- **Use Push To...** to select **Send Picture**, **Send My Info** or **Send Contact** (Direct Connect or Call Alerts only).
- **Send Contact** to send the contact information to another PTT user.
- **Delete** to delete the entry.
- **Delete All** to delete all recent calls entries.
- **Add Prepend** to prepend a number to the contact number. See "Prepending a Phone Number From Recent Calls" on page 98.
- **Call Alert Queue** to view the call alert list.
- **Call Setup** to configure the call.
- **Call New Group** to create a Group and place a Group Connect call. (Direct Connect or Call Alerts only.)
- **Create** to send a text message to the contact.

### Tip

You can also view the next Recent Calls entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.



## Making a Call From Recent Calls

1. Press > *Recent Calls*.
2. Select an entry and press .
- or –

Press the Direct Connect button to make a Direct Connect or Group Connect call.

**Note** You cannot make calls from Recent Calls to entries identified as **No ID** or **Restricted**.

## Saving Items From Recent Calls

1. From the Recent Calls list, scroll to or select the item you want to store.
2. Press **Save** (left softkey).
- or –

If **Save** is not one of your options, press and then select **Save** or **Update Contacts**.

**Tip** If the item you want to store is a call, **Save** does not appear if the number is already stored in Contacts.

3. Select **[New Contact]** to create a new Contacts entry for the number

– or –

To store the number to an existing entry, select the entry.

**Note** Storing My Info or contact information from another phone to a Contacts entry that has a name assigned to it does not change the name of the Contacts entry.




4. If the item you want to store is a call, you must assign a Contacts type to the number:  
With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number.
5. If you want to add more information to the entry, follow the applicable instructions in “About Contacts” on page 99.
6. Press **Done** (left softkey).







## Deleting Items From Recent Calls

---

*To delete an item from the Recent Calls list:*

1. From the Recent Calls list, scroll to or select the item you want to delete.
2. Press  and select **Delete**.
3. Press or  press **Yes**  (left softkey) to confirm.



*To delete all items on the Recent calls list:*

1. Press  > **Recent Calls** > .
2. Select **Delete All**.
3. If you are certain you want to erase the History, press **Yes**  (left softkey).  
– or –  
Press **No**  (right softkey) to return to the previous menu.

## Prepending a Phone Number From Recent Calls

---

If you need to make a call from the Recent Calls List and you are outside your local area code, you can add the appropriate prefix by prepending the number.

1. Select a Recent Calls entry and press  > **Add Prepend**.
2. Enter the prefix and press  to call the number.



## Contacts

- ◆ *About Contacts (page 99)*
- ◆ *Creating Contact Entries (page 100)*
- ◆ *Viewing Contacts (page 103)*
- ◆ *Adding a Number or Address to an Entry (page 104)*
- ◆ *Editing Entries (page 105)*
- ◆ *Deleting Entries (page 105)*
- ◆ *Assigning Speed Dial Numbers (page 106)*
- ◆ *Selecting a Ringer Type for an Entry (page 107)*
- ◆ *Checking Capacity (page 107)*
- ◆ *Dialing Nextel Customer Service (page 107)*

*Your phone's Contacts list helps you stay in touch with family, friends, and colleagues by keeping track of all their contact information.* This section explains how to use your phone's Contacts list.

## About Contacts

Contacts stores up to 600 numbers or addresses. Each Contacts entry can store several numbers or addresses.

Information stored in Contacts is saved on your SIM card.














A Contacts entry contains:

- A name — A name is required if you are storing more than one number or address to the entry; otherwise, it is optional. Typically, this is the name of the person whose contact information is stored in the entry.
- A ring tone — You can assign a ring tone to each entry. This is the sound your phone makes when you receive phone calls or call alerts from any of the numbers stored in the entry.
- A Contacts type — Each number or address stored must be assigned a Contacts type. (See “Types of Contacts” on page 100.)



## Types of Contacts

Each number or address stored must be assigned a Contacts type:

	<i>Mobile</i>	phone number
	<i>DC</i>	Direct Connect number
	<i>Work1</i>	phone number
	<i>Work2</i>	phone number
	<i>Home</i>	phone number
	<i>Email</i>	email address
	<i>Fax</i>	phone number
	<i>Pager</i>	phone number
	<i>Talkgroup</i>	Talkgroup number
	<i>Scangroup</i>	Group
	<i>Group</i>	Group
	<i>IP</i>	IP address
	<i>Other</i>	phone number

### Note

The i365 does not support the Scangroup feature.

## Creating Contact Entries


Your phone can store up to 600 Contacts entries. Each contact entry can store up to 10 numbers or addresses, and each entry's name can contain 20 characters.

### Tip


#### ICE – In Case of Emergency

*To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under "ICE" in your phone's Contacts list. For example, if your mother is your primary emergency contact, list her as "ICE–Mom" in your Contacts list. To list more than one emergency contact, use "ICE1–\_\_\_," "ICE2–\_\_\_," etc.*




A number or address and a Contacts type are required for all Contacts entries. Other information is optional. You may enter the information in any order by scrolling through the entry details.


After you have entered the number or address, Contacts type, and any other information you want, you can press **Done**  (left softkey) to save the entry to Contacts.



To cancel a Contacts entry at any time press **Cancel** (right softkey) and then press **Yes** (left softkey) to return to the Contacts list or press  to return to standby mode.

*To create a Contacts entry:*

1. Press  > **Contacts** > **[New Contact]**.  
– or –  
Press  > **Contacts** >  > **New Contact**.
2. If you want to assign a name to the entry:
  - Select **Name**. Enter the name. When you are finished, press .


**Tip** Press **Browse**  (left softkey) to select a name already in Contacts.

3. If you want to assign a ring tone to the name:
  - Select **Ring Tone/Picture** and then select **Ringer**. Select the ring tone you want to assign.
4. To assign a Contacts type to the number or address being stored:
  - Select the Contacts type field.

- Select the Contacts type you want to assign. (*Mobile, DC, Work1, Work2, Home, Email, Fax, Pager, Talkgroup, Group, IP, or Other.*)

5. To store a number or address:

- Select the # field (or ID for an email address, or IP for an IP address).
- Enter the number or address. For phone numbers, use the ten-digit format. For Direct Connect numbers, be sure to include the asterisks (\*).
- For email addresses, see “Entering Text” on page 20.

**Tip** Press **Browse**  (left softkey) to select a number or address from Contacts, the Recent Calls list, or Memo.

- When you are finished, press .



6. If you want to assign more options to the number, including **Speed #** and **Voice Name**, select **[Options]** and proceed to steps 7-9. Otherwise, skip to step 10.
7. The default Speed Dial number assigned to a phone number is displayed in the **Speed #** field. This is always the next available Speed Dial location. If you want to assign the phone number to a different Speed Dial location:
  - With the **Speed #** field highlighted, press **[OK]**.
  - Press **Delete** **[X]** (right softkey) to delete the current Speed Dial number.
  - Enter the new Speed Dial number using the keypad.
  - When you are finished, press **[OK]**.
8. If you want to create a voice name for a phone number, select **Voice Name**. As directed by the screen prompts, record the name you want to assign to the number. Speak clearly into the microphone.
9. When you are finished, press **Back** **[X]** (right softkey).
10. If you want to add more numbers or addresses to the entry:
  - Scroll past the information you already entered.
  - Enter the additional information for the entry using step 2 through step 6. You must assign a name to the entry, if you have not already.
11. Press **Done** **[X]** (left softkey).

## ***Creating Pauses and Waits***



When storing a number, you can program your phone to pause or wait between digits while dialing. A pause makes your phone pause for three seconds before dialing further. A wait makes your phone wait for your response before dialing further.

For details on using pauses and waits, see “Dialing and Saving Phone Numbers With Pauses” on page 33.







## Storing Numbers Faster

To store numbers to Contacts from standby mode:

1. Use the keypad to enter the number you want to store.
2. Press .
3. Select **Store Number**.
4. To store the number as a new entry, select **[New Contact]**.  
– or –  
To store the number to an existing entry, select the entry.
5. With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number.
6. If you want to add more information to the entry, follow the applicable instructions in “Creating Contact Entries” on page 100.
7. Press **Done**  (left softkey).

## Viewing Contacts

1. Press  > **Contacts**, and then scroll to the entry you want to view.  
– or –  
Enter the first letter of a name (such as “d” for “Dave”).  
– or –  
Press **Search**  (left softkey), and enter the name you want to see. (Your phone finds the name you entered or the nearest match.)
2. If an entry has more than one number or address stored,  surrounds the Contacts type icon. Scroll left or right to view the icon for each number stored in the entry.
3. Press  to view the entry.
4. Scroll to view the other numbers and addresses stored for the entry.

### Tip

To view more entries, continue scrolling.



## Showing Only Direct Connect Numbers, Groups, and Talkgroups

To set Contacts to show only entries that contain Direct Connect numbers, Groups, and Talkgroups:

1. Press **[F4]** > **Contacts**, and then press **[F4]**.
2. Select **Filter**.
3. Set this option to **DC/GC/Scngrp**.

To set Contacts to show all entries:

1. Press **[F4]** > **Contacts**, and then press **[F4]**.
2. Select **Filter**.
3. Set this option to **Show All**.

## Finding Speed Dial Numbers

- ▶ Press **[F4]** > **Contacts** and select an entry. The speed Dial Number will be listed directly under the contact phone number.

**Tip** From Contacts, press **Search** **[F3]** (left softkey) to display the Search feature.

## Adding a Number or Address to an Entry

1. Display a Contacts entry. (See “Viewing Contacts” on page 103.)
2. Press **[F4]** > **Edit**.
3. Scroll to the number type field above an open number and press the navigation key right or left to select a number type.
4. Scroll down to the open field, enter the new phone number or address, and press **[OK]**.
5. Press **Done** **[F3]** (left softkey) to save the new number.  
– or –

To assign a speed dial number, select **[Options]** > **Speed #**, enter a speed dial number and press **[OK]**. Press **Back** **[F2]** (right softkey) and then press **Done** **[F3]** (left softkey) to save the entry.



## Editing Entries

1. Press **[Menu]** > **Contacts** and scroll to the entry you want to edit.
2. Press **Edit** **[Enter]** (left softkey).  
– or –  
If **Edit** is not one of your options, press **[Menu]** and then select **Edit**.  
The entry details screen displays.
3. Follow the applicable instructions in “Creating Contact Entries” on page 100 to edit the various fields.

## Deleting Entries

1. Press **[Menu]** > **Contacts** and scroll to the entry you want to delete.
2. Press **[Menu]**.
3. To delete the entire entry, select **Delete Contact**.
4. Press **[OK]** or press **Yes** **[Enter]** (left softkey) to confirm.

### Deleting a Number or Address

1. Press **[Menu]** > **Contacts** and scroll to the entry containing the number or address you want to delete.
2. Scroll left or right to display the Contacts type for the number you want to delete.
3. Press **[Menu]**.
4. Select **Delete Number**.
5. Press **[OK]** or press **Yes** **[Enter]** (left softkey) to confirm.

#### Note

*If an entry contains only one number or address, deleting the number or address deletes the entry.*



## Assigning Speed Dial Numbers

Your phone can store up to 600 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 35.)

You can assign speed dial numbers when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

*To assign a speed dial number to a new phone number:*

1. Add a phone number to a new or to an existing Contacts entry. (See “Creating Contact Entries” on page 100 or “Adding a Number or Address to an Entry” on page 104.)
2. Highlight **[Options]**, press **[OK]**, and then select **Speed #**.
3. Enter an available speed dial number and press **[OK]**.
4. Press **Back** **[ ]** (right softkey) to return to the Contacts menu.

5. Press **Done** **[ ]** (left softkey) to save the new contact.

*To assign a speed dial number to an existing phone number:*

1. Press **[ ]** > **Contacts** and then scroll to an entry.
2. Press **Edit** **[ ]** (left softkey) or press **[ ]** > **Edit** to display the Edit Entry menu.
3. Select **[Options]** below the number you want to assign, and then select **Speed #**.
4. Enter an available speed dial number and press **[OK]**.
5. Press **Back** **[ ]** (right softkey) to return to the Contacts menu.
6. Press **Done** **[ ]** (left softkey) to save the changes.

### Note






If you attempt to assign an already in-use speed dial location to a new phone number, a message will appear asking if you wish to replace the existing speed dial assignment. Press **Yes** to assign the location to the new phone number and delete the previous speed dial assignment.



## Selecting a Ringer Type for an Entry

---

Assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ring Tones” on page 65.)

1. Press  > **Contacts**, scroll to an entry, and then press  > **Edit**.
2. Select **Ringer** and press  to display the Ring Tones menu.
3. Scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
4. Select a ringer and press .
5. Press **Done**  (left softkey) to save the new ringer type.

## Checking Capacity

---

To see how many numbers are stored in Contacts:



1. Press  > **Contacts** > .
2. Select **Capacity**.

## Dialing Nextel Customer Service

---

Your Contacts list is preprogrammed with contact numbers for Nextel Customer Service.

To dial Nextel Customer Service from your Contacts:

1. Press  > **Contacts** and scroll to **NEXTEL CARE**.
2. Press  to place the call.



# Tools

---

- ◆ *Datebook (page 108)*
- ◆ *Java Applications (page 116)*
- ◆ *Digital Rights Management (DRM) (page 120)*
- ◆ *GPS Enabled (page 122)*
- ◆ *Memo Feature (page 129)*
- ◆ *Voice Records (page 131)*
- ◆ *My Pictures (page 133)*
- ◆ *Call Timers (page 135)*

*Your phone is equipped with several personal information management features that help you manage your busy lifestyle.*

This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments.

## Datebook

---

Datebook stores up to 250 events. You can store events over a thirteen month period — twelve months after and one month before the current date.

A Datebook event contains:

- A subject — A name you assign to the event. You can also enter a phone number, Direct Connect number, or Talkgroup number here. After the event is stored, you can call this number from Datebook or when you get a reminder of this event.
- A location — The location of the event. You can also enter a phone number, Direct Connect number, or Talkgroup number here. After the event is stored, you can call this number from Datebook or when you get a reminder of this event.
- A start time — The start time automatically assigned to an event is the beginning of the day. You can change the start time, or assign no start time, before storing the event.
- A duration — The length of time the event lasts.



- A date — The date automatically assigned to an event is the date that was highlighted or selected when you began creating the event. You can change this date before storing the event.
- A repeat — Lets you store the event as a recurring event.
- A reminder — If an event has a start time, you can set Datebook to remind you that the event is going to start.
- A ring tone for the reminder.
- A profile that your phone uses during the event.
- A Java application that starts when the event starts.

Only the subject and date are required.

## Viewing Datebook

- Press  > **Datebook**.

You can view Datebook by the day, by the week, or by the month. You can also view the details of any event.


- In day view, brief information about each event for that day appears.
- In week view, events appear as markers corresponding to their times.

- In month view, days with events appear with a marker in the corner.

*To view an event:*

1. Select the day the event occurs.
2. Select the event.

*To change the current view:*



1. While viewing Datebook, press .
2. Select the view you want.

### Note

Day view is the default setting.

## Navigating Datebook

*To scroll through Datebook:*

- Scroll left and right using the navigation key.
- or –
- In week view and month view, press  or .

*To see more in day view:*


- Scroll up and down using the navigation key.




*To highlight a day in month view:*

- ▶ Enter the date using the keypad.

*To go to today's date:*

1. While viewing Datebook, press .
2. Select **Go To Today**.


*To go to any date in Datebook:*

1. While viewing Datebook, press .
2. Select **Go To Date**.
3. Select the date you want.


## ***Creating Events***

Every Datebook event must have a subject and be stored to a date. Other information is optional.

You may enter the information in any order by scrolling through the event details.

After you have entered the information you want, you can press **Done**  (left softkey) to store the event to Datebook.

*To create a Datebook event:*

1. While viewing datebook, press **New**  (left softkey).


– or –

In day view, select **[New Event]**.

2. To assign a subject to the event, select **Subject** and:

- Enter the name.

– or –

Press **Browse**  (left softkey) to choose from common event names.

– or –

Enter a phone number, Direct Connect number, or Talkgroup number. After the event is stored, you can call this number.

- When you are finished, press .



3. If you want to assign a location to the event, select **Location** and:
  - Enter the location.
    - or –
 Enter a phone number, Direct Connect number, or Talkgroup number. After the event is stored, you can call this number.
  - When you are finished, press **OK**.
4. The start time automatically assigned to an event is the beginning of the day. If you want to change the start time or assign no start time:
  - Select **Start**.
  - Enter the start time you want.
    - or –
 Press **No Time** **⏏** (right softkey) to assign no start time.
5. If you want to assign a duration to the event, select **Duration** and:
  - Select the duration you want.
    - or –
 Select **Custom** to enter a duration.
6. The date automatically assigned to an event is the date that was highlighted or selected when you began creating the event. To change the date of the event:
  - Select **Date**.
  - Enter the date you want.
7. If you want to make the event a recurring event:
  - Select **Repeat**.
  - Select the repeat cycle you want.
    - If the event occurs more than once a week, select **Multiple Day**, and select the days you want.
    - Press **Done** **⏏** (right softkey).
  - In the **End** field, select the date you want this event to stop recurring.
8. If you want to create a reminder for this event:
  - Select **Reminder**.
  - Select the reminder time you want.
    - or –
 Select **Custom** to enter a reminder time.




**Note**


*If an event has no start time, you cannot create a reminder for it.*

9. If you have created a reminder for the event and want to set the ring tone for that reminder:
  - Select **Ring Tone**.
  - Select the ring tone you want from the ring tones stored in your phone.
10. If you want to assign a profile that your phone is switched to while the event is occurring:
  - Select **Profile**.
  - Select the profile you want from the profiles stored in your phone.
  - Your phone switches to this profile when the event starts and switches back to the previous profile when the event ends.
11. If you want to assign a Java application to start when the event starts:
  - Select **App**.
  - Select the application you want from the Java applications stored in your phone.

- If you created a reminder for this event, your phone prompts you to start the Java application when you get the reminder.


12. If you have entered all the information you want for this event, press **Done**  (left softkey).

*If you decide you do not want to store the event:*


- ▶ Press **Cancel**  (right softkey).

## **Editing Events**




*To change the details of an event:*

1. Select the day the event occurs.
2. Select the event.
3. Press **Edit**  (left softkey).
4. Follow the applicable instructions in “Creating Events” on page 110 to edit the various fields.




*To copy an event to another date:*

1. Select the day the event occurs.
2. Select the event.
3. Press .



4. Select **Copy**.
5. Press **Yes**  (left softkey) to confirm.
6. Enter the date you want.
7. Press .
8. If you want to change more information, follow the applicable instructions in “Creating Events” on page 110 to edit the various fields.
9. Press **Done**  (left softkey) to store the event.

## Deleting Events

1. Select the day the event occurs.
2. Select the event.
3. Press .
4. Select **Delete**.
5. If the event is not a recurring event, press  or press **Yes**  (left softkey) to confirm.
  - or –
  - If the event is a recurring event:

- Select **This Event Only** to delete only the event selected in step 2.
- Select **Repeat Event** to delete all occurrences of the event.

## Receiving Reminders

If you created a reminder for a Datebook event, when the reminder time occurs, your phone notifies you with text on the display and a reminder tone.

*To view more details about the event:*

- ▶ Press **View** .

*To dismiss the reminder:*

- ▶ Press **Dismiss** .

## For Events With Java Applications

If you assigned a Java application to start when the event starts, you can start the application when you get the reminder.

*To start the application:*

1. Press .
2. Select **Launch**.



## Making Calls From Datebook and Datebook Reminders

If you stored a phone number, Direct Connect number, or Talkgroup number in the **Subject** or **Location** field of a Datebook event, you can call or send a Call Alert to that number from Datebook or from the reminder of that event.

If you store numbers in both the **Subject** and **Location** fields, you can call or send a Call Alert to the number stored in **Subject** and the number stored in **Location** as long as the number stored in **Subject** is a Direct Connect or Talkgroup number and the number stored in **Location** is a phone number.

If both are the same type of number, the number in **Subject** is called or sent a Call Alert. To call or send a Call Alert to the number stored in **Location**, you must delete the number stored in **Subject**.


### Making Calls From Datebook

*To make a phone call:*

1. Highlight or select the event containing the number you want to call.

2. Press .

– or –

Press  and then select **Call # in Event**.


*To make a Direct Connect call or Talkgroup call:*

1. Highlight or select the event containing the number you want to call.
2. Press the Direct Connect button.

– or –

If you did not include a  before the Talkgroup you want to call, press , select **Talkgroup**, and then press the Direct Connect button.



*To send a Call Alert:*

1. Highlight or select the event containing the number you want to send a Call Alert to.
2. Press  and select **Alert # in Event**.



## Making Calls From Datebook Reminders


*To call a number:*

- ▶ Press .
- or –
- Press  and then select *Call # in Event*.

*To make Direct Connect calls or Talkgroup calls:*



- ▶ Press the Direct Connect button.

*To send a Call Alert:*

- ▶ Press  and select *Alert # in Event*.

## Customizing Datebook Setup

*To access Datebook set up options:*

1. Select  > *Datebook*.
2. Press .
3. Select *Setup*.





You can view or change these options:

- **Start View** — sets Datebook to start in day view, week view, or month view when you access Datebook.
- **Daily Begin** — sets the beginning of your day. This is the earliest time of day displayed in week view, if you have a twelve-hour day view.
- **Delete After** — sets the amount of time Datebook waits to delete an event after it occurs.
- **Time Shift** — lets you shift the times of all Datebook events. This is useful if you are traveling to a different time zone.
- **Alert Timeout** — sets the amount of time a tone continues to sound when you receive a message notification, Call Alert, or Datebook reminder.
- **Clock** — controls whether the time and date appear in standby mode; sets time and date format; sets year.




# Java Applications

## Installing Applications


1. Press  > *Java Apps*.
2. Select the application or suite of applications you want to install. Installation messages appear as the application installs.
3. If you want to create a shortcut to the Java application on the main menu, press **Next**  (left softkey), press **Yes**  (left softkey), and then press .
4. Press **Done**  (left softkey).

## Running Applications

*To run an application that has a shortcut on the main menu:*

1. Press .
2. Select the application or suite of applications you want to run.
3. If you have selected a suite of applications, select the application you want to run.

*To run an application that does not have a shortcut on the main menu:*

1. Press  > *Java Apps*.
2. Select the application or suite of applications you want to run.
3. If you have selected a suite of applications, select the application you want to run.

### Tip

*If you do not hear the sounds associated with the Java application, select **Settings > Volume** and check the volumes of **Java Speaker** and **Java Earpiece**.*

## Suspending Applications

When you suspend an application, it does not stop running. It goes to the background so that you can run another application in the foreground.

*To suspend an application:*

- ▶ Press .

*To view your suspended applications:*

- ▶ Press  > *Java Apps* and select *Suspended Apps*.




You can have up to three applications running at one time — one running in the foreground and two in the background.

## Resuming Applications



You can resume a suspended application at any time. This brings it to the foreground.


*To resume a suspended application:*

1. Press  > **Java Apps** and select **Suspended Apps**.
2. Select the application you want to resume.

## Ending Applications

*To end an application:*







1. Press  > **Java Apps**.
2. If the application you want to end is part of a suite of applications, select the suite.
3. Scroll to the application you want to end.
4. Press **End**  (left softkey).  
– or –

If **End** is not one of your options, press  and select **End**.

### Tip

You can also end applications from the **Suspended Apps** screen

*To end all applications:*



1. Press  > **Java Apps**.
2. Scroll to **Suspended Apps**.
3. Press .
4. Select **End All**.
5. Press  or press **Yes**  (left softkey) to confirm.
6. If you want to end all applications without letting them exit, press **EndNow**  (left softkey) and then press **Finish**  (right softkey).

## Downloading Applications

If you want to run more Java applications, you can download them into your phone.




To access a catalog of items available for purchase and download:

- ▶ Press  **Java Apps** > *Buy Games&Apps* or *Download Apps*.
- or –
- Press  > *Downloads*.






You can also go to [www.nextel.com](http://www.nextel.com), sign on to your account, and click the **Digital Media** option for a wide selection of available Java applications and downloading instructions.

## Deleting Applications

To delete an application:




1. Press  > *Java Apps*.
2. Scroll to the application you want to delete.
3. Press .
4. Select *Deinstall*.
5. Press  or **Yes**  (left softkey) to confirm.
6. When your phone has finished deleting the application, press *Done* .

To delete all Java applications:

1. Press  > *Java Apps*.
2. Scroll to **Java System**. (You may need to press *More*  [left softkey] to display *Java System*.)
3. Press .
4. Select *Delete All*.
5. Press  or press **Yes**  (left softkey) to confirm.

## Managing Memory

To view the amount of memory available for Java applications:

1. Press  > *Java Apps* > *Java System*.
2. Press *Next* .
3. To see more memory information, press *Next* .

Deleting Java applications frees memory.



**Note**

Java application data is stored in your phone using the same memory space used to store messages, voice records, pictures, ring tones, and wallpaper images. Deleting some of these other items frees memory for Java applications.

## Shortcuts on the Main Menu

When you install an application, you can create a shortcut to the application on the main menu.

*To create a shortcut to an application that is already installed:*

1. Press **[Menu]** > **Settings** > **Personalize** > **Menu Options** > **Add/Remove Apps**.
2. Scroll to view the list of Java applications. Any application that has a shortcut on the main menu has a checkmark next to it.
3. Scroll to the application(s) you want to create a shortcut for.
4. Press **[OK]**.
5. Press **Done** **[Left Softkey]** (left softkey).

*To remove a shortcut:*

1. Press **[Menu]** > **Settings** > **Personalize** > **Menu Options** > **Add/Remove Apps**.
2. Scroll to view the list of Java applications. Any application that has a shortcut on the main menu has a checkmark next to it.
3. Scroll to the application(s) you want to remove the shortcut for.
4. Press **[OK]** to remove the checkmark.
5. Press **Done** **[Left Softkey]** (left softkey).

**Tip**

You can also access the Add/Remove Apps menu from standby mode by pressing **[Menu]** > **[Menu]** > **Main Menu Setup** > **Add/Remove Apps**.



## Digital Rights Management (DRM)

---

When you download multimedia content available online, such as Java applications, these items may be subject to DRM restrictions. DRM, or digital rights management, is a system that defines how copyrighted multimedia content can be distributed and used.

DRM limits items to time-based or count-based usage settings. Time-based settings let you use the given item for a specified interval. Examples of time-based settings include being able to use an item for a specified number of days from the date of purchase, a specified number of days from the date that the item is first used, or a specified number of minutes. Count-based settings let you use an item for a specified number of times after you download it or for unlimited use.

### Managing Items


Depending on how the third-party vendor has set rights for the given DRM item, you may be unable to perform some of the following tasks.

### Viewing License Information

You can check a DRM item's license to view the following information:

- For time-based items, either the date and time the item is scheduled to expire, or the number of days left.
- For count-based items, the number of credits (uses) left or an unlimited use notice.
- The name of the item's vendor.



*To view the license of a DRM item:*

1. Go to the location on your phone that contains the item you want.
2. Highlight the DRM item you want to view license information for.
3. Press .
4. Select *License Info*.



## Renewing DRM Licenses

**Note** Java application data is stored in your phone using the same memory space used to store messages, voice records, pictures, ring tones, and wallpaper images. Deleting some of these other items frees memory for Java applications.



1. Go to the location on your phone that contains the item you want.
2. Highlight the DRM item you want to renew.
3. Press **Renew**  (left softkey) or press  and then select **Renew**.
4. Select the link to the page where you purchased the item.
5. Follow the vendor's instructions for purchasing an additional license.

## Deleting Items

If you delete a DRM item that you purchased from Nextel from your phone, you will have to purchase it again to download it.

**Note** You cannot delete items that are DRM locked.

**Note** Under certain conditions, third-party vendors will let you download an item multiple times within a given time frame, even if you deleted the item. Please contact the third-party vendor of an item to learn more about the vendor's download regulations.

1. Go to the location on your phone that contains the item you want.
2. Highlight the DRM item you want to delete.
3. Press .
4. Select **Delete**.
5. If prompted, press **Yes**  (left softkey).

## About Expired Items

Most items will continue to display on your phone until you delete them. You can also choose to renew the license for an expired item.



## GPS Enabled

---

Your phone's GPS Enabled feature uses information from Global Positioning System (GPS) satellites orbiting the Earth to determine the approximate geographical location of your phone, expressed as latitude and longitude. The availability and accuracy of this location information (and the amount of time that it takes to calculate it) will vary depending on the environment in which you are using the GPS feature. For example, GPS location fixes are often difficult to obtain indoors, in covered locations, between high buildings, or in other situations where you have not established a clear broad view of the sky. SEE: "IMPORTANT: Things to Keep in Mind" on page 122.

When you make a 911 emergency call, the GPS feature of your phone can help emergency personnel locate you if your phone has adequate access to GPS satellite signals and your emergency response center is equipped to process such information.

You can also use the GPS feature to view your approximate location. Location information appears on the phone's display.

Java applications loaded on your phone can also request your location. If your phone is connected to a laptop computer or similar device, software running on that device can request your location. To protect your privacy, you can control whether these requests are granted. See "GPS Privacy Options" on page 89.

### ***IMPORTANT: Things to Keep in Mind***

If you are using the GPS feature of your phone while driving, please give full attention to driving and to the road.

Where adequate signals from multiple satellites are not available (usually because your GPS antenna cannot establish a view of a wide area of open sky), the GPS feature of your phone WILL NOT WORK. Such situations include but are not limited to:

- In underground locations.
- Inside of buildings, trains, or other covered vehicles.
- Under any other metal or concrete roof or structure.
- Between tall buildings or under dense tree-cover.
- Near a powerful radio or television tower.
- When your GPS antenna is covered (for example, by your hand or other object) or facing the ground.



- In temperature extremes outside the operating limits of your phone.

Walking or driving very slowly may also substantially reduce GPS performance.

Even where location information can be calculated in such situations, it may take much longer to do so, and your location estimate may not be as accurate.

Therefore, in any 911 call, always report the location to the emergency response center if you can and if you cannot, remain on your phone for as long as the emergency response center instructs you.

Even where adequate signals from multiple satellites are available, your GPS feature will only provide an approximate location, often within 150 feet (45 meters) but sometimes much further from your actual location. Advice on how to improve GPS performance is provided in “Enhancing GPS Performance” on page 125.


While the GPS feature of your phone can be a valuable navigational aid, it does not replace the need for careful navigating and good judgment. Never rely solely on one device for navigation. Remember that the accuracy of the location information and the time needed to

obtain it will vary depending on circumstances, particularly the ability to receive signals from adequate numbers of satellites.

On emergency calls, your phone uses assistance information from the phone network to improve the speed and accuracy of your phone’s location calculation. If such assistance information becomes unavailable, it may reduce the speed and accuracy of the location calculation.

The satellites used by the GPS feature of your phone are controlled by the U.S. government and are subject to changes implemented in accordance with the Department of Defense GPS user policy and the Federal Radionavigation Plan. These changes may affect the performance of the GPS feature of your phone.

## ***Making an Emergency Call***

Dial **911** and press  to be connected to an emergency response center. If you are on an active call, you must end it before calling 911.

When you make an emergency 911 call, the GPS feature of your phone begins to seek information to



calculate your approximate location. It will take the GPS feature of your phone some time to determine your approximate location. Even where your phone has good access to sufficient GPS satellite signals and network assist data, it may take 30 seconds or more to determine the approximate location. This time will increase where there is reduced access to satellite signals. When your approximate location is determined, it is made available to the appropriate emergency response center.

In some cases, your local 911 emergency response center may not be equipped to receive GPS location information. For this reason, and because the GPS location information reported is only approximate or may not be available in your location (see “IMPORTANT: Things to Keep in Mind” on page 122), always report your location to the 911 operator you speak to when making an emergency call, if able, just as you would when using a phone without GPS capabilities.


**Note** *If you are concerned about whether your local 911 emergency response center is equipped to receive GPS location information, contact your local authorities.*

In general, if your phone has access to signals from more GPS satellites, your location will be determined faster and more accurately than if your phone has access to signals from fewer GPS satellites.

If your phone does not have adequate access to GPS satellites signals, the location of the nearest cell tower in contact with your phone is automatically made available to the emergency response center, if the center has the capability to receive such information.

See “Enhancing GPS Performance” on page 125 for information on how to help your phone determine your location.

## ***Viewing Your Approximate Location***

1. Press  > **GPS** > **Position**.
2. Scroll to view the entire screen.


This displays the following information about the last time your location was calculated:

- The time (as Greenwich Mean Time) and date that the location was last calculated.
- The approximate location, expressed as latitude and longitude.



- The estimated accuracy of the calculated location. This estimate of accuracy is only a very rough estimate and may vary substantially from the actual accuracy of the approximate location information reported.
- The number of satellites used to calculate the location. In general, more satellites make for better accuracy.


*To calculate your location again:*


- ▶ Press **Rfrsh**  (left softkey).

It may take your phone several minutes to complete the process of determining your location. During this time, a message usually appears on your phone's display saying your phone is scanning for satellites. For tips on getting the best location calculation, see "Enhancing GPS Performance" on page 125.

The Position screen displays the updated information.

*To cancel a location calculation before it is completed:*

- ▶ Press **Cancel**  (right softkey) to return to the Position screen.
- or –

Press  to return to standby mode.

Each time approximate location of your phone is calculated, the latest location information is stored in your phone and remains there even when your phone is powered off. You will see this information the next time you view the Position screen.

If you received a phone call or alert while attempting to determine your location, the Position screen will disappear, but your phone will continue attempting to determine its location. If it is successful, the new location information will be displayed the next time you view the Position screen.

## ***Enhancing GPS Performance***

Sometimes the GPS feature of your phone may be unable to complete a location calculation successfully. If this happens when you are making an emergency call, the location of the nearest cell tower in contact with your phone is made available to the appropriate emergency response center if the center has the capability to receive such information. If this happens when you are trying to view your location on the phone's display, you will see a message indicating that your phone cannot access satellites.



To improve accuracy and increase your chances of a successful calculation, do the following while your phone is determining your approximate location:

- **Stay in the open.** The GPS feature works best where there is nothing between your phone and a large amount of open sky. If possible, go outside, away from tall buildings and foliage. While performance in a building is improved by moving closer to windows, glass with certain sun shielding films may block satellite signals.
- **Hold your phone to enhance reception.** Signals from GPS satellites are transmitted to your GPS antenna, which is in your phone antenna. Hold your phone away from your body, giving the antenna clear access to satellite signals. Do not cover the antenna area with your fingers or anything else.
- **Stand still.** If possible, stand still until your phone is finished determining your location. Moving your phone at a walking pace while your phone is calculating your approximate location may substantially decrease GPS performance.
- **In a car.** When using the GPS Enabled feature in a car, position your phone so that the GPS antenna has good access to GPS signals through the car's

windows. Typically, the GPS antenna has best access to GPS signals in a car when placed near a window.

#### Note

*Although moving your phone at a walking pace decreases GPS performance, moving it at the speed of a moving car does not.*

- **Stay in network coverage.** The network will provide your phone with information that helps determine your location more quickly and accurately.

## Updating Satellite Almanac Data

Another way to keep the GPS feature of your phone working well is to keep your satellite almanac data up to date.

The United States government maintains an almanac of data about where GPS satellites are as they orbit the Earth. This information is available to your phone. Keeping your satellite almanac up to date helps your phone determine your location more quickly.



The almanac contains information about the location of satellites, their operational status, and other satellite information. Keeping this information updated enhances the performance of your GPS feature. In most cases, your phone will be able to get a fix in strong satellite signal conditions with outdated almanac data, but it may take longer.

**Note** *When you make an emergency call, your phone does not rely upon the almanac to determine your location.*

If your satellite almanac data is out of date, your phone may prompt you to update it. Follow the instructions that appear on the phone's display. You may be asked to go to a Web site or call a customer service number.

## Using GPS With Map Software

You can use the GPS feature of your phone to provide approximate location data to a laptop computer or similar device that is running interactive map software such as that made by DeLorme or Microsoft. This way, if your phone has good access to GPS signals, your approximate position on a map can be made available as you travel in a vehicle.

To do this, connect your phone to your laptop (or other device) with a data cable and set your phone to transmit data (see “To connect your phone to your laptop or other device:” on page 128). Your phone then provides your approximate location to the device running the map software, which displays your location on a map. Your phone provides an updated location every second and the map software displays your changing location on its map.

See “Enhancing GPS Performance” on page 125 for more details on obtaining good location information.

**Note** *Because your phone is continuously determining your location, using the GPS feature of your phone with map software uses the phone's battery power quickly.*




## Software Compatibility

Your phone sends location information to your laptop or other device using the standard National Marine Electronics Association (NMEA) format. Your phone supports output messages in NMEA-0183 format and supports the following NMEA-0183 sentences: GGA, GLL, GSA, GSV, RMC, and VTG.

The map software running on your laptop or other device must support NMEA 3.0.

*To connect your phone to your laptop or other device:*

1. Pull open the connector cover.
2. With the phone's display facing up, insert the data cable's connector into the charger connector until you hear a click.

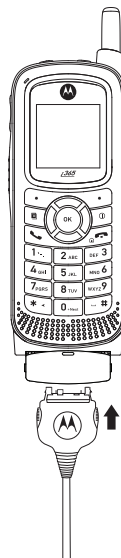




3. Insert the data plug into the COM port of your laptop or other device.

Make sure no other application is using the COM port selected.

Make sure the COM port settings of your laptop or other device are set to the following:

- Bits per second: 4800
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: Hardware

*To set your phone to send location information to your laptop or other device:*

1. Press  > **GPS** > **Interface**.
2. Set **NMEA OUT** to **On**.

Your phone is now sending location data to your laptop or other device.

*To stop your phone from sending location data to your laptop or other device:*



- ▶ Set **NMEA OUT** to **Off**.

Each time you power your phone on, **NMEA OUT** is automatically set to **Off**.

## Memo Feature

Memo lets you store a number, make a call to that number, and save it to Contacts.




*To create a memo:*

1. Press  > **Memo**.
2. Enter the number using your keypad.
3. Press .

*To view the memo later:*




- ▶ Press  > **Memo**

*To delete the memo:*



1. Press  > **Memo**
2. Press and hold **Delete**  (left softkey).
3. Press .





*To edit the memo:*

1. Press  > **Memo**
2. Press and hold **Delete**  (left softkey) to delete the number.
3. Enter the new number.
4. Press .

*To make a call to the memo number:*

1. Press  > **Memo**
2. To make a phone call, press .  
– or –  
To make a Direct Connect call, press the Direct Connect button.


*To store the memo number to Contacts:*

1. Press  > **Memo**
2. Press .
3. Select **Store to Cntcs**.

4. To store the number as a new entry, select **[New Contact]**.

– or –

To store the number to an existing entry, select the entry.

5. With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number.
6. Press **Done**  (left softkey).





## Voice Records

A voice record is a recording you make with your phone and can play back. You can record notes to yourself or phone calls.



Your phone can store up to 20 voice records.

### Creating Voice Records

*To record a note to yourself:*

1. Press  > **VoiceRecord** > **[New VoiceRec]**.
2. Say the message you want to record into the microphone.
3. When you are finished recording, press .

*To record a phone call:*



1. While on an active call, press .
2. Select **Record**.
3. When you are finished recording, press .

#### Note

*Recording of phone calls is subject to applicable laws regarding privacy and recording of phone conversations.*

### Playing Voice Records

*To play a Voice Record:*

1. Press  > **VoiceRecord**.
2. Select the voice record you want to play.
3. To stop the voice record while it is playing, press .




#### Tip

*To fast forward, scroll right. To rewind, scroll left. To pause or resume, press any number key.*







## Labeling Voice Records

When you create a voice record, it is labeled with the time and date it was recorded. You can then rename it with a custom label.





1. Press  > **VoiceRecord**.
2. Scroll to the voice record you want to label.
3. Press **Label**  (left softkey).
4. Enter the label you want to assign.
5. Press .

## Deleting Voice Records

*To delete a voice record:*



1. Press  > **VoiceRecord**.
2. Scroll to the unlocked voice record you want to delete.
3. Press  and select **Delete**.
4. Press  or **Yes**  (left softkey) to confirm.


*To delete all voice records:*

1. Press  > **VoiceRecord**.
2. Scroll to any voice record.
3. Press  and select **Delete All**.
4. Press  or **Yes**  (left softkey) to confirm.

## Locking Voice Records

When you lock a voice record, it cannot be deleted until you unlock it.



1. Press  > **VoiceRecord**.
2. Scroll to the voice record you want to lock or unlock.
3. Press .
4. Select **Lock** to lock the message.  
– or –  
Select **Unlock** to unlock the message.

When a voice record is locked, this icon  appears next to it.




## Managing Memory


 

To view the amount of memory available for voice records:

1. Press  > **VoiceRecord**.
2. With **[New VoiceRec]** highlighted, press **Memory**  (left softkey).

– or –

With any voice record highlighted, press , and then select **Memory**.

To free more memory by deleting all unlocked voice records:


1. From the voice records memory screen, press **Delete**  (left softkey).
2. Press  or **Yes**  (left softkey) to confirm.

**Note** Voice records are stored in your phone using the same memory space used to store messages, Java application data, pictures, ring tones, and wallpaper images. Deleting some of these other items frees memory for voice records.


## My Pictures

My Pictures lets you view pictures you received in MMS messages and Direct Connect calls. You can send the pictures stored in My Pictures in MMS messages and Direct Connect calls.

### Viewing Pictures

1. Press  > **My Pictures**. The pictures stored are listed by name.
2. Select the picture you want to view.

#### Note

If this icon  appears next to a picture, you cannot send it in a message.

### Sending Pictures


To send pictures in an MMS message, see “Multimedia Messages” on page 158.

To send pictures in a Direct Connect call, see “Sending a Picture” on page 44.




## Getting File Information

To view the file type and file size of a picture:


1. Scroll to or select the picture.
2. Press .
3. Select *Details*.

## Deleting Pictures

1. Scroll to or select the picture you want to delete.
2. Press .
3. Select *Delete*.

## Managing Memory

To view your used memory, free memory, and memory capacity:

1. Scroll to or select any picture.
2. Press .
3. Select *Memory Size*.

### Note

Pictures are stored in your phone using the same memory space used to store Java applications data, voice records, ring tones, messages, and wallpaper images. Deleting some of these other items frees memory space for pictures.








## Call Timers

Call timers measure the duration of your phone calls, Direct Connect, or Group Connect calls, and circuit data use, as well as the number of kilobytes sent and received by your phone:

- **Last Call** — displays the duration of your most recent phone call.
- **Phone Reset** — keeps a running total of your phone call minutes, until you reset it.
- **Phone Lifetime** — displays the total minutes of all your phone calls.
- **DC/GC Reset** — keeps a running total of all of your Direct Connect and Group Connect call minutes, until you reset it.
- **DC/GC Lifetime** — displays the total minutes of all your Direct Connect and Group Connect calls.
- **Circuit Reset** — keeps a running total of all of your circuit data use, until you reset it.
- **Circuit Lifetime** — displays the total minutes of all of your circuit data use.

- **Kbytes Reset** — keeps a running total of the number of kilobytes sent and received by your phone, until you reset it.

*To view or reset a timer:*

1. Press  > **Call Timers**.
2. Select the timer you want to view or reset.
3. Press  to view the timer.
4. To reset the timer, press **Reset**  (left softkey). Press  or press **Yes**  (left softkey) to confirm.

### Note

*The values displayed by Call Timers should not be used for billing. Call timers are estimates only.*



## Bluetooth

---

- ♦ *Turning Bluetooth On and Off (page 136)*
- ♦ *Using the Bluetooth Menu (page 137)*
- ♦ *Pairing Bluetooth Devices (page 138)*
- ♦ *Transferring Items Via Bluetooth (page 144)*

*Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.* Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

## Turning Bluetooth On and Off

---

By default, your device's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth devices.

*To turn Bluetooth on:*

1. Press **[Menu]** > **Bluetooth** > **Setup** > **Power**.
2. Select **On** and press **[OK]** to enable Bluetooth.

*To turn Bluetooth off:*

1. Press **[Menu]** > **Bluetooth** > **Setup** > **Power**.
2. Select **Off** and press **[OK]** to disable Bluetooth.

*To turn discoverable mode on:*

1. Press **[Menu]** > **Bluetooth** > **Find Me**.
2. For the duration selected under **Find Me Time**, the device will be discoverable by other devices that are within range.



## Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

**No Icon** – Bluetooth is disabled (default status)

**Blinking Icon** – Phone is in discovery mode.


 – Bluetooth is active.

## Using the Bluetooth Menu

The **Bluetooth** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Powering Bluetooth on or off.
- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.

*To access the Bluetooth menu:*

1. Press  > **Bluetooth**.
2. Set your Bluetooth options.

- Select **Hands Free** to discover and connect to hands free devices.
- Select **Link to Devices** to scan for and connect your phone to an available Bluetooth device.
- Select **Device History** to link to devices that have been connected to your phone.
- Select **Setup** to turn Bluetooth on and off, rename your phone for Bluetooth, and set the time for the **Find Me** command listed below.
- Select **Find Me** to make your phone discoverable to Bluetooth devices for a determined period of time.



## Pairing Bluetooth Devices

---

### Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

*To pair your phone with another Bluetooth device:*

1. Press **[Menu]** > **Bluetooth** > **Link to Devices**. (Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select a device and press **[OK]**.
3. Enter the passkey and press **[OK]**.

**Note** *Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.*

### Understanding Bluetooth Access Settings

A Bluetooth device can have either **Automatic** or **Ask** security access. The first time a Bluetooth device connects to your i365 phone, you must grant the device permission to connect. You can then change the access setting of the device to either **Automatic** or **Ask**.

If you set a device to **Automatic**, then that device can connect automatically to your phone when it is in range. If you set a device to **Ask**, then that device must request permission before it can connect to your phone.

Devices are automatically granted permission during the ten seconds after bonding. For more information about bonding, see “Bluetooth Bonds (Pairing)” on page 141.

The default for hands-free devices, such as Bluetooth headsets, is **Automatic**.



## Setting Your Phone for Bluetooth

You can configure the following aspects of Bluetooth:

- Power.
- Device name.
- Voice recognition and dialing.
- Find Me duration.



### Turning Bluetooth On or Off

You can turn power to your phone's Bluetooth feature on or off. While Bluetooth power is on, your phone can communicate with other devices.

You can turn off Bluetooth if you want to prolong battery life or you enter an area where Bluetooth is prohibited.



The default setting is *Off*.

*To turn Bluetooth on or off:*

1. Press  > *Bluetooth* > *Setup* > *Power*.
2. Select *On* or *Off* and press .

## Renaming Your Phone


Bluetooth devices are listed by their Bluetooth addresses unless you name them. Your i365 phone comes with a default device name of "Motorola Phone." it is recommended you rename your i365 phone with a unique device name.

1. Press  > *Bluetooth* > *Setup* > *Name*.
2. Press and hold *Delete*  (left softkey) to delete the current name.
3. Use the keypad to enter a new name and press .

## Setting a Find Me Duration

You can change how long your phone remains discoverable to other devices. The default duration is one minute. See "Allowing Bluetooth Devices to Find Your Phone" on page 140.

*To select a default duration for Find Me:*

1. Press  > *Bluetooth* > *Setup* > *Find Me Time*.
2. Select the setting you want.



## Accessing Bluetooth

- ▶ Press  > **Bluetooth**.

– or –

While in a call, press  and select **Use Bluetooth**.

**Note** If Bluetooth power is set to **Off** on your phone, you will be prompted to temporarily turn power on in order to use Bluetooth.

## Making a Bluetooth Connection

The following sections cover how to connect your phone to another Bluetooth device.

**Note** Some Bluetooth devices only have full functionality when **DTMF dialing** is set to **On**. See “Phone Calls Features” on page 61.

## Sharing Your Phone’s Bluetooth Address

To bond with your phone, devices must have your phone’s Bluetooth address. To find devices that you want to bond with, you can make your phone discoverable, so that other devices learn your phone’s Bluetooth address. You can also have your phone search for Bluetooth devices to learn their addresses.

## Allowing Bluetooth Devices to Find Your Phone

To let devices find your phone and its Bluetooth address, place your phone in discoverable mode.

Discoverable mode lasts for the duration selected under **Find Me Time** in the Bluetooth Setup menu. During this time, other devices that are within range can detect your phone. You can then choose to grant or deny each device’s request to bond.


**Note** You must grant the device’s request in order to receive information from the device on your phone.

*To start discoverable mode:*


- ▶ Press  > **Bluetooth** > **Find Me**.

## Discovering Hands-Free Bluetooth Devices


*To have your phone search for Bluetooth devices:*

- ▶ Press  > **Bluetooth** > **Hands Free** > **[Find Devices]**.

A list of hands-free devices displays. Devices that do not have a name are listed by their Bluetooth address.

- To stop the search and go to the list of found devices, press **Stop**  (left softkey).



- To stop the search and return to the previous screen, press **Cancel**  (right softkey).

## Bluetooth Bonds (Pairing)

A bond is an encryption key that is generated when two Bluetooth devices exchange a common PIN. This key verifies the identity of each device, and encrypts any data transferred between the devices. Once the PIN is exchanged, the devices do not have to be in discoverable mode in order to exchange information. You only need to create a bond once between two devices.

If you search for devices and you select a device that you are currently bonded with from the list of found devices, then the current bond with that device will be voided. You will have to re-establish the bond.

Your i365 requires that you create a bond in order to connect with another device. However, you can choose to establish bonds with devices without connecting.

**Note** *Devices are automatically granted permission during the ten seconds after bonding.*

## Bluetooth PINs


Bluetooth devices exchange PINs (also known as passkeys or pass codes) in order to establish encrypted transfers between them. When prompted, enter the Bluetooth PINs.

Some Bluetooth devices ship with Bluetooth PINs. Please refer to your Bluetooth device's user guide to locate this information.

If a device ships without a Bluetooth PIN, then you can enter any PIN for that device. To establish a connection to that device, enter the same PIN for both your phone and the device. For example, if you enter 1234 as the device's PIN, then enter 1234 as your phone's PIN.




In some cases, you may not be required to enter the Bluetooth PIN.

*To create a bond between your phone and another device:*

1. Press  > **Bluetooth**.
2. If you want to create a bond and connect with the given device, select **Hands Free** > **[Find Devices]**.  
– or –




If you want to create a bond to have it available for future use, select **Link to Devices**.

3. Select the device you want.
4. Press **Yes**  (left softkey) if you are prompted to do so.
5. Enter a PIN if you are prompted to do so, and then press **Ok**  (left softkey).
6. If necessary, enter the same PIN for the other device.
7. Select **Bond With** if you are prompted to do so.
8. Enter a PIN if you are prompted to do so, and then press **Ok**  (left softkey).
9. If necessary, enter the same PIN for the other device.
10. Select **Bond With** if you are prompted to do so.

## Connecting to a Stored Device

If you have previously connected to a device, the device will be stored on your phone so you can connect with it easily.

1. Press  > **Bluetooth** > **Hands Free**.
2. Select the device you want to connect to.
3. If prompted whether you want to bond with the device, press **Yes**  (left softkey).
4. If prompted, enter the Bluetooth PIN. Your phone will connect to the device.

## Using Bluetooth During a Call


During a call, you can connect with available Bluetooth devices.

### Note




*If the Hands Free menu contains only one device, then your phone will automatically try to connect to that device.*



*To use Bluetooth during a call:*

1. While in a call, press  and then select **Use Bluetooth**.
2. Select the device you want to connect to.

## Disconnecting From a Device

1. Press  > **Bluetooth** > **Hands Free**.
2. Press **Drop**  (left softkey)
3. Press **Yes**  (left softkey).

**Note** Pressing **No**  (right softkey) when prompted exits the menu without disconnecting the device.

## Setting Device Details

The device history stores a list of up to 20 devices that have connected with your phone.

*To view the device history:*

- ▶ Press  > **Bluetooth** > **Device History**.


From the device history, you can:

- Edit device names.
- Change device access settings.
- Delete devices.

**Note** If you delete a device from device history, you will have to find the device to connect with it. See “Discovering Hands-Free Bluetooth Devices” on page 140.

## Viewing Device Details

*To view the name and the access setting of a device:*

1. Press  > **Bluetooth** > **Device History**.
2. Select the device you want.

## Editing Device Names

*To edit a device name so the device is easier to identify.*

1. Press  > **Bluetooth** > **Device History**.
2. Scroll to the device you want to rename.
3. Press **Edit**  (left softkey) or press .
4. Select **Name**.



5. Press and hold **Delete** [X] (left softkey) to delete the current name.
6. Enter the new name and press [OK].

**Note** A device name can have a maximum of 40 characters.

## Editing Device Access Settings

1. Press [Menu] > **Bluetooth** > **Device History**.
2. Scroll to the device you want to set access for.
3. Press **Edit** [X] (left softkey) or press [OK].
4. Select **Access**.
5. Select the setting you want.

## Deleting Devices

1. Press [Menu] > **Bluetooth** > **Device History**.
2. Scroll to the device you want to delete.
3. Press [Menu] > **Delete**.
4. To delete the device, press **Yes** [X] (left softkey).

## Transferring Items Via Bluetooth

---

### Sending Contacts and Datebook Events

Bluetooth lets you send Contacts entries and Datebook events to connected devices.

Files sent or received may be up to 1 MB.



**Note** This measurement represents optimal conditions. Actual conditions may require you to position your phone closer.

You can only connect your phone to one device at a time.

**Note** Go to [www.nextel.com](http://www.nextel.com) and click on **Accessories** for a list of i365 phone Bluetooth compatible devices.





## Sending Contacts

1. Press  > **Contacts**.
2. Highlight the contact you want to send.
3. Press  > **Send Via...** > **Bluetooth**.
4. Select the device you want to transfer to.
  - or –

Search for the device you want to transfer to by selecting **[Find Devices]**.
5. If prompted, bond with the device.
6. Your phone connects to the device and transfers the contact.

### To send Datebook events:

1. Press  > **Datebook**.
2. Highlight the event you want to send.
3. Press .
4. Select **Send Via...**



5. If the event you select repeats, then you will be prompted to choose whether to send the selected instance of the event or all instances of the event.  
 To send only the selected instance of the event, select ***This Event Only***.  
 – or –  
 To send all instances of the event, select ***Repeat Events***.
6. Select **Bluetooth**.
7. Select the device you want to transfer to.
  - or –

Search for the device you want to transfer to by selecting **[Find Devices]**.
8. If prompted, bond with the device. Your phone connects to the device and transfers the event.



## Receiving Items



You receive a prompt when your phone has an incoming transfer.

- ▶ Press **Accept**  (left softkey) to accept the transfer.
  - or –
- ▶ Press **Reject**  (right softkey) to reject the transfer.

## Canceling Transfers

You can cancel a transfer while the transfer is in progress.

To cancel a transfer:



1. Press **Cancel**  (right softkey).
2. Press **Yes**  (left softkey) to cancel.
  - or –

Press **No**  (right softkey) to continue with the transfer.

## Viewing and Storing Received Items

After an incoming transfer is complete, your phone translates the item. The item appears on your phone's display.

You can choose to either store or discard the item. Items are stored as follows:

- Contact entries are stored to Contacts.
- Datebook events are stored to Datebook.
  - To store the item, press **Store**  (left softkey).
  - To discard an item without saving it, press **Discard**  (right softkey).



*Section 3*

## ***Service Features***





## Section 3A

# Service Features: The Basics

---

- ◆ *Message Center (page 148)*
- ◆ *Receiving Messages (page 149)*
- ◆ *Voicemail (page 150)*
- ◆ *Multimedia Messages (page 158)*
- ◆ *Text Messaging (SMS) (page 182)*
- ◆ *Caller ID Blocking (page 183)*
- ◆ *Responding to Call Waiting (page 183)*
- ◆ *Putting a Call on Hold and Making a Second Call (page 184)*
- ◆ *Making a Three-Way Call (page 185)*
- ◆ *Call Forwarding (page 185)*
- ◆ *Making International Calls (page 188)*
- ◆ *Special Dialing Codes (page 188)*
- ◆ *Nextel Phone Services (page 189)*

*Now that you've explored your phone's fundamentals, it's time to learn about the calling features that enhance your service.*

This section outlines your basic wireless service features.

## Message Center

---

The message center manages your messages.

When you receive the following types of messages, you can access them through the message center:

- Voicemail messages.
- Multimedia Messaging Service (MMS) messages (includes most phone-to-phone text messages).
- Net Alerts.
- Text messages (SMS – Short Message Service).

You can listen to or view these messages, delete them, or continue to store them in the message center.

The message center also lets you create and send MMS messages, including phone-to-phone text messages. It stores messages you have sent and lets you save drafts of messages you are creating.



## Accessing the Message Center

- Press  > Messages.

### Message Center Options

After accessing the message center, select the option you want:

- **[Create Mesg]** — begin creating an MMS message.
- **Voice Mail** — access voicemail messages you have received.
- **Inbox** — access MMS messages you have received.
- **Drafts** — access MMS messages you have created and saved but not sent.
- **Sent Items** — access MMS messages you have created and sent.
- **Net Alert** — access over-the-air alerts that you receive from Nextel.
- **SMS** — access text (SMS) messages you have received. (Most traditional phone-to-phone text messages will arrive as MMS messages and will be found in the Inbox.)



## Receiving Messages

When you receive a voicemail message, Multimedia Messaging Service (MMS) message, text message (SMS), or Net alert, you have two ways to access the message:

- Respond to the message notification that appears when the message is received.
- Dismiss the message notification and access the message later through the message center.

### Message Notifications

When you receive a message, your phone notifies you with text on the display and a notification tone or vibration. You can access the message or dismiss the notification.

To dismiss the message notification, press  or **Back**  (right softkey).

If you dismiss the notification, the message is not deleted. It can be accessed through the message center.





If you are not on a phone call when you receive a message, your phone sounds a notification tone every 30 seconds until you access the message, you dismiss the notification, or the alert time-out expires.

When you are on a phone call, you can receive message notifications for all types of messages except MMS messages. For other types of messages, your phone may sound a notification tone during the call or after you end the call, depending on how you set your notification options.

For information on notification options, see “Setting Message Notification” on page 72

## Retrieving Your Messages

All your messages are stored in the message center. The message center shows how many messages you have of each type.

1. Press  > **Messages**.
2. Scroll to the type of message you want to access.
3. Press .

### Note

*To access voicemail for the first time, you must dial into your voicemail box using your PTN (your wireless phone number). If there is already a message in your voicemail box, then you can access your voicemail through the message center.*

## Voicemail

---

### Tip

*To receive voicemail messages, you must first set up your voicemail box.*

*If you are bringing your phone number from another carrier, we suggest you set up your voicemail box after the number you brought to Nextel is active on your Nextel phone and your temporary phone number is deactivated. If you set up your voicemail box prior to this, all messages and all settings (including your greeting and password) will be lost when the number you have brought to Nextel becomes active.*



## Setting Up Your Voicemail Box

Using your i365 phone, dial your ten-digit Nextel Personal Telephone Number (PTN). For example: 7035557777. Follow the system instructions to create a new four- to seven-digit password, record your name, and record a greeting. When the system says, “Thank you for using Nextel Voicemail,” your mailbox is set up.

If you are setting up your voicemail from a phone other than your i365, dial your ten-digit Nextel PTN. When you hear the greeting, press the star key to access your voicemail box. The system will prompt you to enter your password. Enter the last seven digits of your Nextel PTN. For example: 5557777. This is your temporary password. Follow the system instructions to complete your mailbox setup.

You are in the main voicemail menu when you hear the options listed below.

- To play your messages, press **[1]**. (This option plays only if you have new or saved messages.)
- To record a message, press **[2]**.
- To change your greeting, press **[3]**.
- To access your personal options, press **[4]**.

If you press **[\*]** while you are in a sub-menu, you will go to the previous menu. If you press **[\*][\*]**, you will go to the main voicemail menu. From the main voicemail menu, press **[#]** to exit voicemail. At any time, you may end the call by pressing **[end call]**.

## Playing Messages

When you receive a new voicemail message, you can either listen to it immediately by pressing **Call** **[left softkey]**, or later by pressing **Back** **[right softkey]**.

Follow the voicemail prompts to select options such as pause, fast forward, rewind, message forwarding, and deleting messages.

## Changing Your Password

1. From the main voicemail menu, press **[4]** to access personal options.
2. Press **[4]** to access personal preferences.
3. Press **[1]** to modify password.
4. Enter your new password. It must be four to seven digits.



**Note**

*It is important that you choose a number that is easy for you to remember, but hard for someone else to guess. Passwords using all the same digits, for example 4,4,4,4 or a sequential series of digits, 1,2,3,4, will not be accepted.*

5. Press **#****#** to return to the main menu.

**Note**

*If you forget your password, contact Nextel Customer Service.*

## Recording Your Name

When you send, reply to, or copy a message, your name response precedes the message.

*To record or re-record your name at any time:*

1. From the main voicemail menu, press **4** to access personal options.
2. Press **4** to access personal preferences.
3. Press **3** to access the record your name option.
4. Press **2** to record your name.
5. Press **\*****\*** to return to the main menu.

## Recording Your Active Greeting

You may want to include one or all of the following options in your greeting so that callers will know they are available.

- Press **1** to send a numeric message.
- Press **2** to send an operator-assisted message. (This option is available only if you are a subscriber of Operator Assisted Messaging. Contact Nextel Customer Service for more information.)
- Press **#** to skip the greeting and record a message immediately.

*To record or alter your greeting at any time:*

1. From the main voicemail menu, press **3** to change your greeting.
2. Press **1** to play, press **2** to record or re-record, or press **7** to delete your active greeting.
3. Record your greeting and press **#** when you have finished.
4. Press **\*****\*** to return to the main menu.



## Advanced Voicemail Features

### Multiple Greetings

You can create up to five different greetings and designate which greeting will be your active greeting at any given time. The greeting that was recorded during your initial voicemail box setup is greeting 1. This is your default active greeting.

*To record additional greetings:*

1. From the main voicemail menu, press **[3]** to access the greetings menu.
2. Press **[4]** to modify greetings.
3. Enter the greeting number you wish to create or modify.
4. Press **[2]** to record a greeting.
5. Record your greeting and press **[#]** when you have finished.
6. Press **[\*][\*]** to return to the main menu.

*To select your active greeting:*

1. From the main voicemail menu, press **[3]** to access the greetings menu.
2. Press **[3]** to select another greeting to be active.
3. Enter the number of the greeting that you would like to be active. The system will confirm your active greeting number.
4. Press **[1]** to play your active greeting.
5. Press **[\*][\*]** to return to the main menu.



## Greetings Schedule

You can choose to have your greetings automatically activated based on a pre-determined time schedule. By activating the Greeting Schedule, Greetings 1, 2, and 3 will automatically play according to the time schedule listed below.

Greeting 1	Evenings and Weekends	5:00 pm – 7:59 am, Monday – Friday 24- hours, Saturday and Sunday
Greeting 2	Weekday Mornings	8:00 am – 11:59 am Monday – Friday
Greeting 3	Weekday Afternoons	Noon – 4:59 pm Monday – Friday

### *To activate the greeting schedule:*

1. From the main voicemail menu, press **[3]** to access the greetings menu.
2. Press **[9]** to activate your greeting schedule.
3. Press **[\*][\*]** to return to the main menu.

### **Note**

*The greeting schedule, when on, will override any other greeting that you may set as active. If a greeting is not recorded, a system standard greeting will be played.*

## Automatic Playback

By default, the playback mode of your voicemail service is set to normal. This feature automatically plays and saves new messages when you log in.

### *To activate automatic playback:*

1. From the main voicemail menu, press **[4]** to access personal options.
2. Press **[4]** to access personal preferences.
3. Press **[2]** to access playback preferences.
4. Press **[2]** to switch between automatic and normal playback.
5. Press **[\*][\*]** to return to the main menu.



## Changing the Playback Order of Messages

You can select the order in which you want unheard messages to be played. You may listen to the last received message first, or you may listen to the first received message first.

*To select the order in which new messages should be played:*

1. From the main voicemail menu, press **[4]** to access personal options.
2. Press **[4]** to access personal preferences.
3. Press **[2]** to access playback preferences.
4. Press **[1]** to switch between the playback orders.
5. Press **[\*][\*]** to return to the main menu.

## Recording, Forwarding, and Replying to Messages

These functions allow you to record and send, reply to, or forward a message to an assigned destination address or group list number. If you record a complete or partial message, but do not send it, Nextel Voicemail

service will refer to this message as an “in preparation” message.

*To record and send a message:*

1. From the main voicemail menu, press **[2]** to record a message.
2. Record your message and press **[#]** to end the message.
3. Press **[9]** at the prompt to indicate that you want to send the message or press **[5]** for delivery options.
4. Enter the mailbox number and/or group list number(s). (A mailbox number is the ten-digit Nextel PTN of a Nextel customer. The Nextel customer must be in your local calling area. The name of the recipient plays if it is recorded.)
5. Press **[#]** to send.
6. Press **[\*][\*]** to return to the main menu.

### Note

*You can only send messages using this method to Nextel customers in your home market.*



## Delivery Options

After you have created a message, you can assign the message to a category before you send it. Below is a list of the options that can be applied to a message:

- **Urgent** — Recipient will hear this message before other messages.
- **Private** — Recipient cannot copy the message to another mailbox or phone number.
- **Notification of Non-Delivery** — You will be notified if the recipient has not listened to your message by a certain date and time.
- **Future Delivery** — You can specify a time and date (up to three months in advance) for the message to be delivered.

### Note

All dates must have digits in the MM/DD format (two digits for the month and two digits for the date). For example, January 2nd would be 0102.

### Tip

Once a message has been sent for future delivery, it cannot be retrieved or deleted.

*To set a special delivery option:*

1. After recording your message, but before sending it, press **[5]** for delivery options.
2. Press the number that corresponds with the desired delivery option:
  - Press **[1]** for urgent.
  - Press **[2]** for private.
  - Press **[3]** for notification of non-delivery. At prompt, specify time and date.
  - Press **[4]** for future delivery of messages. At prompt, specify time and date.
  - Press **[9]** to send the message immediately.
3. The list of options will be presented again. Select an additional option or press **[9]** to send the message.
4. Enter the destination mailbox or group list number of the recipient(s).
5. Press **[#]** to send.
6. Press **[\*][\*]** to return to the main menu.



## Changing Your Voicemail Language to Spanish

Nextel voicemail settings can be heard in English or Spanish.

Use this feature to change the language you and your callers will hear while in voicemail.

1. From the main voicemail menu, press **[4]** to access your personal options
2. Press **[4]** again to access the language menu.
3. Follow the prompts to change your language setting to English or Spanish.

## Working With Group Lists

This feature enables you to create a list and assign it a unique name. Then, you can add mailbox numbers, group lists, or individuals. Once you create a list you can send a voice message to everyone on the list by entering the group list number. You can have up to 40 group lists. Each list can hold up to 50 addresses.

*To set up a group list:*

1. From the main voicemail menu, press **[4]** to access personal options.

2. Press **[2]** to access your group lists and follow the prompts.

## Message Forwarding

**Note**

*You can only forward messages to Nextel customers in your home market.*

This feature allows you to program your phone to automatically forward incoming messages to another mailbox. There are two types of forwarding: notified and silent. Notified forwarding prompts the caller that the message will be forwarded. Silent forwarding does not prompt the caller that the message will be forwarded.

*To modify forwarding options:*

1. From the main voicemail menu, press **[4]** to access personal options.
2. Press **[5]** to modify forwarding options.
3. Select the applicable option below:
  - To create a forwarding number, press **[2]**.
  - If you have already created a forwarding number, press **[2]** to modify the number.



- To enable or disable message forwarding, press **[3]**.
  - To change the forwarding type, press **[2]**.
4. Press **[✕][✕]** to return to the main menu.

## Multimedia Messages

---

Multimedia Messaging Service (MMS) lets you send and receive messages that may include text, pictures, and audio recordings. You can send and receive these messages from your phone, through any email account, and from [www.nextel.com](http://www.nextel.com).

Your MMS address is PTN@messaging.nextel.com. Your PTN is your ten-digit Nextel Personal Telephone Number.

### Note

*Most common phone-to-phone text messages are sent and received as MMS messages on your i365. Text messages sent from other phones to your PTN arrive as MMS messages.*

## Navigating the Inbox, Drafts, and Sent Items

You can access MMS messages through the following options in the message center:

- **Inbox** — MMS messages you have received.
- **Drafts** — MMS messages you have created and saved but not sent.
- **Sent Items** — MMS messages you have created and sent.

The messages in the Inbox, Drafts, and Sent Items are grouped in pages of nine messages. Scroll to view the messages on a page.

*To go to the next page:*

- ▶ Scroll right.

– or –

Press **[#]**.

– or –

Scroll to the end of the page and select **MORE**.



*To go to the previous page:*

- ▶ Scroll left.
- or –
- Press **[X]**.

*To open a message on the current page:*

- ▶ Highlight the message you want to open and press **[OK]**.
- or –
- Press the number on the keypad corresponding to the number of the message.

## Creating and Sending Messages

Each message you create may contain the following fields:

- **To** — the phone numbers or email addresses of one or more recipients.
- **Mesg** — the body of the message. This may include text, pictures, ring tones, or voice records.
- **Subject** — the subject line.

- **Attach** — one or more attachments. These may be pictures, ring tones, or voice records, including voice records that you create while creating the message.
- **Cc** — the phone numbers or email addresses of more recipients.
- **Auto Replies** — lets you insert replies the recipient can choose from when replying to your message, if the recipient's phone also has this feature.
- **Priority** — sets the priority of the message to normal or high.
- **Report** — lets you receive a report confirming that your message was delivered.
- **Valid Until** — sets a date after which no more attempts are made to deliver the message.


To send a message, you must address it to at least one recipient. All other message fields are optional.

You can fill in the message fields in any order.

## Entering Text

In message fields that require you to enter text, you can begin entering the text from the keypad when the field is highlighted.



While entering text, you can always press  to choose a text input mode from the context-sensitive menu.


For information on ways to enter text from the keypad, see “Entering Text” on page 20.

## Message Size


You can create and send messages of up to 100 KB, including attachments. The size of the message appears at the top of the display as you are creating the message.

## Sending or Canceling


*To send the message at any time after it has been addressed:*

- ▶ Press **Send** .


– or –

If **Send** is not one of your options, press  and then select **Send**.

*To cancel the message at any time:*

- ▶ At the message screen, press **Cancel** .

– or –

Press  to cancel the message and save it in **Drafts**.

## Creating a Message

1. Press  > **Messages** > **[Create Mesg]**.

– or –

Select **[Create Mesg]** from **Inbox**, **Drafts**, or **Sent Items**.

– or –

Begin creating a message from **Contacts**, the **Recent Calls** list, **standby mode**, or **My Pictures**. See “More Ways to Begin a Message” on page 164.

– or –

Reply to a received message. See “Replying to a Message” on page 163.



## 2. To address the message:

- Select **To**. Enter the phone number or email address from the keypad and press **OK**. Repeat this action to enter more phone numbers or email addresses.

– or –

Select recipients from Contacts or the Recent Calls list. See “More Ways to Address a Message” on page 165

### Tip

*To remove a phone number or email address from the list of message recipients, scroll to the phone number or email address and press **Remove** (right softkey).*

- When you are finished addressing the message, press **Back** (right softkey).

## 3. To enter or edit the body of the message:

- Select **Mesg**.

### Note

*If you have created a signature, the signature automatically appears in this field. Text you enter appears before your signature. See “Customizing MMS” on page 178.*

- Enter text from the keypad.

- Use a Quick Note. See “Quick Notes” on page 166.
- Insert a picture, a ring tone, or a voice record. See “Inserting Pictures, Ring Tones, and Voice Records” on page 166.

When you are finished, press **OK**.

## 4. If you want to send the message now, press **Send** (left softkey).

– or –

If **Send** is not one of your options, press **Menu** and then select **Send**.

– or –

To fill in more message fields, see “Adding More Message Options” on page 161.

## Adding More Message Options

### 1. To view more message fields in a message you are creating, select **MORE**.

– or –

Press **More** (left softkey).



2. If you want to create or edit the subject line:

- Select **Subject**. Enter text from the keypad.
- Select a **Quick Note**. See “Quick Notes” on page 166.

When you are finished, press **OK**.

3. If you want to attach a picture, a ring tone, or a voice record, see “Attaching Pictures” on page 168. When you are finished, press **Done** (left softkey).

4. If you want to add more recipients in addition to those in the **To** field:

- Select **Cc**. Enter the phone number or email address from the keypad and press **OK**. Repeat this action to enter more phone numbers or email addresses.
- Select recipients from Contacts or the Recent Calls list. See “More Ways to Address a Message” on page 165. When you are finished addressing the message, press **Back** (right softkey).

5. If you want to insert replies the recipient can choose from when replying to your message, select **Auto Replies**.

- Enter text from the keypad or select a Quick Note (see “Quick Notes” on page 166). When you are finished creating your list of replies, press **Back** (right softkey).

6. If you want to set the priority of the message, select **Priority** and then select a setting.

7. If you want to receive a report confirming that your message was delivered: Select **Report > On Delivery**.

8. If you want to set a date after which attempts to deliver the message end:

- Select **Valid Until**, select a date by scrolling or entering numbers, and press **OK**.
- To set no date, press **No Date** (left softkey).

9. To send the message, press **Send** (left softkey).

– or –

If **Send** is not one of your options, press **■** and then select **Send**.



## Replying to a Message

You can reply to a received message while you are viewing it. If you have already viewed a message, you can also reply to it while it is highlighted in the message center. You cannot reply to unread messages.




For information on viewing received messages, see “Receiving a Message” on page 172 and “Viewing Received Messages From the Message Center” on page 173.

When you reply to a message you received, some of the fields in your reply message are filled in automatically:

- **To** — the phone number or email address of the sender of the message you are replying to. If you are sending a reply to all, some recipients may be in this field.
- **Mesg** — the first 40 characters of the message you are replying to. Text you add to the body of your message appears above this.
- **Subject** — “Re:” followed by the subject line of the message you are replying to, if any.

- **Cc** — If you are sending a reply to all, some recipients may be in this field.

### *To reply to a message:*

1. View the message you want to reply to. If you have already viewed the message, scroll to it.
2. To reply to the sender only, press **Reply**  (left softkey).  
– or –  
To reply to the sender and all recipients, press  and select **Reply All**.
3. A list of short phrases is displayed. Select any of these phrases to add it to the body of your messages.  
– or –  
Select **[Create Reply]** to begin the body of your message without using any of these phrases.
4. Edit any message fields you want to change.
5. Press **Send** .

### **Tip**

To create new reply phrases to use in later reply messages, see “Customizing MMS” on page 178.




**Note**

If the message you are replying to was sent with auto replies, it contains a numbered list of possible replies. Press the number of the reply you want to send. The reply is sent immediately without any further action.


## More Ways to Begin a Message

In addition to beginning a message from the message center, you can begin a message from Contacts, the Recent Calls list, standby mode, or My Pictures.


### *To begin a message from Contacts:*

1. From the Contacts list, scroll to the entry containing the phone number or email address you want to send the message to.
2. Scroll left or right to view the Contacts types until you see the icon for the phone number or email address you want to send a message to.
3. Press **Create**  (left softkey).
4. Create and send the message. The message is automatically addressed to the phone number or email address you chose.

### *To begin a message from the Recent Calls list:*


1. From the Recent Calls list, scroll to the entry you want to send a message to.
2. If the entry has more than one phone number stored, view the phone number you want to send the message to.
3. Press  and select **Create**.
4. Create and send the message. The message is automatically addressed to the phone number you chose.

### *To begin a message from standby mode:*

1. Using the keypad, enter the number you want to send a message to.
2. Press .
3. Select **Create**. The message is automatically addressed to the phone number you chose.



### To begin a message from My Pictures:


1. From **My Pictures**, scroll to or select the picture you want to include in your message.
2. Press **Send**  (left softkey).
3. Create and send the message. The picture you selected is automatically included as an attachment.

### More Ways to Address a Message

When you are filling in the **To** and **Cc** message fields, you can select recipients from Contacts and the Recent Calls list.

You can select more than one recipient from Contacts and the Recent Calls list. A checkmark appears next to each selected item.

#### Tip





To deselect a selected item, scroll to a selected item and press .

When you select recipients from Contacts, Contacts entries containing phone numbers or email addresses are displayed.

#### Tip

You can search for an entry name as you would when viewing Contacts. See “Viewing Contacts” on page 103.

### To address a message from Contacts:





1. While you are creating a message, scroll to or select **To** or **Cc**.
2. Press **Contcs**  (left softkey).
3. Select the entry containing the phone number or email address you want to send the message to.
4. If the entry contains more than one phone number or email address, select the ones you want to send the message to. When you are finished selecting items within the entry, press **Done**  (left softkey).
5. When you are finished selecting entries, press **Done**  (left softkey). If necessary, press **Back**  (right softkey) to return to the Create Message screen.

When you select recipients from the Recent Calls list, phone calls are displayed.



Direct Connect calls are displayed only if the Direct Connect number is stored in Contacts and its Contacts entry also contains a phone number or email address.

*To address a message from the Recent Calls list:*



1. While you are creating a message, scroll to or select **To** or **Cc**.
2. Press  and select **Recent Calls**.
3. Select the entry containing the phone number or email address you want to send the message to.
4. If the entry contains more than one phone number or email address, select the ones you want to send the message to. When you are finished selecting items within the entry, press **Done**  (left softkey).
5. When you are finished selecting entries, press **Done**  (left softkey). If necessary, press **Back**  (right softkey) to return to the Create Message screen.

## Quick Notes

When you are filling in the **Mesg** and **Subject** message fields, you can add ready-made words or short phrases called Quick Notes. After you add these words or

phrases, you can edit them as you would any other text.

*To insert a quick note:*

1. While you are creating a message, scroll to or select **Mesg** or **Subject**.
2. Press **QNotes**  (left softkey) or press  > **Add QNotes**.
3. Select the Quick Note you want to insert into the message.

### Tip

To create new Quick Notes to use in later messages, see “Customizing MMS” on page 178.

## Inserting Pictures, Ring Tones, and Voice Records

When you are filling in the **Mesg** field, you can insert pictures, ring tones, and voice records into the body of the message.

You can insert more than one of these objects into a message. You may include text in the body of your message in addition to these objects.




**Note** For information on how objects inserted into the body of a message appear when a message is received, see “Embedded Objects and Attachments” on page 172.


## Inserting Pictures

You can insert pictures from My Pictures.

Pictures that you download to your phone or receive in a message may be forward locked, meaning they cannot be included in a message.

**Note** If this icon  appears next to a picture, you cannot send it in a message.

*To insert a picture:*

1. While you are filling in the **Mesg** field, press .
2. Select **Add Picture**. A list of pictures that can be included in a message appears.
3. Select the picture you want to insert.


## Inserting Ring Tones

You can insert ring tones from your list of ring tones.

Ring tones that are preloaded on your phone cannot be included in a message.

Ring tones that you download to your phone or receive in a message may be forward locked, meaning they cannot be included in a message.

*To insert a ring tone:*

1. While you are filling in the **Mesg** field, press .
2. Select **Add Ring Tone**. A list of ring tones that can be included in a message appears.

**Tip** To hear a ring tone before inserting it, highlight the ring tone.


## Inserting Voice Records


You can insert voice records from your list of voice records.

Voice records created by recording a phone call cannot be included in a message.




*To insert a voice record:*

1. While you are filling in the **Mesg** field, press .
2. Select **Add VoiceRec**. A list of voice records that can be included in a message appears.
3. Select the voice record you want to insert.

**Tip** *To hear a voice record before inserting it, highlight the voice record and press **Play**  (left softkey).*


## Removing an Inserted Item


*To remove an item inserted into the body of the message you are creating:*

1. Select the **Mesg** field and highlight the item you want to remove.
2. Press **Delete**  (left softkey).

## Attaching Pictures

You can attach one or more pictures to a message.

**Note** *If this icon  appears next to a picture, you cannot send it in a message.*

1. While you are creating a message, select **MORE** and then select **Attach**.
2. Select **[New]**.
3. Select **My Pictures**. A list of pictures that can be included in a message appears.
4. Select the picture you want to attach.
5. Press **Done**  (left softkey).

## Attaching Ring Tones

You can attach ring tones from your list of ring tones.

Ring tones that are preloaded on your phone cannot be included in a message.

Ring tones that you download to your phone or receive in a message may be forward locked, meaning they cannot be included in a message.

1. While you are creating a message, select **MORE** and then select **Attach**.
2. Select **[New]**.
3. Select **Ring Tones**. A list of ring tones that can be included in a message appears.



4. Select the ring tone you want to attach.

**Tip** To hear a ring tone before attaching it, highlight the ring tone.

5. Press **Done** [Done] (left softkey).

## Attaching Voice Records

You can attach voice records from your list of voice records, or you can create one to attach to the message you are creating.

Voice records created by recording a phone call cannot be included in a message.

1. While you are creating a message, select **MORE** and then select **Attach**.
2. Select **[New]**.
3. Select **VoiceRecord**. A list of voice records that can be included in a message appears.  
– or –

To record a new voice record, select **[New VoiceRec]**, say the message you want to record into the microphone, and press [OK] to save

the recording. The newly created voice record will appear in the list of voice records.

4. Select the voice record you want to attach.

**Tip** To hear a voice record before attaching it, highlight the voice record and press **Play** [Play] (left softkey).

5. Press **Done** [Done] (left softkey).

## Removing an Attachment

To remove an attachment in a message you are creating:

1. While you are creating a message, select **MORE** and then select **Attach**.
2. Scroll to the attachment you want to remove.
3. Press [X].
4. Select **Unattach**.


## Drafts

While you are creating a message, you can save it in Drafts before you send it.

You can view, edit, send, or delete saved drafts.





## Saving a Message in Drafts


1. While you are creating a message, press .
2. Select **Save**.

You can continue to create the message. The version you saved in Drafts will not change.

## Sending a Draft

1. Press  > **Messages** > **Drafts**.
2. Scroll to the draft you want to send.
3. Press .
4. Select **Send**.




## Editing a Draft

1. Press  > **Messages** > **Drafts**.
2. Select the draft you want to edit.
3. Continue as you would when creating a message.

## Deleting a Draft

When you send a draft, it is deleted from Drafts.

*To delete a message in Drafts without sending it:*

1. Scroll to the message you want to delete.
2. Press **Delete**  (left softkey).
3. Press  or press **Yes**  (left softkey) to confirm.

## Drafts Icons

 Draft.

 High priority.


 Attachment.

 High priority with an attachment.

## Sent Items

Messages you have sent or tried to send are stored in Sent Items.

## Forwarding Sent Items



1. Press  > **Messages** > **Sent Items**.
2. Scroll to the message you want to forward.



3. Press .
4. Select *Forward*.
5. Edit and send your message.

## Resending Messages

If a message was not sent from your phone, you can resend it.



1. Press  > *Messages* > *Sent Items*.
2. Scroll to the message you want to resend.
3. Press *Resend*  (left softkey).

### Note

*If your message was sent successfully, Resend will not appear as an option.*




## Checking Delivery Status

If a message was successfully sent and you set the message to give a report confirming delivery, you can check the delivery status.







1. Press  > *Messages* > *Sent Items*.
2. Scroll to the message you want to view.
3. Press .

4. Select *Delivery Status*.

## Deleting Sent Messages

1. Scroll to the message you want to delete.  
– or –  
View the message you want to delete.
2. Press *Delete*  (left softkey).
3. Press  or press *Yes*  (left softkey) to confirm.

## Sent Items Icons


-  Successfully sent.
-  Unsuccessfully sent.
-  High priority.
-  Attachment.
-  High priority and locked.
-  High priority with an attachment.



## Receiving a Message


When you receive an MMS message, a message notification appears on the display.

*To view the message:*

1. Press **OK** or press **Read**  (left softkey). The message is downloaded from the message server.
2. If the message fills more than one screen, scroll to read it.

*To dismiss the message notification:*

- ▶ Press **Later** .

This icon  appears on the display, reminding you that you have a new message.

## Navigating a Message

As you scroll through a message, numbers, email addresses, and Web site URLs are highlighted.

Pictures and audio recordings are also highlighted.

## Embedded Objects and Attachments

Messages may contain pictures or audio recordings as part of the body of the message or as attachments.

If a message contains pictures or audio recordings in the body of the message, highlight each picture or audio recording to view or play it.

If a message contains a picture or audio recording as an attachment, open the attachment to view the picture or play the audio recording.

### Note

Audio recordings in messages do not play if VibeAll is set to On.

## Opening Attachments

1. View the message.
2. Highlight the attachment you want to open. Attachments appear at the end of a message.
3. Press **OK**.




**Note**

Attachments that are of an unknown type cannot be opened, but they can be deleted. See “Deleting Attachments” on page 177.

 
## Viewing a Slide Show

Your phone can receive MMS messages containing slide shows.

A slide show may contain a series of pictures that display in sequence. It may also include one or more audio recordings.


When you view a message containing a slide show, this icon  appears.

*To view a slide show in a message:*

1. View the message.
2. Highlight the slide show.
3. Press .

To speed up the slide show, scroll right or scroll down.


To repeat the part of the slide show you have just viewed, scroll left or scroll up.

- To view the slide show again, press **Restart**  (left softkey).

**Note**










 
 
You can create and send MMS messages containing slide shows on [www.nextel.com](http://www.nextel.com).

## Viewing Received Messages From the Message Center

1. Press  > **Messages** > **Inbox**.
2. Select the message you want to read. If you have not viewed the message before, the message is downloaded from the message server.
3. If the message fills more than one screen, scroll to read it.






## Inbox Icons

-  Unread message.
-  Read message.
-  Reply sent.
-  Forwarded.
-  Locked.
-  High priority.
-  Attachment.
-  Locked, with an attachment.
-  High priority and locked.
-  High priority with an attachment.
-  High priority and locked, with an attachment.




## Actions for Received Messages

### Deleting

*To delete unread messages:*

1. Scroll to the message you want to delete.
2. Press **Delete**  (left softkey).
3. Press  or press **Yes**  (left softkey) to confirm.


*To delete read messages:*

1. Scroll to the message you want to delete.
  - or –View the message you want to delete.
2. Press  and select **Delete Message**.
3. Press  or press **Yes**  (left softkey) to confirm.



## Forwarding


*To forward a message:*

1. View the message you want to forward.
  - or –If you have already viewed the message, scroll to it.
2. Press  and select **Forward**.
3. Create and send your message.

Embedded objects and attachments are included when you forward a message.

## Locking and Unlocking

When you lock a message, it cannot be deleted until you unlock it.


1. View the message you want to lock or unlock.
  - or –If you have already viewed the message, scroll to it.
2. Press  and select **Lock Message** or **Unlock Message**.

## Calling a Number in a Message

If a message you receive contains a phone number, Direct Connect number, or Talkgroup ID, you can call or send a Call Alert to that number.

These numbers may appear in the **From** field, the **To** field, the **Cc** field, the subject line, or the body of the message.

*To make a phone call to a phone number in a message:*


1. View the message.
2. Highlight the phone number you want to call.
3. Press .

*To make a Direct Connect call to a Direct Connect number in a message:*


1. View the message.
2. Highlight the Direct Connect number you want to call.
3. Press the Direct Connect button.



*To send a Call Alert to a Direct Connect number in a message:*

1. View the message.
2. Highlight the Direct Connect number you want to alert.
3. Press  and select **Alert**.
4. Press the Direct Connect button.



*To make a Talkgroup call to a Talkgroup ID in a message:*

1. View the message.
2. Highlight the Talkgroup ID you want to call.
3. Press  and select **Talkgroup**.
4. Press the Direct Connect button.

## Storing Message Information to Contacts

If a message you receive contains a phone number, Direct Connect number, Talkgroup ID, or an email address, you can store this information to Contacts.


These numbers may appear in the **From** field, the **To** field, the **Cc** field, the subject line, or the body of the message.

1. View the message.
2. Highlight the number or email address you want to save.
3. Press  and select **Save Number** or **Save Email**.
4. To store the number or email address as a new entry, select **[New Contact]**.  
– or –  
To store the number or email address to an existing entry, select the entry.
5. With the Contacts type field highlighted, scroll left or right to display the Contacts type you want to assign the number or email address.
6. Press **Done**  (left softkey).




## Going to a Web Site

If a message contains one or more Web site URLs, you can go to the Web site.

1. View the message.
2. Highlight the Web site URL you want to go to.
3. Press  and select **Go To Website**.

**Note** *The entire URL must appear in the message. Otherwise, you cannot go to the Web site.*


## Saving an Embedded Picture or Voice Record

1. View the message.
2. Highlight the picture or voice record you want to save.
3. Press  and select **Save Picture** or **Save Audio**.


## Deleting an Embedded Picture, Ring Tone, or Voice Record

*To delete a picture, ring tone, or voice record that is part of the body of a message you receive:*




1. View the message.

2. Highlight the picture, ring tone or voice record you want to delete.
3. Press  and select **Delete Picture** or **Delete Audio**.

## Saving Attachments

1. View the message.
2. Highlight the attachment you want to save.
3. Press  and select **Save Attachment**.

## Deleting Attachments

1. View the message.
2. Highlight the attachment you want to delete.
3. Press .
4. Select **Del Attachment**.
5. Press  or press **Yes**  (left softkey) to confirm.




## Saving Slide Shows


When viewing a slide show in a message you have received, you can save the parts of the slide show.

If the slide show contains pictures, you can save each picture as it appears. If the slide show contains voice records, you can save each voice record at any time during the slide show.


*To save the pictures in a slide show:*

1. View the slide show.
2. When the picture you want to save appears, press .
3. Select **Save Picture**.

*To save the voice records in a slide show:*

1. View the slide show.
2. When the picture you want to save appears, press .
3. Select **Save VoiceRecord**.
4. If the slide show contains more than one voice record, select the voice record you want to save.

## Deleting Slide Shows

1. Highlight the slide show or view the slide show.
2. Press  and select **Delete Slideshow**.

## Customizing MMS



The Setup menu lets you customize MMS for your phone:

- **Friendly Name** — Enter text here to create a friendly name. Your friendly name is the name displayed in the From field on other iDEN phones when they receive messages from you.
- **Signature** — Enter text here to create a signature. Your signature is text that is automatically inserted at the end of all messages you create. You can edit the text before sending the message.
- **Quick Notes** — lets you create new Quick Notes and edit or delete Quick Notes you have created.
- **Replies** — lets you create new reply phrases and edit or delete reply phrases you have created.
- **Cleanup** — controls how long messages remain in the Inbox and Sent Items before they are deleted.



- **Downloads** — controls whether your phone automatically downloads new messages when they arrive, or only after you respond to a prompt or read the message from the Inbox. Set this option to **Automatic** if you want your phone to download new messages automatically; set the option to **Manual** if you want your phone to prompt you before downloading new messages.

*To access the Setup menu:*

1. Press  > **Messages**.
2. With **[Create Mesg]** highlighted, press .
3. Select **Setup**.

**Tip**


*This option is available from many context-sensitive menus when you are using MMS.*

## New Quick Notes and Reply Phrases

*To create a new Quick Note or Reply Phrase:*


1. From the Setup menu, select **Quick Notes** or **Replies**.
2. Select **[New Quicknote]** or **[New Reply]**.
  - or –

Press **New**  (left softkey).

3. Enter text from the keypad.
4. When you are finished, press .

You can edit only Quick Notes and reply phrases you have created.

*To edit a Quick Note or Reply Phrase:*

1. From the Setup menu, select **Quick Notes** or **Replies**.
2. Select the Quick Note or reply phrase you want to edit.
3. Edit the text.
4. When you are finished, press .




## Deleting Quick Notes and Reply Phrases

You can delete only Quick Notes and reply phrases you have created.




*To delete a Quick Note or reply phrase:*

1. From the Setup menu, select **Quick Notes** or **Replies**.
2. Scroll to the Quick Note or reply phrase you want to delete.



3. Press **Delete**  (right softkey).
4. Press **OK**  or press **Yes**  (left softkey) to confirm.

*To delete all Quick Notes or all reply phrases:*

1. From the Setup menu, select **Quick Notes** or **Replies**.
2. Press  and select **Delete All**.
3. Press **OK**  or press **Yes**  (left softkey) to confirm.

## Setting the Clean-up Option

The clean-up option controls how long messages remain in the Inbox and Sent Items before they are deleted. You set the clean-up option for the Inbox and Sent Items separately.




The clean-up option deletes only read, unlocked messages.

The clean-up option can be set to any of the following:

- **Off** — messages are never automatically deleted.
- **5 Messages** — If you have more than five messages, messages are deleted in the order they were received, starting with the oldest, until five are left.

- **10 Messages** — If you have more than ten messages, messages are deleted in the order they were received, starting with the oldest, until ten are left.
- **1 Day** — Messages are deleted if they are older than one day.
- **3 Days** — Messages are deleted if they are older than three days
- **Custom** — Lets you create a clean-up option of up to 99 messages or 99 days.



*To set the clean-up option for the Inbox:*

1. From the Setup menu, select **Cleanup > Inbox**.
2. Choose a clean-up option.
3. To automatically delete messages now, press **OK**  or press **Yes**  (left softkey).
  - or –To delete messages later, press **No**  (right softkey).


*To set the clean-up option for Sent Items:*

1. From the Setup menu, select **Cleanup > Sent Items**.
2. Choose a clean-up option.



3. To automatically delete messages now, press  or press **Yes**  (left softkey).

– or –

To delete messages later, press **No**  (right softkey).

## Choosing to Delete Messages Later

If you choose to delete messages later, rather than at the time you set the clean-up option, the type of clean-up option you set determines when messages are deleted.

If you set an option that cleans up messages according to how many you have, messages are deleted when you exit the message center after setting the option.

If you set an option that cleans up messages according to how old the messages are, messages are deleted when you power on your phone.



## Managing Memory

All messages in the Inbox, Drafts, and Sent Items share the same memory space.

### Note

*The content of a message in the Inbox is not stored in your phone's memory until the message is read. Unread messages use very little memory.*

*To view your used memory, free memory, and memory capacity:*

1. Press  > **Messages**.
2. With **[Create Mesg]** highlighted, press .
3. Select **Setup > Memory Size**.

### Tip

*This option is available from many context-sensitive menus when you are using MMS.*

- To free memory, delete messages.
- To delete many messages at once, see ““Deleting Multiple Messages” on page 182.”
- To set messages to be deleted automatically, see “Setting the Clean-up Option” on page 180.








**Note**

Messages are stored in your phone using the same memory space used to store Java applications data, voice records, ring tones, pictures, and wallpaper images. Deleting some of these other items frees memory for messages.




## Deleting Multiple Messages

You can delete read, unlocked messages from the Inbox, messages in Drafts, or successfully sent messages in Sent Items in groups or all at once.

*To delete more than one message:*

1. Scroll to or view a message.
2. Press .
3. Select **Delete Multiple**.
4. Select the messages you want to delete by scrolling to them a pressing . A checkmark appears next to messages that are selected.
5. Press **Delete** .
6. Press  or press **Yes**  (left softkey) to confirm.

*To delete all unlocked messages:*

1. Select **Inbox**, **Draft**, or **Sent** Items.
2. Press  and select **Delete All**.
3. Press  or press **Yes**  (left softkey) to confirm.

## Text Messaging (SMS)

With text messaging (SMS), you can receive instant text messages from another messaging-ready phone or from an email account. When you receive a new message, an alert displays on your phone's screen.

Your phone's SMS address is PTN@page.nextel.com. Your PTN is your ten-digit Personal Telephone Number.


**Note**

Most traditional phone-to-phone text messages arrive as MMS messages on your i365. Your phone can send and receive MMS messages.

Your phone can receive SMS text messages, but it cannot send them.



## Accessing Text Messages

- ▶ When you receive a text message, an alert is displayed on your phone's screen. Press **Read**  (left softkey) to display the message and use your navigation key to scroll down and view the entire message.


 

## Caller ID Blocking

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

### Per-Call Blocking

*To block delivery of your phone number to other Caller ID units for a single phone call:*


 

- ▶ Press    before dialing the call.

Your Nextel phone number cannot be blocked from calls made to 911, 800, 855, 866, 877, 888, or other toll-free phone numbers.

## Per-Line Blocking

You can request that Nextel Customer Service permanently block delivery of your phone number on every call you make. In this case, you may need to display your number for certain calls.

*To show your number on a per-call basis:*

- ▶ Press    before dialing the call.

## Responding to Call Waiting

---

Call Waiting lets you receive a second call while on an active call. Call Waiting is always available, unless you turn it off for a specific call.

If you are on a call and receive a second call, your phone emits a tone and displays a message.

*To accept the second call and put the active call on hold:*

- ▶ Press **Yes**  (left softkey).



*To accept the second call and end the active call:*

1. Press . Your phone rings with the second call.
2. Answer the second call.

*To decline the second call:*

- ▶ Press **No** (right softkey). If you subscribe to voicemail, the call is forwarded to your voicemail box, unless you set **Call Forward** for **If Busy** to a different number.

**Tip**

*For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*70** before placing your call. Call Waiting is automatically reactivated once you end the call.*

## Turn Off Call Waiting

*To turn off Call Waiting during a call:*

1. Press .
2. Select **In Call Setup > Call Waiting**.
3. Set this option to **Off**.

**Tip**

*To turn Call Waiting back on while still on the call, set this option to **On**.*

## Putting a Call on Hold and Making a Second Call

*To place a call on hold and make a second call:*

1. Place or receive a phone call.
2. While the call is active, press .
3. Select **2nd Call**. This puts the call on hold.
4. Enter the second phone number you want to call

**Note**

*For quick ways to enter the number, press .*


5. Press to place the call.

*To end the second call and make the call on hold active again:*

- ▶ Press .






To make the call on hold active and put the active call on hold:

- ▶ Press **Switch**  (right softkey).

## Making a Three-Way Call



---

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Place or receive a phone call.
2. While the call is active, press .
3. Select **3 Way**. This puts the call on hold.
4. Enter the second phone number you want to call
5. Press  to place the call.
6. Press **Join**  (left softkey).

All three people in the call can speak to and hear each other. If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected

To merge two calls into a three-way call:

1. Place or receive a phone call.
2. While the call is active, press .
3. Select **2nd Call**. This puts the call on hold.
4. Enter the second phone number you want to call.
5. Press  to place the call.
6. Select **Join**.

All three people in the call can speak to and hear each other.

## Call Forwarding

---




 
 
 
Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

Call Forwarding sends calls to the phone numbers you specify. You can forward all calls to one number or forward missed calls to different numbers depending on the reason you missed the call.




 

 


## Forwarding All Calls

When you set your phone to forward all calls, an icon appears in the top row of the display:

-  Phone line 1 is active; calls to phone line 1 are being forwarded.
-  Phone line 1 is active; calls to phone line 2 are being forwarded.
-  Phone line 1 is active; calls to phone lines 1 and 2 are being forwarded.
-  Phone line 2 is active; calls to phone line 1 are being forwarded.
-  Phone line 2 is active; calls to phone line 2 are being forwarded.
-  Phone line 2 is active; calls to phone lines 1 and 2 are being forwarded.


*To forward all calls:*

1. Press  > *Call Forward* > *Forward* > *All Calls*.
2. Select *To*.
  - If you specified a forwarding number for all calls before, this number displays.
  - To forward calls to this number, press *Back*  (right softkey).
  - To delete this number, press , and then press and hold *Delete*  (right softkey).
3. To enter the number you want to forward calls to:
  - Enter the number using your keypad.
  - Press *Search* , select *Contacts*, *Recent Calls*, or *Memo*, and then select the number you want to enter.
4. Press . All your calls are now forwarded to the number you specified.



## Turning Off Call Forwarding

If you do not want all your calls forwarded, turn the feature off:

1. Press  > **Call Forward** > **To**.
2. Set this option to **Off**.

All your calls are now sent to your phone.

Calls you miss are forwarded according to the options set for missed calls. By default, missed calls are forwarded to voicemail.

## Forwarding Missed Calls

You can specify a forwarding number for each type of missed call:

- **If Busy** — Your phone is on a call or transferring data.
- **If No Answer** — You do not answer on the first four rings.
- **If Unreachable** — Your phone is out of coverage or powered off.

### Note





You are charged a higher rate for calls you have forwarded.

To forward missed calls:

1. Press  > **Call Forward** > **Forward** > **Detailed**.

### Note

If your phone is set to forward all calls, you must first turn off call forwarding to access this option. See “Turning Off Call Forwarding” on page 187

2. Select **If Busy** to specify a forwarding number for calls received when your phone is busy.
3. If you specified a forwarding number for this type of call before, this number displays.
  - To forward calls to this number, press **Back**  (right softkey) and go to step 6.
  - To delete this number, press , then press and hold **Delete**  (right softkey).
4. To enter the number you want to forward this type of call to:
  - Enter the number using your keypad.
  - Press **Search**  (left softkey), select **Contacts**, **Recent Calls**, or **Memo**, and then select the number you want to enter.



5. Press **OK**.
6. Repeat step 2 through step 5 for *If No Answer* and *If Unreachable*.
7. When you are finished, press **Back** **⏮** (right softkey).

## Viewing Call Forwarding Settings

1. Press **☐** > **Call Forward** > **Forward** > **All Calls**.
2. With **To** highlighted, press **Status** **⏮** (left softkey).

## Making International Calls

---

Your service default is “International Calls Restricted.” Contact Nextel Customer Service to obtain international dialing access.

Calls placed between the United States and Canada do not require an international access code.

## Special Dialing Codes

---

### Non-Emergency Numbers

Nextel supports many “non-emergency” numbers (such as #77, 311,...) provided by local and state governments. These numbers are used to report non-emergency incidents. If the situation includes imminent danger or loss of life, you should dial 911.

### Telecommunications Relay Service

Nextel supports services for communicating with speech and/or hearing impaired individuals. You can dial 711 to reach a local Telecommunications Relay Center. You will then be connected to your destination number. Relay service works through a Communications Assistant who reads messages typed into a TDD/TTY device by a speech or hearing impaired individual to you. The Communications Assistant then types your spoken messages to the hearing or speech impaired individual. Telecommunications Relay Service is available 24 hours a day, seven days a week, and every call is strictly confidential.



**Note** Using 711 to reach Telecommunications Relay Service may not be available in all areas.

To enable TTY mode:

1. Press **[M]** > **Settings** > **Phone Calls** > **TTY**.
2. Press and **[OK]** select **On** to enable TTY mode.
3. For TTY options, highlight **Type**, and press **[OK]**, and then select an option:
  - **TTY** (TeleTypewriter) – Type and read text on your TTY.
  - **VCO** (Voice Carry-Over) – Speak into the phone and read text replies on your TTY.
  - **HCO** (Hearing Carry-Over) – Type text on your TTY and listen to voice replies on your phone.

## Nextel Phone Services

Contact Nextel Customer Service to obtain these services or for additional information:

**Note** Some services are not available outside of the continental United States.

### Caller ID

Your phone can automatically display the phone number or name (if the ten-digit phone number is stored in your Contacts) of the person calling (unless blocked by the caller), enabling you to decide whether to take the call or forward it to voicemail.

Caller ID information is not available on all calls.




## ***Second Line Service***

You can have two different phone numbers on the same phone. With Second Line Service, you can:

- Get separate bills for each phone line.
- Bring in an existing wireless or home phone number to Nextel to activate on the second line.
- Have two different area codes (must be in same market) to convey a local image to callers.
- Use different ringer styles so that you can tell which line is receiving a call.
- Forward incoming calls to either your primary or alternate line phone number.
- Choose a Second Line Service plan that fits your needs.

In order to activate Second Line Service, contact your Nextel Sales Representative or call Nextel Customer Service.

*To set the active line (primary or alternate):*

1. Press  > **Settings** > **Phone Calls** > **Set Line**.
2. Select the phone line you want to be the active line.

When incoming calls are made to a non-active line, these calls will be sent to voicemail without ringing. See “Call Forwarding” on page 185.

## ***Call Restrictions***

You can prevent your phone from making or receiving long distance, incoming, and outgoing (except 911) calls.

## ***Sprint 411***

Dial 411 from your wireless phone to receive nationwide listings, movie listings and showtimes, restaurant reservations, and driving directions, as well as sports scores, stock quotes, and weather conditions. Spanish speaking operators available. Receive up to three phone numbers or pieces of information per call, and be automatically connected at no additional charge. Airtime and other charges apply.



## Data Services

- ◆ *Wireless Data Services (page 191)*
- ◆ *Downloading Content (page 194)*
- ◆ *Using Your Phone as a Modem (page 194)*

*Data services offers easy and amazing features you will really use.* These features – including messaging and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the Nextel National Network.


## Wireless Data Services

With Web access on your phone, you can browse your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news, and weather, and shop on your phone anywhere on the Nextel National Network.

### Using the Web Browser

Navigating the Web from your phone is easy once you get the hang of it.

### Opening the Browser

- ▶ Press  > **Net**. (The home page will be displayed.)

Options available under the home page include:

- **Business Tools** – Provides access to business tools.
- **Text Messaging** – Provides access to text messaging.
- **Games, Ringers, & More** – Provides access to downloadable items.
- **News, Sports & More** – Lets you access news services.
- **Weekly Highlights** – Displays Sprint weekly highlights.



- **Email & IM** – Allows you to send email and chat.
- **Your Bookmarks** – Allows you to access and manage your bookmarks.
- **Search** – Launches a Web search.
- **Go to URL** – Provides access to other URLs.
- **My Account** – Lets you configure and manage your browser settings.
- **Help** – Displays online help.

## Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

1. Go to the Web page you want to mark.
2. Press and hold **[M]** to open the browser menu.
3. Select **Mark page** and press **[OK]**.
4. Confirm or edit the bookmark name, highlight **Save**, and then press **[OK]** to save the bookmark.

### Note

*Bookmarking a page does not store the page contents, just its address.*

*Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.*

## Accessing a Bookmark

*From the home page:*




1. Select **Your Bookmarks**.
2. Select a bookmark and press **[OK]** (or press the number corresponding to the bookmark you wish to access).

*From any other Web page:*


1. Press and hold **[M]** to open the browser menu.
2. Select **Favorites**.
3. Select a bookmark and press **[OK]** (or press the number corresponding to the bookmark you wish to access).



## Deleting a Bookmark



1. From the home page, select **Your Bookmarks**.
2. Highlight a bookmark and press **Menu**  (right softkey) > **Delete**.
3. Press **Yes**  (left softkey) or press  to confirm the deletion.

**Tip**

To return to the home page from any other Web page, press .

## Going to a Specific Web Site


To go to a particular Web site by entering a URL (Web site address):

1. From the home page, select **Go to URL**.
2. Use your keypad to enter the URL of the Web site you wish to go to and press .
3. Press **Ok**  (right soft key) to go to the Web site.

**Note**


Not all Web sites are viewable on your phone.

## Reloading a Web Page

1. Press and hold  to open the browser menu.
2. Select **Advanced > Reload**. (The browser will reload the current Web page.)

## Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Press and hold  to open the browser menu.
2. Select **Advanced > Restart browser**.



## Downloading Content

---

Your phone arrives with Java applications and games loaded and ready to install. You can download and install more Java applications. For more information on Java Security, see “Setting Privacy for Each Java Application” on page 92.

Check the Downloads menu option on your phone for a catalog of items available for purchase and download.

You can also go to [www.nextel.com](http://www.nextel.com), sign on to your account, and click the **Digital Media** option for a wide selection of available Java applications and downloading instructions.

### **Note**

*Using Java applications may cause your phone to use up more battery power than other uses of your phone.*

## Using Your Phone as a Modem

---

You can use your phone's data connection as a modem for a laptop, handheld device, or desktop computer.

When used as a modem, your phone has these data transfer modes:

- **Circuit data** — used for sending and receiving faxes and for transferring large files.
- **Packet data** — used for small file transfers such as email.




To connect your phone for use as a modem:

1. Pull and rotate the connector cover.
2. Insert a data cable into the phone's charger connector.

**Note**

To use these services, you must subscribe to a Nextel Wireless Web access plan. For more information on setting up your computer and your i365 phone for packet and circuit data calls, go to [www.nextel.com](http://www.nextel.com).

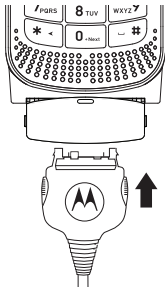

3. Insert the other end of the data cable into the data port of the other device.

## Configuring Windows XP® to Work With Your Phone

After you have connected your phone to your computer, Windows XP must be configured to recognize it as a modem before it can be used.

To install your phone as a modem:

1. Click on **Start**, select **Control Panel**, select **Printers and Other Hardware**, and click on **Phone and Modem Options**.

**Note**

Windows XP allows users to select different views for the Control Panel (Classic or Category). If you have selected Classic View, you will be able to select **Phone and Modem Options** directly without having to select **Printers and Other Hardware** first.

2. From the modem window, select the **Modems** tab and click **Add**.
3. When the Install New Modem Screen appears, put a check in the box for **Don't detect my modem, I will select from a list**. Click **Next**.



4. Under Manufacturer, select *[Standard Modem Types]*. For Model, choose *Standard 19200 bps Modem*, and click **Next** to continue.
5. Select the COM port you want your phone installed on, and click **Next** and then **Finish** to complete the installation.

## Creating a Dial-up Connection

In order to connect to the Internet or a Network using your phone, you must set up a dial-up connection.

1. From the Control Panel select **Network and Internet Connections**, and then select **Network Connections**.
2. Under Network Tasks, select **Create a New Connection**. When the New Connection Wizard appears, click on **Next** to continue.

**Note** To get to New Connections in Classic View, from the Control Panel select **Network Connections**, and click on **New Connection Wizard**.

3. Select **Connect to the Internet** and click **Next**.
4. Select **Set up my connection manually** and click **Next**.

5. From the Internet Connection screen, select **Connect Using a Dial-up Modem** and click **Next**.

### Important

You may be prompted to select the modem you would like to use. Make sure you choose the *Standard 19200 bps modem* you created earlier.

6. Name the dial-up connection and click **Next**.

### Tip

It might be helpful to give this dial-up connection a name that will remind you it is a modem connection for your phone.

7. Enter a number for circuit data dial-up that will connect you to your local ISP provider.

– or –

If you plan on connecting via packet data, enter S = 2, and click **Next**.

### Important

Circuit Data users must be provisioned for Circuit Data by their carrier. Please contact your ISP to obtain a local dial-in number.

Packet Data users must be provisioned for Packet Data by their carrier.



8. Enter the user name and password for your Internet service and check the appropriate fields for connecting to your service provider (if applicable). Click **Next** and then **Finish** to complete the process.

## Connecting to the Internet or a Network for the First Time

Before you use your phone to connect to the Internet or a network for the first time, you must disable LCP Extensions.

1. From **Network Connections**, select the dial-up connection you just created.
2. From the dial-up screen, click **Properties**.
3. From the Properties screen, click on the **Networking** tab, and click on **Settings**.
4. Remove the checkmark from **Enable LCP Extensions**, and click **OK**. You will then be returned to the dial-up screen and can now connect to the Internet or a network.

## Testing the Connection with HyperTerminal

A connection test can be performed using HyperTerminal to determine if your computer and phone are communicating.

1. Open HyperTerminal by clicking **Start** and selecting **Accessories > Communications > HyperTerminal**.
2. When prompted, enter a name and select an icon for the connection you are creating, and click **OK**.
3. Click on **Connect using** and select the COM port your phone is installed on. Click **OK**.
4. Click on **Bits per second**, and select **OK**.
5. To determine if your computer is communicating with your phone, use the following commands:
  - **AT11** – This command will show you the modem model.
  - **AT12** – This command will show you the software version that is on the unit.
  - **AT13** – This command will show you the build date of the unit.



- **AT74** – This command will show you the manufacturer of the unit.
- **ATD plus the dial-in number of the ISP** – This command will show you if the unit can make a Circuit Data call.
- **ATDS=2** – This command will show you if the unit can make a Packet Data call.



*Section 4*

***Safety and Warranty  
Information***





# Important Safety Information

- ◆ *General Precautions (page 200)*
- ◆ *Maintaining Safe Use of and Access to Your Phone (page 201)*
- ◆ *Using Your Phone With a Hearing Aid Device (page 203)*
- ◆ *Caring for the Environment by Recycling (page 205)*
- ◆ *Caring for the Battery (page 205)*
- ◆ *Export Law Assurances (page 207)*
- ◆ *Radio Frequency (RF) Energy (page 208)*
- ◆ *Owner's Record (page 210)*
- ◆ *Patent and Trademark Information (page 211)*
- ◆ *Software Copyright Notice (page 211)*
- ◆ *Privacy and Data Security (page 212)*
- ◆ *Smart Practices While Driving (page 212)*

*This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.*

## General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

### Note

*For the best care of your phone, only authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.*



## Maintaining Safe Use of and Access to Your Phone

---

### *Do Not Rely on Your Phone for Emergency Calls*

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

### *Using Your Phone While Driving*

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Responsible driving practices can be found in “Smart Practices While Driving” on page 212 and/or at the Motorola Web site: [www.motorola.com/callsmart](http://www.motorola.com/callsmart).

**Tip**

*Purchase an optional hands-free accessory at your local Sprint Store, or call Nextel at 1-866-866-7509.*

### *Following Safety Guidelines*

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

### *Using Your Phone Near Other Electronic Devices*

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.



## Operational Precautions

### Note

*Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.*

To assure optimal radio product performance and to be sure that human exposure to RF does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

### Phone Operation

When placing or receiving a phone call, hold your radio product as you would a wireline telephone. Speak directly into the microphone.

### Two-way radio operation

Your radio product has been designed and tested to comply with national and international standards and guidelines regarding human exposure to RF electromagnetic energy, when operated in the two-way mode (at the face, or at the abdomen when using an audio accessory) at usage factors of up to 50% talk/50% listen.

Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the PTT button. To receive calls, release the PTT button. Transmitting 50% of the time or less, is important because this radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).

When using your radio product as a traditional two-way radio, hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.



If you wear a radio product on your body when transmitting, always place the radio product in a Motorola approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola and are not using the radio product in the intended use positions along side the head in the phone mode or in front of the face in the two-way radio mode, or if you hang your device from a lanyard around your neck, keep the device at least 2.5 centimeters (1 inch) from your body when transmitting.

### Approved Accessories

For a list of approved Motorola accessories call 1-800-453-0920, or visit our website at [www.motorola.com/support](http://www.motorola.com/support).

### Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.



### ***Turning Off Your Phone in Dangerous Areas***

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

#### **Note**

*Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.*

### ***Restricting Children's Access to Your Phone***

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your invoice.

## ***Using Your Phone With a Hearing Aid Device***

A number of Nextel phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label with the rating(s) located on the box, and are listed at [www.motorola.com/accessibility](http://www.motorola.com/accessibility).

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying



out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing health care professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.


Nextel further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to

find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Sprint 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund. More information about hearing aid compatibility may be found at:

[www.motorola.com/accessibility](http://www.motorola.com/accessibility), [www.fcc.gov](http://www.fcc.gov), [www.fda.gov](http://www.fda.gov), and [www.accesswireless.org](http://www.accesswireless.org).

## ***Getting the Best Hearing Device Experience With Your Phone***

### ***To further minimize interference:***

- Set the phone's display and keypad backlight settings to ensure the minimum time interval:
  1. Press  > **Settings > Display/Info > Backlight > Backlight or Java Timer.**
  2. Select the minimum time interval setting and press OK.
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.



## Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

### **Disposal of your Mobile Device and Accessories**

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: [www.motorola.com/recycling](http://www.motorola.com/recycling).

### **Disposal of your Mobile Device Packaging and User's Guide**

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

## Caring for the Battery

### **Protecting Your Battery**

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Nextel is not aware of similar problems with Nextel phones resulting from the proper use of batteries and accessories approved by Nextel or the manufacturer of your phone. Use only Nextel-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-866-7509 to order. They're also available at [www.nextel.com](http://www.nextel.com) — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.



- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:  
 Less than one month:  
 -4° F to 140° F (-20° C to 60° C)  
 More than one month:  
 -4° F to 113° F (-20° C to 45° C)

### ***Disposal of Lithium Ion (Li-Ion) Batteries***





 


Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

### ***Batteries and Chargers***

Your battery, charger, or portable radio may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or phone in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or phone in the trash.
	Your phone contains an internal lithium ion battery.
	Do not let your battery, charger, or phone get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.



## Choking Hazards

Your portable radio or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your device and its accessories away from small children.

## Glass Parts

Some parts of your phone may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your phone until the glass is replaced by a qualified service center.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your phone.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

## Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

### ***Repetitive Motion***

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

## Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade



# Radio Frequency (RF) Energy

---

## ***Understanding How Your Phone Operates***

Your phone contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Knowing Radio Frequency Safety***

The design of your phone complies with updated NCRP standards described below.

*In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).*

## ***Body-Worn Operation***

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Motorola supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 2.5 centimeters from your body when transmitting. Use of non-Motorola-approved accessories may violate FCC RF exposure guidelines.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

For more information about RF exposure, visit the FCC Web site at [www.fcc.gov](http://www.fcc.gov).

## ***Portable Radio Product Operation and EME Exposure***

- Your Motorola radio product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):
- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J.
- American National Standards Institute (ANSI) / Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1992.
- Institute of Electrical and Electronics Engineers (IEEE). C95. 1-2005 Edition.<sup>1</sup>
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998.



- Ministry of Health (Canada). Safety Code 6. Limits of Human Exposure to Radio frequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999.
- Australian Communications Authority Radio communications (Electromagnetic Radiation - Human Exposure) Standard 2003.
- ANATEL, Brazil Regulatory Authority, Resolution 303 (July 2, 2002) "Regulation of the limitation of exposure to electrical, magnetic, and electromagnetic fields in the radio frequency range between 9 kHz and 300 GHz." "Attachment to Resolution 303 from July 2, 2002."

## Specific Absorption Rates (SAR) for Wireless Phones

### *Exposure to Radio Waves:*

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by

---

*1. The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006*

independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions reviewed by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for

---

*1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.*



safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.09 W/kg and when tested on the body, as described in this user guide, is 1.28 W/kg during packet data transmission. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)<sup>1</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.ctia.org> or the Canadian Wireless Telecommunications Association (CWTA) Web site: <http://www.cwta.ca>.

## Owner's Record

---

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: i365

Serial No.:

### Online Product Registration:

<http://www.motorola.com/us/productregistration>

Product registration is an important step toward enjoying your new Motorola product. Registration permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage. Please retain your original dated sales receipt, as you may need to provide it for warranty validation in the future.

Thank you for choosing a Motorola product.

---

*1. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.*



## Patent and Trademark Information

---

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. © 2008 Motorola, Inc. All rights reserved.

Microsoft and Microsoft Internet Explorer are registered trademarks of Microsoft Corporation.

T9 is a trademark owned by Tegic Communications.

T9® Text Input Patent and Trademark Information.

This product is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product names or services mentioned in this manual are the property of their respective trademark owners.

## Software Copyright Notice

---

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.



## Privacy and Data Security

---

Motorola understands that privacy and data security are important to everyone. Because some features of your phone may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access:** Keep your phone with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date:** If Motorola or a software/application vendor releases a patch or software fix for your phone which updates the device's security, install it as soon as possible.
- **Erase before recycling:** Delete personal information or data from your phone prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, please contact your local service provider.
- **Understanding AGPS:** In order to comply with emergency caller location requirements of the FCC, certain Motorola phones incorporate Assisted Global Positioning System (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location, for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your phone may impact your privacy or data security, please contact Motorola.

## Smart Practices While Driving

---

### *Drive Safe, Call Smart<sup>SM</sup>*

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact [www.motorola.com/callsmart](http://www.motorola.com/callsmart) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- Get to know your Motorola phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience to your phone with one of the many Motorola Original hands-free accessories available today.
- Position your phone within easy reach. Be able to access your phone without removing your eyes from the road. If you



receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility, driving safely.
- Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- Use your phone to call for help. Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.\*
- Use your phone to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.\*
- Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside

assistance or other special non-emergency wireless number.\*

*\* Wherever wireless phone service is available*



## Manufacturer's Warranty

---

- ♦ *Manufacturer's Warranty (page 214)*
- ♦ *Service and Repairs (page 219)*

*Your phone has been designed to provide you with reliable, worry-free service.* If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit [www.nextel.com](http://www.nextel.com) or call Nextel Customer Service at 1-800-639-6111.

## Motorola Limited Warranty for the United States and Canada

---

### What does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:



## Products and Accessories

<i>Products Covered</i>	<i>Length of Coverage</i>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.

<i>Products Covered</i>	<i>Length of Coverage</i>
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions;



or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to

or use with the Products Accessories or Software is excluded from coverage.

## Software

<i>Products Covered</i>	<i>Length of Coverage</i>
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.

## Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.



## Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

## What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

## How to Obtain Warranty Service or Other Information

<i>USA</i>	<i>Phones</i> 1-800-453-0920
<i>TTY</i>	1-877-483-2840
For Accessories and Software, please call the telephone number designated above for the product with which they are used	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.



## ***What other limitations are there?***

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE

TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

*Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.*

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.



## Service and Repairs

---

If you have questions or need assistance, we're here to help.

Go to [www.motorola.com/support](http://www.motorola.com/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-453-0920 (United States), 1-877-483-2840 (TTY/TDD United States for hearing impaired).



# Index

---

## A

- Accessories 24
  - Charger 24
  - Li-Ion Battery 24
- Activation 3
- Answering Calls 29
- Applications
  - See Java Applications
- Attachments 172
  - See also MMS Messages, Attachments
- Audio Files
  - See Voice Records

## B

- Backlight 60, 70
- Battery 10–13
  - Capacity 10
  - Charging 12
  - Disposal 206

## Installing 10

- Baud rate 64
- Bluetooth 136–146
  - Access Settings, Editing 144
  - Accessing 140
  - Bonds 141
  - Deleting Received Items 146
  - Device Details 143
  - Device Names, Editing 143
  - Devices, Deleting 144
  - Devices, Disconnecting 143
  - Devices, Discovering 140, 143
  - Discoverable Mode 140
  - During an Active Call 142
  - PINs 141
  - Receiving Items 146
  - Renaming Your Phone 139
  - Selecting a Find Me Duration 139
  - Sending Contacts 145
  - Sending Datebook Events 145

- Setting Device Details 143
- Setting your Phone 139
- Storing Received Items 146
- Transfers, Canceling 146
- Transmitters 74
- Turning On or Off 139
- Viewing Received Items 146

## Bookmarks

- Accessing 192
- Creating 192
- Deleting 193

## Browser

- Opening 191
- Restarting 193

## C

- Call Alerts 57
  - Answer 58
  - Deleting 59
  - Queue 58
  - Responding 59
  - Sending 57
  - Viewing 58
- Call Filtering 80



- Call Forwarding 185
  - All Calls 186
  - Missed Calls 187
  - Off 187
- Call Timers 135
- Call Waiting 183
  - Off 184
- Caller ID 183
- Calling
  - Nextel Direct Connect Calls 36
  - Nextel Direct Talk Calls 53
  - Talkgroup Calls 51, 53
  - Types of Calls 28
  - Using the Member ID 37
- Calls
  - Answering Automatically 61
  - Answering with Any Key 61
  - Direct Connect 62
  - From Contacts 37
  - From Memo 130
  - From MMS Messages 175
  - From Recent Calls 34, 38

- Group Connect 62
- International 188
- Redialing 61
- Remote Direct Connect
  - Button 25
- Talkgroup 62
- Voice Name 35, 38
- Circuit Data 194
- Clock 61
- Clock Display 71
- Contact Information
  - Receiving 49, 95
  - Sending 47
- Contacts 37, 99–107
  - Adding an Entry 99
  - Addressing MMS Messages 165
  - Capacity 107
  - Creating 100
  - Creating MMS Messages 164
  - Deleting 105
  - Editing Entries 100, 103

- Searching 103
- Showing All Entries 104
- Showing Only Direct
  - Connect 104
- Storing Fast 103
- Storing From Memo 130
- Storing from MMS Messages 176
- Storing from Standby Mode 103
- Voice Name 102

## D

- Datebook
  - Creating Events 110
  - Customizing Datebook
    - Setup 115
  - Deleting Events 113
  - Editing Events 112
  - Making Calls From Datebook and Datebook Reminders 114
  - Receiving Reminders 113



- Using Your Phone's
  - Datebook 108
- DC/GC Options 62
  - See also Direct Connect Calls, Group Connect Calls, and Call Alerts
- Dialing Codes
  - Non-Emergency Numbers 188
  - Telecommunications Relay Service 188
- Digital Rights Management, see DRM
- Direct Connect
  - One Touch, Setting 74
- Direct Connect Number and Groups 41
  - Viewing 19
- Direct Connect Numbers 36
- Direct Send
  - See Pictures, Sending Groups 50

- Direct Talk 53
  - Code 54
  - Private Only 55
  - Receiving All Calls On Channel 56
  - Setting Up 54
- Display
  - Backlight 60
- Display Screen 15
- Downloading Content 194
- Drafts 158, 169
  - See also MMS Messages, Drafts
  - Icons 170
- DRM 120
  - Count-Based Usage 120
  - Definition 120
  - Deleting Items 69, 121
  - Expired Items 121
  - Managing Items 120
  - Renewing Items 121
  - Renewing License 121
  - Time-Based Usage 120

- Viewing License Information 120
- DTMF Dialing 61, 140

**E**

- Email 101, 194
- Emergency Numbers 30
- End-of-Call Options 32
- Entering Text 20–23
  - Alpha Mode 22
  - Numbers 23
  - Quick Notes 23
  - Selecting Mode 20
  - Symbols 23
  - Word English Text Input 21

**F**

- Faxes
  - Receiving 194
  - Sending 194

**G**

- Games
  - See also Java Applications 194



- GPS Enabled 122
    - Almanac Data 126
    - Best Results 125
    - Emergency Calls 123
    - Map Software 127
    - Privacy Options 89
    - Security 90
    - Viewing Location 124
  - GPS PIN 64, 90
  - Group Connect
    - Adding Group Members 40
    - Answering Calls 40
    - Creating Groups 40
    - Making Calls 39
    - Settings 62
    - Starting with Direct Connect
      - Numbers 41
  - Groups
    - Deleting 42
    - Groups vs. Talkgroups 51
    - Icons 44
    - Removing Members 42
    - Sending with Direct Send 50
  - Settings 62
  - Storing Faster 42
- H**
- Headset 76
  - Hearing Aid Compatibility 203
- I**
- Icons
    - Contacts 100
    - Drafts 170
    - Groups 44
    - Inbox 174
    - Sent Items 171
    - Status Information 15
  - Inbox 158, 174
    - Icons 174
  - In-Call Options 31
  - International Numbers 188
- J**
- Java Applications
    - Deleting 118
    - Downloading 117
    - Ending Applications 117
- K**
- Key Functions 7
  - Keypad
    - Locking 63, 87
- L**
- Language 61, 84
  - Lock Code
    - Changing 87
  - Locking Your Phone 87
- M**
- Making Calls 29
  - Memo
    - Calling From 130
    - Creating 129
    - Editing 130
- G**
- Games 194
  - Installing Applications 116
  - Memory 118, 119, 121, 133
  - Resuming Applications 117
  - Running Applications 116
  - Suspending Applications
    - 116



- Storing to Contacts 130
- Viewing 129
- Memory
  - Java Applications 118, 119, 121, 133
  - MMS Messages 149, 181
  - Pictures 134
  - Ring Tones 69
  - Voice Records 133
- Menu *ii*
  - Navigation 17
  - Selecting 18
- Menu Style 71
- Message Center 148
  - MMS Messages 158, 173
  - Text Messaging (SMS) 182
  - Voicemail 150
- Messages
  - Notifications 149
  - Notifications, Dismissing 149
- Messaging
  - Deleting Old Messages 72
  - Notification 72

- Signature 73
- MMS Messages
  - Attachments 172, 177
  - Calls From 175
  - Creating 159
  - Deleting 171, 174, 180, 182
  - Deleting Slide Shows 178
  - Drafts 169
  - Embedded Objects 172
  - Forwarding 170, 175
  - Going to Web Site 177
  - Inbox 174
  - Locking 175
  - Memory 149, 181
  - Message Center 173
  - Quick Notes 166
  - Receiving 172
  - Saving Slide Shows 178
  - Sending 159, 170, 171
  - Sent Items 170
  - Setting Up 178
  - Slide Shows 173
  - Storing to Contacts 176

- Modem
  - See Phone as Modem
- Multimedia Messages
  - See MMS Messages
- My Info
  - Editing 20
  - Receiving 49, 94
  - Sending 47

## **N**

- Nextel Direct Send
  - Contact Information 47
  - My Info 47
- Nextel Direct Talk
  - See Direct Talk
- Nextel Service
  - Account Passwords 4
  - Activation 3
  - Operator Services 5
- Non-Emergency Numbers 188
- Notepad 129

## **O**

- One Touch Direct Connect 74



Owner's Record 210

## P

Packet Data 194

Passwords 64

Voicemail 151

Pauses 33

Storing 102

Phone

Active Line 61

Locking 63

Your Numbers 19

Phone (illus.) 6

Phone as Modem 194–198

Phone Number

Finding 33

Saving 33

With Pauses 33

Phone Settings 60–84

Call Answer Mode 84

Display Settings 70–72

Language 84

Messaging Settings 72–73

Shortcuts 81

Sound Settings 65–70

Pictures

Deleting from Messages 177

Inserting In Messages 167

Memory 134

Receiving 46

Saving from Messages 177

Sending 44

Viewing 133

Prepend Dialing 84

Preset Messages 73

Profiles 76

Call Filtering 80

Changing Settings 77

Creating 79

Deleting 79

Editing 79

Switching 77

Temporary 78

Viewing 77

## Q

Quick Notes 166

See also MMS Messages,  
Quick Notes

## R

Radio Frequency 208

Recent Calls 93–98

Addressing MMS Messages  
165

Call Alerts 94

Calling From 34

Calling from 38

Contact Information 95

Creating MMS Messages  
164

Deleting Recent Calls List 98

Display Time 64

Making a Call 97

My Info 94

Prepending a Number 98

Saving a Number 97

Redialing 61

Resetting Your Phone 88



## *Ring Tones*

- Attaching to Messages* 168
- Deleting* 69
- Deleting from Messages* 177
- Downloading* 68
- Inserting in Messages* 167
- Memory* 69
- Setting in Contacts* 101
- Vibrate* 68
- Viewing Assigned* 68

## *Ringer Types* 65

## **S**

### *Safety*

- Radio Frequency* 208
- Safety Information* 200–213
- Safety Tips* 201
- Security* 63, 85–87
- Sent Items* 158, 170
  - Icons* 171
  - See also* MMS Messages, Sent Items

## *Settings* 60

- Resetting* 64
- Shortcuts*
  - Creating* 81
  - Deleting* 83
  - Editing* 82
  - Using* 82
- Silence All* 67
- SIM Card*
  - Removing and Inserting* 9
  - Security* 85
- SIM PIN* 63, 85
- Slide Shows*
  - See* MMS Messages, Slide Shows
- Speed Dial* 102
  - Assigning Numbers* 106
  - Making a Call* 35
- Standby Mode*
  - Creating MMS Messages* 164
  - Storing Contacts* 103

## **T**

- Talkgroups* 51
  - Join* 52
  - Settings* 62
- TDD/TTY Devices* 188
- Telecommunications Relay Service* 188
- Text Entry*
  - Database* 21
  - Mode* 20
- Text Messaging*
  - See* MMS Messages
- Three-Way Calling* 185
- Transmitters*
  - Turning On and Off* 74
- TTY Devices* 188
- Turning Your Phone On and Off* 14

## **U**

- Unlocking Your Phone* 87

## **V**

- Vibrate All* 66



Voice Name 35, 38

    Creating 102

Voice Records

    Attaching 169

    Creating 131

    Deleting 132

    Deleting from Messages 177

    Inserting in Messages 167

    Labelling 132

    Locking 132

    Memory 133

    Playing 131

    Saving from Messages 177

Voicemail

    Changing Password 151

    Greetings 152

    Group Lists 157

    Message Forwarding 157

    Playing Messages 151

    Retrieving 150

    Setting Up 3, 151

    Spanish 157

Volume, Setting 63

## **W**

Waits

    Storing 102

Warranty 214–219

Web 191–193

    Bookmarks 192

    Go to Web Sites 193

    Launching 191

    Reloading a Web Page 193

    Restarting 193

Wireless Data Services 191

    Downloads 194

Word English Text Input 21